


## 1 Outlook / Structure of SA58 Carbine

Always set the selector switch to the safe position when you are not firing or during storage

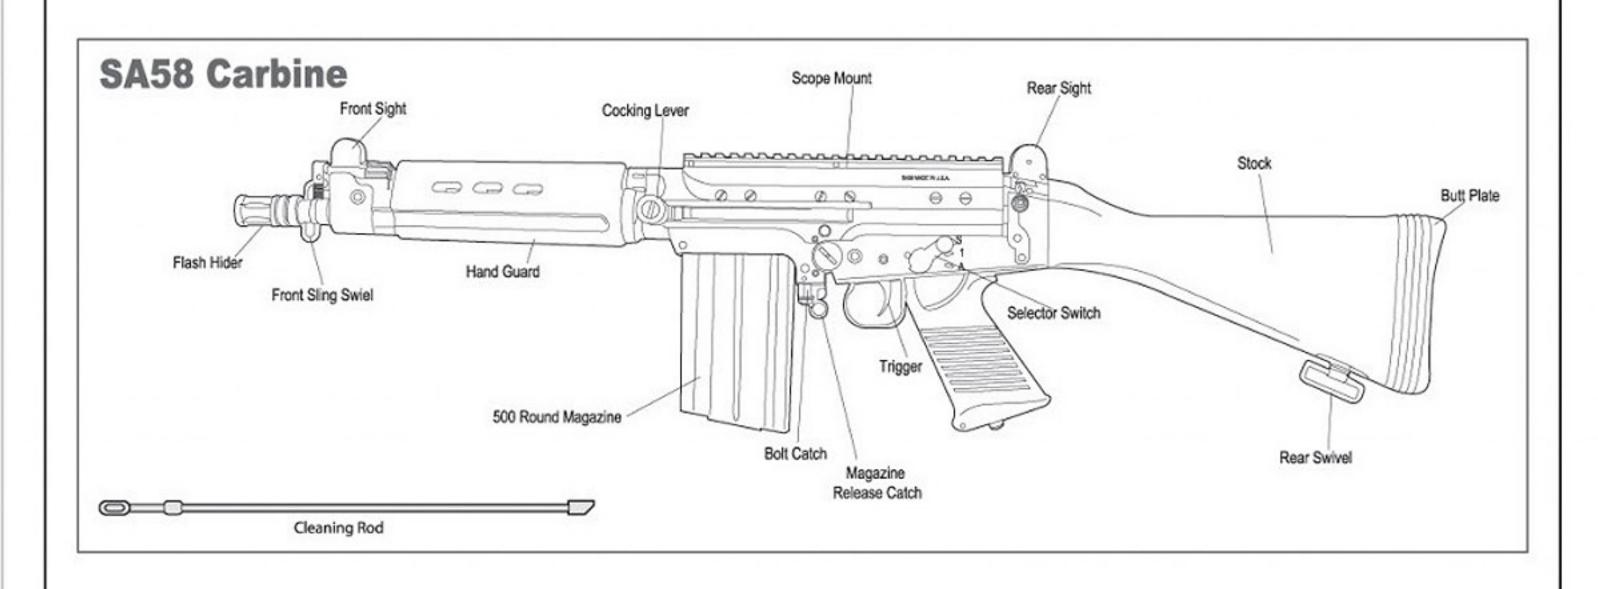


# 2 Specification


Data of Automatic Electric Gun	
Name	SA58 Carbine
Weight	2.876kg
Barrel Length	335mm
Barrel Caliber	6.08mm
Pellet Capacity	500
Pellet	6mm BB
Initial Pellet Speed	85-105m/sec
Battery Type	Large Type (8.4V)

# 3 Operation


1 How to use safety lock

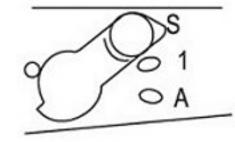

S: Safety Lock

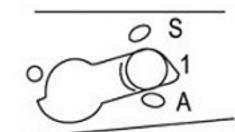

E: Semi Auto

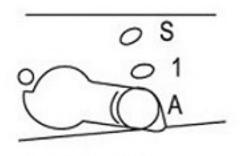

F: Full Auto



## Magazine Attachment / Detachment procedure

High precision is required for the operation of this magazine. Avoid invasion by dust and dirt into the magazine to prevent malfunctions.

Action against problem Failure in pellet feeding may occasionally occur during full auto operation. In this case, disconnect the magazine, give a slight shock or poke BB pellets using a stick and then set the magazine again.



About 30 pellets remain in the duct after operation. Be careful with the pellets which will fire out if you hold the gun up-side-down and pull the trigger.

### Ensure Smooth Pellet Feeding


- · Occasionally give slight shocks to the gun or shake vertically for ensuring smooth pellet feeding.
- Slightly turn the gear after every 50 to 60 pellets for ensuring smooth pellet feeding.

- Press the magazine catch to detach the magazine
- Open the top hatch and insert BB pellets. About 330 pellets can be loaded. (Avoid forcing BB pellets into the magazine.)

Close the hatch

Hold the Magazine with BB pellet entrance facing upward. Turn the gear at the bottom all the way until the click-click sounds change. (If only a small number of BB pellets are inserted, the gear merely makes blank turning.)

Check the BB pellets whether they are lifted up to the exit, and then connect then magazine to the gun.

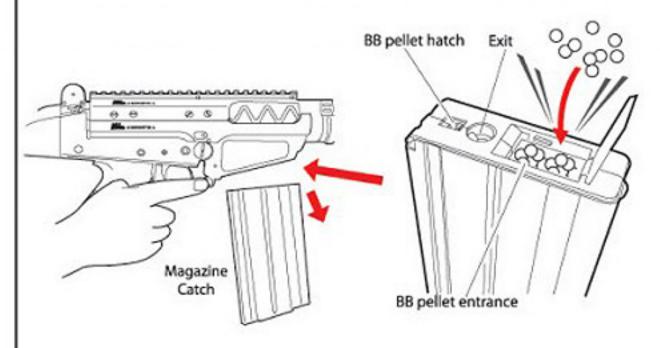





· Remove pellets remaining in the duct by reversing the magazine and using the release lever as shown. This ensures smooth operation next time.



pellet stopper

Turn the gear all The gear will not be damaged the way until the even if you turn it sound changes. excessively.

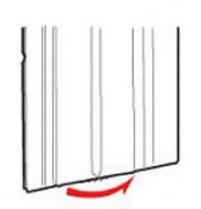

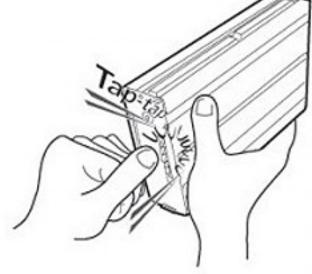


If pellet feeding is frequently in fault, remove all pellets from the magazine and spray silicone oil for 1 to 2 sec. Note that the hop-up operation may become unstable for a while after using silicone oil.

- 6 How to insert battery
- Lower the butt plate and open


Pull out the connector


Set the battery after charging

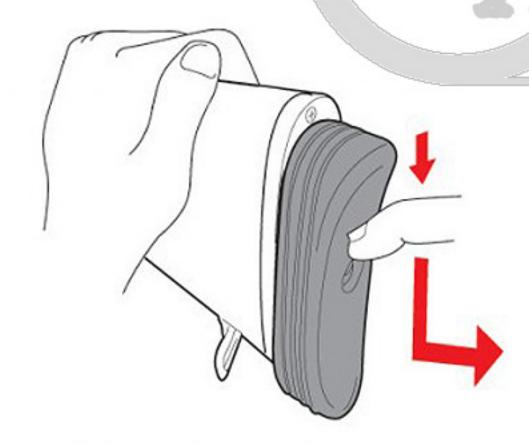

Insert the battery into the stock and connect the connectors

Close the bult plate

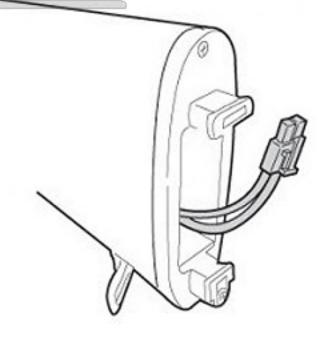


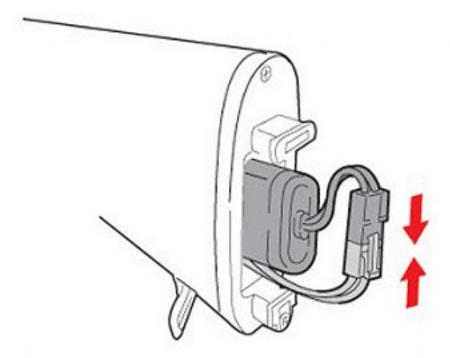



· Be careful with your fingers

### **CLASSIC ARMY AUTOMATIC ELECTRIC GUN SERIES**

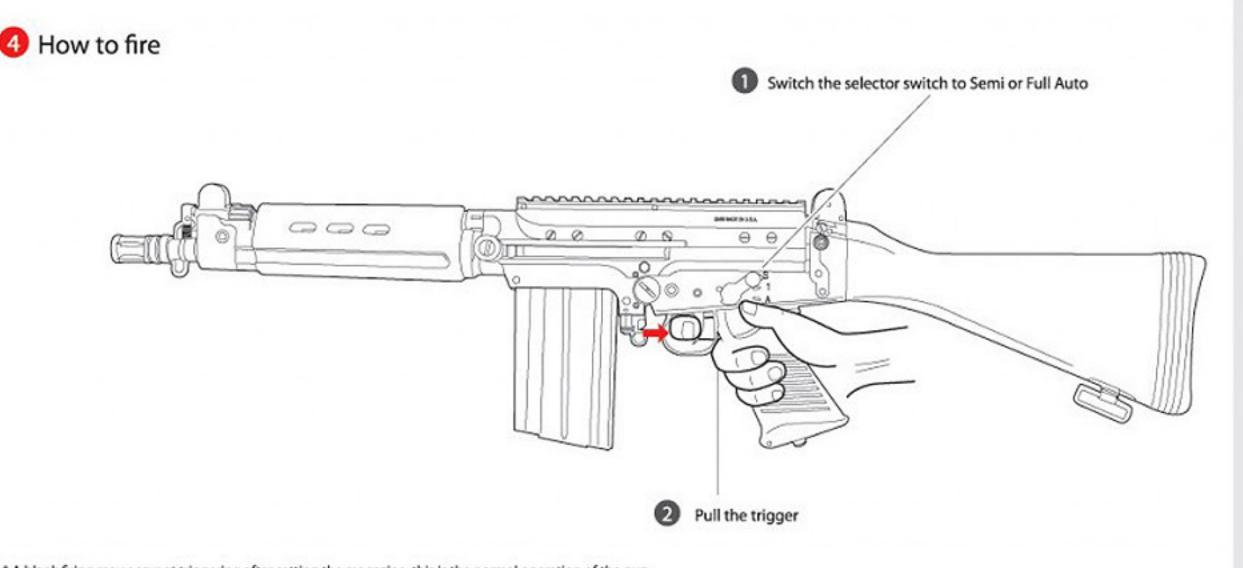

( CAUTION

 There are possible cases that no firing occurs after pulling the trigger in the semi auto mode. In case, do not pull the trigger furiously. Fire 5 to 10 pellets in the full auto mode and then return to the semi auto mode.



 Smell may be generated from the motor for a while when a new air gun is operated, this is the normal operation of the gun.



 The hop up operation may be unstable for 200 to 300 pellets after using silicone oil, this is the normal operation of the gun.


### \* A blank firing may occur at triggering after setting the magazine, this is the normal operation of the gun.

### Cautions on Motor and Battery

- Change the battery if the firing cycle becomes slow.
- Give the air gun a rest for 5 to 10 minutes after firing about 500 pellets, in order to ensure high durability of the motor and battery.


#### When pellets are clogged

 If pellets are clogged, remove them and apply a few drops of silicone oil into chamber from the magazine entrance as shown or spray silicone oil for 0.5 to 1 sec to obtain smooth continuous firing. (Never use CRC-556 or other mineral oil)

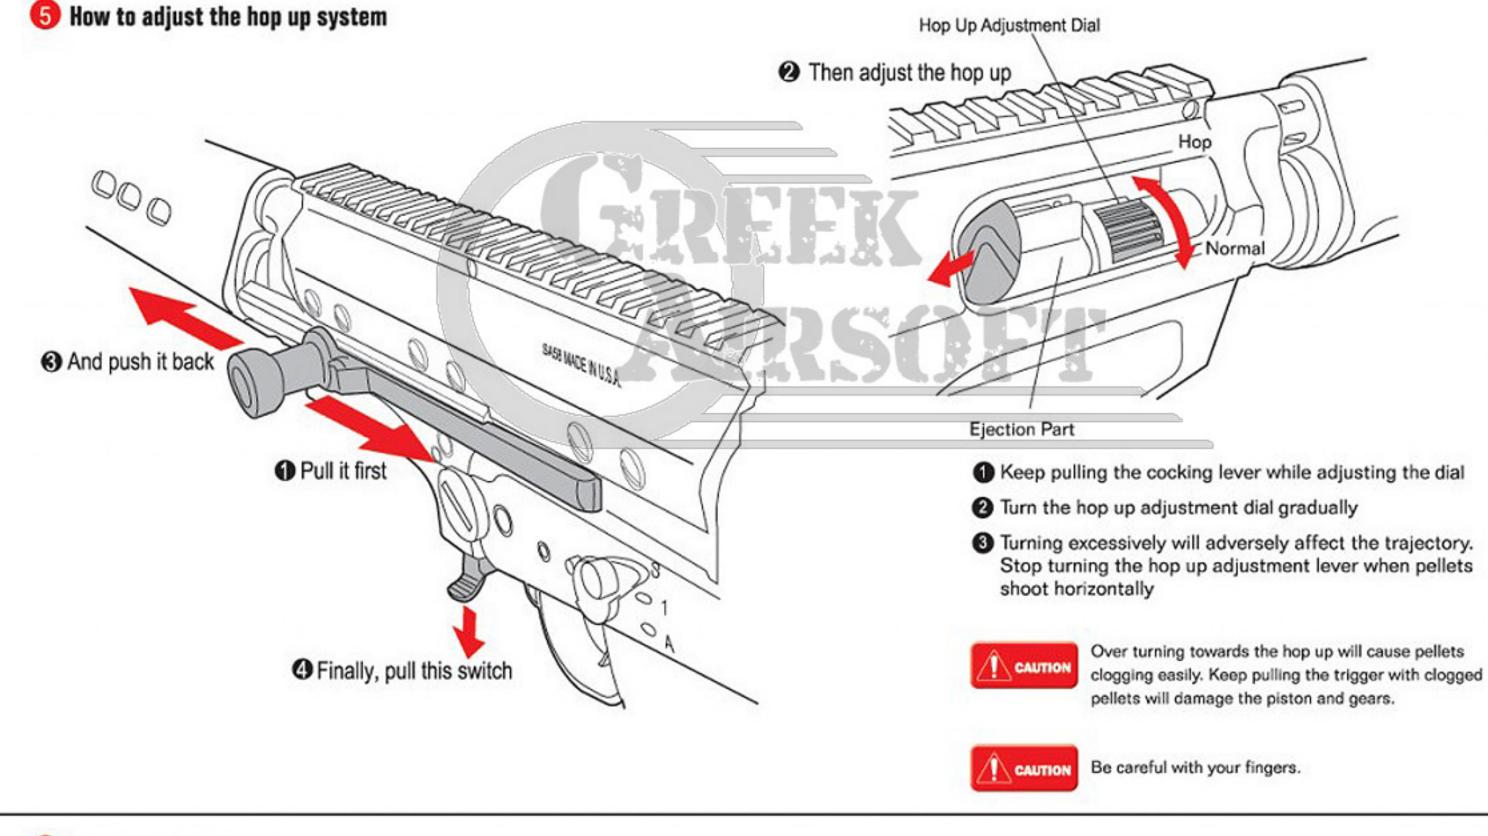


## Rear Sight Adjustment


Adjust the sight forward and backward

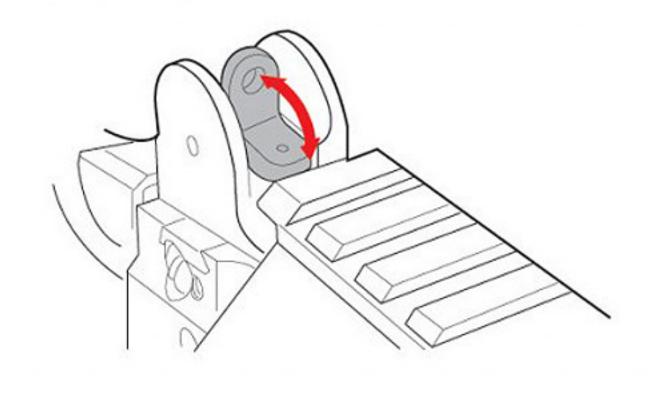

2 Turning clockwise: Raise the hitting point

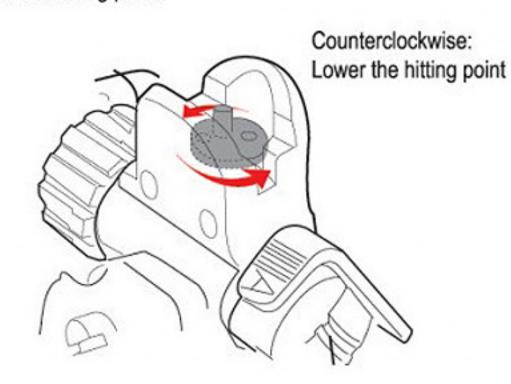



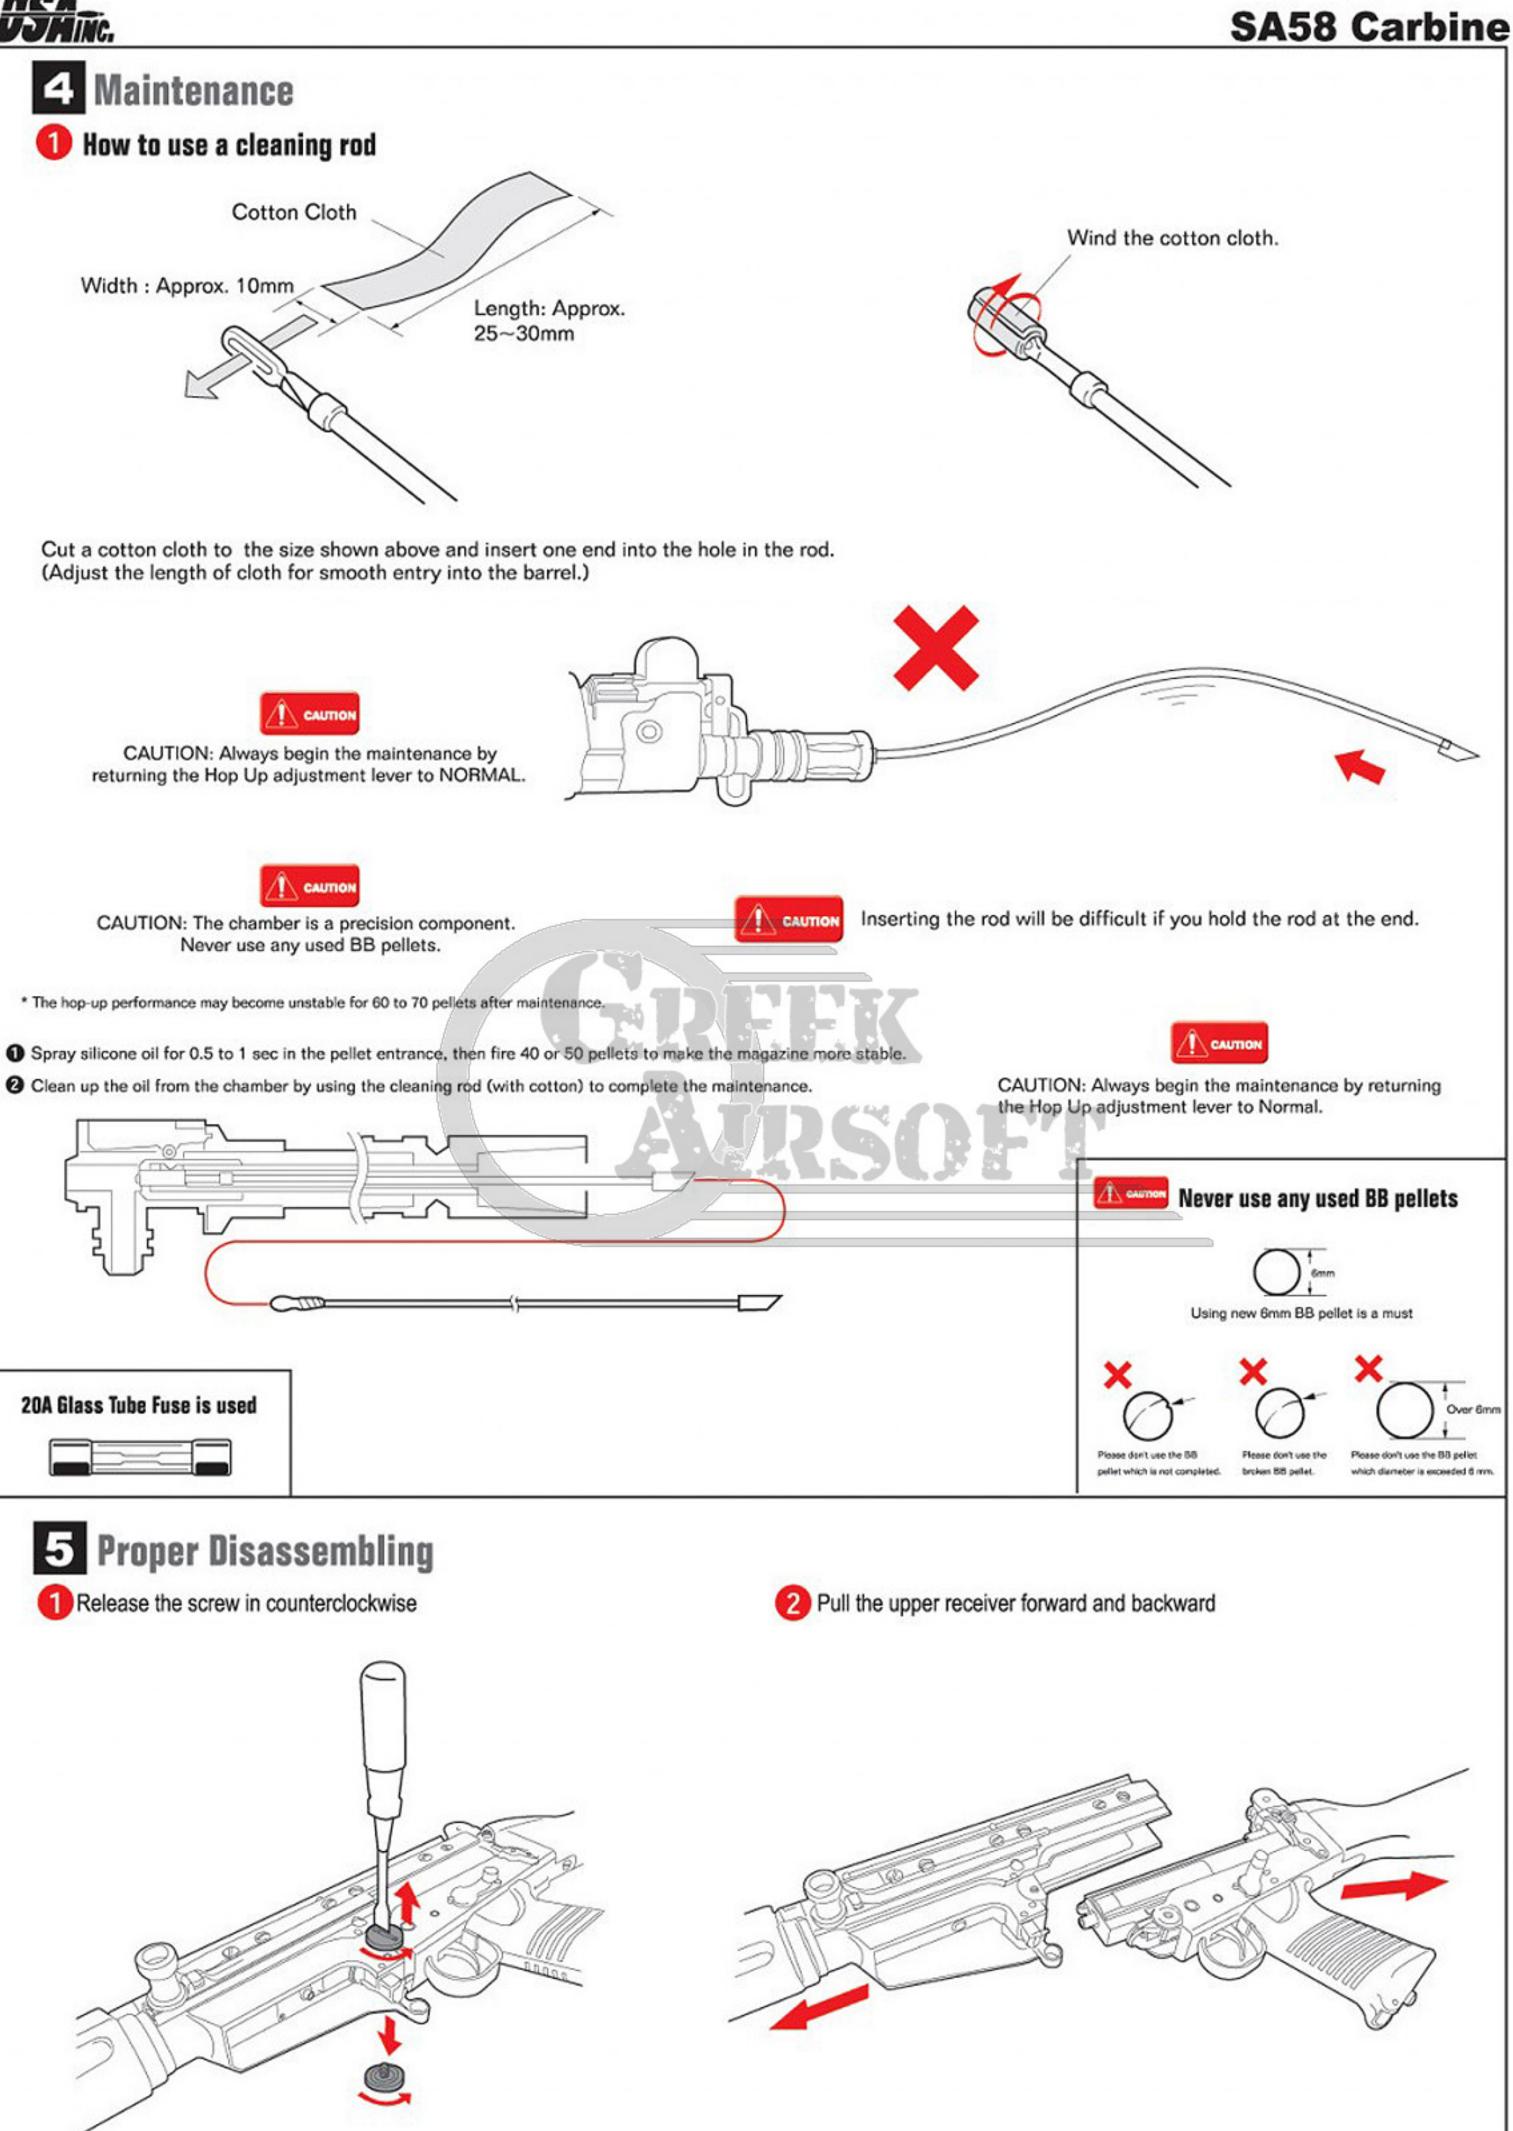



## 6 NWARNING


















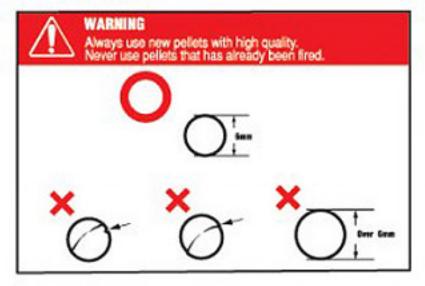

In no event shall Classic Army or any of our partners be liable for any direct or indirect, special, incidental, or consequential damages in connection with the use of our products.

## 7

# For complete product information, dealer locations and technical support, please visit the website of Classic Army Sole Distributors .

## Denmark, Sweden, Norway & Finland, France, Germany, Austria, United Kingdom, Poland, Baltic countries, Belgium, Luxembourg, the Czech Republic and Slovakia

Co. Name: ActionSportGames A/S

Add.: Bakkegaardsvel 304, DK-3050 Humlebaek, Denmark

Tel: (45) 89 28 18 88 Fax: (45) 49 19 31 60

Email: sales@actionsportgames.com

Website: http://www.actionsportgames.com/

## Italy, San Marino Republic, Città del Vaticano, Spain (includes Andorra and Gibraltar) Portugal and Switzerland

Co. Name: VI.SE.LE Italiana S.r.I.

Add.: Via Treves n.17, 20090 Vimodrone, MI Italy

Tel: (+39)02 25459610 Fax: (+39)02 25118560

Email: visele@classicarmyitalia.com Website: http://www.classicarmyitalia.com/

#### The United States of America

Co. Name: Spartan Imports, Inc.

Add.: 213 Lawrence Avenue, S. San Francisco, California, USA 94080

Tel: (1) 650 589 5501 Fax: (1) 650 589 5552

Email: info@spartanimports.com Website: http://www.spartanimports.com/

#### Taiwan

Co. Name: F-Link Int'l Enterprise Co. Ltd.

Add.: 3 Lane 62, Jianguo 1st Rd., Lingya District, Kaohsiung City 802, Taiwan, R.O.C.

Tel: (886) 7-710 0198
Fax: (886) 7-710 0398
Email: kssa.kssa@msa.hinet.net
Website: http://www.soloman.com.tw/

### Russian Federation and Belorussia

Co. Name: Uragan Limited.

Add.: Novorogozhskaya str. 12/3 Moscow 107954 Russia

Tel: (7) 495 323 5366 Fax: (7) 495 323 5366 Email: toybike@yandex.ru

Website: http://www.classicarmy.ru/



