








What's in the Package

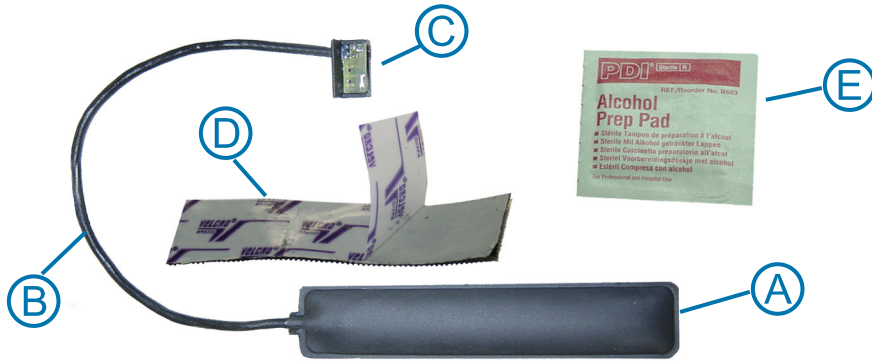

- (A) ACTIVATION SWITCH PAD
- (B) ACTIVATION SWITCH CORD*
- (C) SLIDE SWITCH HOUSING
- (D) VELCRO PAD
- (E) ALCOHOL WIPE

*Activation Switch Cord comes in 6in. and 10in. lengths

Installing the Uni-Max™ Momentary Activation Switch (MAS)

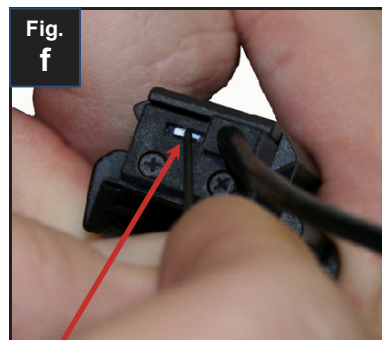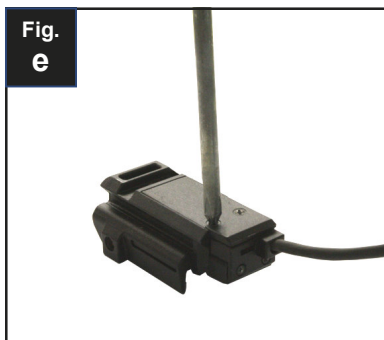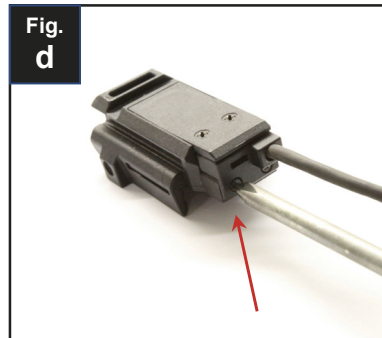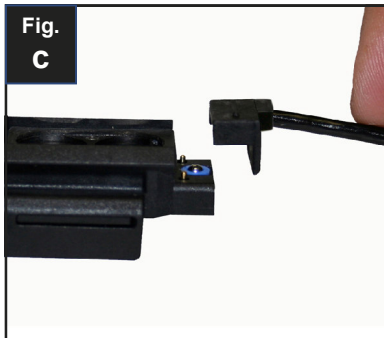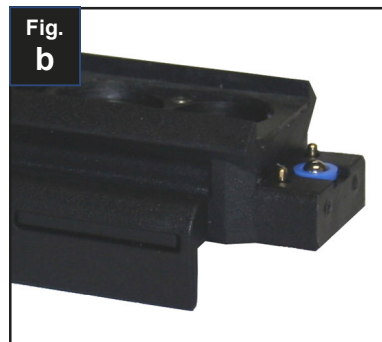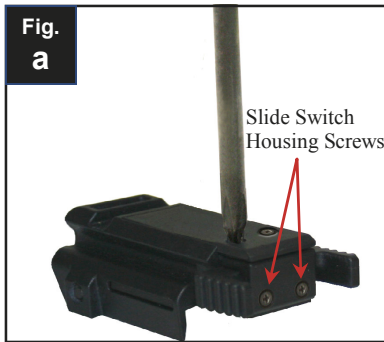

Slide Switch Activation
Toward cord is active. Away from cord is inactive (switch shown here in the inactive position).

MANUFACTURED BY: LASERMAX, INC.
3495 WINTON PLACE, ROCHESTER, NY 14623 USA

- 1 Remove any ammunition from your firearm and clear the action. Make sure your gun is unloaded.
- 2 Check again.
The following instructions are applicable to both the single and double screw versions of the Uni-Max™ battery cover.
- 3 Remove battery cover screws with screwdriver and remove battery cover (See Fig. a).
- 4 Remove two(2) Slide Switch Housing (C) screws located on rear of Uni-Max™ (See Fig. a) with screwdriver and gently remove activation switch to expose switch contact pins (See Fig. b). ***Note:** Store activation switch and cover for future use.
- 5 Align Slide Switch Housing (C) with back of Uni-Max™ unit (See Fig. c) and replace Slide Switch Housing (C) cover screws removed in previous step (See Fig. d), making sure to tighten slowly until you feel resistance. ***Do Not Over Tighten.**
- 6 Replace battery cover and battery cover screws (See Fig. e).
- 7 Attach the Uni-Max™ unit onto the rail of firearm (See Uni-Max™ instruction manual). Determine the location of the Activation Switch Pad (A) and prepare area using the alcohol wipe (E) to clean designated area for mounting Activation Switch Pad (A).
- 8 Separate loop (soft) side of Velcro Pad (D) and remove peel strip from back. Adhere Velcro Pad (D) on cleaned area of firearm and let set for 8 hours or overnight (cure time) before use.
- 9 Once applied, use the small white slide switch located on Slide Switch Housing (C) to control Activation Switch Pad (A) operation (See Fig. f).
- 10 When slide switch is in active position, turn on Uni-Max™ by squeezing and holding the Activation Switch Pad (A). Once Activation Switch Pad (A) is released the laser will turn off.