

SEMI-AUTOMATIC PISTOLS



ZPAP85 | 5.56X45MM (.223)



ZPAP92 | 7.62X39MM

OWNER'S MANUAL AND SAFETY INSTRUCTIONS



ZASTAVA ARMS name on the weapon that you now own represents quality, reliability and gunsmith tradition since 1853. Your weapon was made in accordance with strict requirements and standards. Only materials of the highest quality have been used for this type of products and tested by our quality control. This owner's manual is designed to assist you in learning how to use and care for your Zastava Arms ® firearm properly. We want you to enjoy and practice safe shooting with your ZASTAVA weapon. You may be an experienced shooter, already familiar with the procedures in this Instruction manual, but we urge you to read this entire Instruction manual carefully. You must follow the safety instructions for your safety and the safety of others. Digital copy of this manual can be obtained from Zastava Arms USA website.

Thank you for choosing our product!



IMPORTANT! READ THIS MANUAL BEORE USING FIREARM!



PLEASE READ CAREFULLY FOLLOWING PRECAUTIONS BEFORE TAKING YOUR FIREARM OUT OF ITS PACKAGE!

SAFE FIREARM HANDLING OF IS YOUR SOLE RESPONSIBILITY AT ALL TIMES!

WARNING: ALWAYS KEEP AND CARRY YOUR FIREARM EMPTY TO AVOID ACCIDENTAL DISCHARGE!

WARNING: USE OF IMPROPER AMMUNITION CAN DESTROY YOUR FIREARMS

FOLLOW THE LAW! OBEY ALL LOCAL STATE AND FEDERAL LAWS REGARDING TRANSPORTING, STORAGE AND OPERATING YOUR FIREARM!

DO NOT USE YOUR FIREARM BEFORE YOU GET FAMILIAR WITH USING THIS FIREARM, SEEK PROPER TRAINING BEFORE USING IT FIRST!

WARNING: IF CARELESSLY OR IMPROPERLY HANDLED, UNINTENTIONAL FIREARM DISCHARGE COULD POTENTIALLY CAUSE INJURY, DEATH, OR DAMAGE TO PROPERTY.

WARNING: CLEANING AND DISCHARGING FIREARMS IN POORLY VENTILATED ARES MAY RESULT IN EXPOSURE TO LEAD!

DO NOT ALTER YOUR FIREARM!

This firearm was assembled and tested to function properly in its original condition.

Altering of your firearm voids the manufacturer's warranty.

THIS MANUAL SHOULD ALWAYS ACCOMPANY THIS FIREARM, AND BE TRANSFERED WITH IT UPON CHANGE OF OWNERSHIP!

STATE-BY-STATE WARNINGS

firearms sold in that state. Zastava Arms sells its products in compliance with applicable laws and regulations. Because our products may be sold in these states, we include the following:

CALIFORNIA:

"Children are attracted to and can operate firearms that can cause severe injuries or death. Prevent child access by always keeping guns locked away and unloaded when not in use. If you keep a loaded firearm where a child obtains and improperly uses it, you may be fined or sent to prison."

ADVERTENCIA:

""A los niños atraen las armas de fuego y las pueden hac-er funcionar. Ellos pueden causarse lesions graves y la muerte. Evite que los niños tengan accesso a las armas de fuego guardándolas siepre con llave y descargadas cuando no las esté utilizando. Si usted tiene una arma de fuego cargada en un lugar en que un niño tiene accesso a ella y la usa indebidamente, le pueden dar una multa o enviarló a la carcel."

CONNECTICUT:

"UNLAWFUL STORAGE OF A LOADED FIREARM MAY RESULT IN IMPRISONMENT OR FINE!"

FLORIDA:

"IT IS UNLAWFUL. AND PUNISHABLE BY IMPRISON-MENT AND FINE, FOR ANY ADULT TO STORE OR LEAVE Certain US states require by law their own specified warn- A FIREARM IN ANY PLACE WITHIN THE REACH OR EASY ing notices, in larger than normal type be conspicuously in- ACCESS OF A MINOR UNDER 18 YEARS OF AGE OR TO cluded by the manufacturer, distributor, or retail dealer with KNOWINGLY SELL OR OTHERWISE TRANSFER OWN-FRSHIP OR POSSESSION OF A FIREARM TO A MINOR OR A PERSON OF UNSOUND MIND."

MAINF:

"FNDANGERING THE WELFARE OF A CHILD IS A CRIME. IF YOU LEAVE A FIREARM AND AMMUNITION WITHIN FASY ACCESS OF A CHILD. YOU MAY BE SUBJECT TO FINE. IM-PRISONMENT OR BOTH. KEEP FIREARMS AND AMMUNITION SEPARATE, KEEP FIREARMS AND AMMUNITION LOCKED UP. USF TRIGGER LOCKS."

MARYI AND:

"WARNING: Children can operate firearms which may cause death or serious injury. It is a crime to store or leave a loaded firearm in any location where an individual knew or should have known that an unsupervised minor would gain access to the firearm. Store your firearm responsibly!"

MASSACHUSETTS:

This firearm is not equipped with a device that fully blocks use by unauthorized users. More than 200,000 firearms like this one are stolen from their owners every year in the United States. In addition, there are more than a thousand suicides each year by younger children and teenagers who get access to firearms. Hundreds more die from accidental discharge. It is likely that many more children sustain serious wounds, or inflict such wounds accidentally on others.

In order to limit the chance of such misuse, it is imperative that you keep this weapon locked in a secure place and take other steps necessary to limit the possibility of theft or accident. Failure to take reasonable preventative steps may result in innocent lives being lost, and in some circumstances may result in your liability for these deaths."

"IT IS UNLAWFUL TO STORE OR KEEP A FIREARM, RIFLE, SHOTGUN OR MACHINE GUN IN ANY PLACE UNLESS THAT WEAPON IS EQUIPPED WITH A TAMPER RESISTANT SAFETY DEVICE OR IS STORED OR KEPT IN A SECURELY LOCKED CONTAINER. " - FROM THE MASSACHUSETTS ATTORNEY GENERAL"

NEW JERSEY:

"IT IS A CRIMINAL OFFENSE TO LEAVE A LOADED FIRE-ARM WITHIN EASY ACCESS OF A MINOR."

NEW YORK CITY. NY:

"THE USE OF A LOCKING DEVICE OR SAFETY LOCK IS ON-LY ONE ASPECT OF RESPONSIBLE FIREARMS STORAGE. FOR INCREASED SAFETY, FIREARMS SHOULD BE STORED UNLOADED AND LOCKED IN A LOCATION THAT IS BOTH SEP-ARATE FROM THEIR AMMUNITION AND INACCESSIBLE TO CHILDREN AND OTHER UNAUTHORIZED PERSONS."

NORTH CAROLINA:

"Any person who resides in the same premises as a minor, owns or possesses a firearm, and stores or leaves the firearm (i) in a condition that the firearm can be discharged and (ii) in a manner that the person knew or should have known that an unsupervised minor would be able to gain access

to the firearm, is guilty of a Class 1 misdemeanor if a minor gains access to the firearm without the lawful permission of the minor's parents or a person having charge of the minor and the minor:

- (1) Possesses it in violation of G.S. 14-269.2(b)
- (2) Exhibits it in a public place in a careless, angry, or threatening manner; (
- 3) Causes personal injury or death with it not in self defense; or
- (4) Uses it in the commission of a crime.!"

TEXAS:

"IT IS UNLAWFUL TO STORE, TRANSPORT, OR ABANDON AN UNSECURED FIREARM IN A PLACE WHERE CHILDREN ARE LIKELY TO BE AND CAN OBTAIN ACCESS TO THE FIREARM."

WISCONSIN:

"IF YOU LEAVE A LOADED FIREARM WITHIN THE REACH OR EASY ACCESS OF A CHILD YOU MAY BE FINED OR IMPRISONED OR BOTH IF THE CHILD IMPROPERLY DISCHARGES, POSSESSES, OR EXHIBITS THE FIREARM."

Please check with your licensed retailer, state police, or local police for additional warnings, which may be required by local law or regulation. Such regulations change constantly, and local authorities are in the best position to advise you on such legal matters.

SECTION 1 SAFETY

SAFETY GUIDES & PRECAUTIONS

- 1. ALWAYS HANDLE YOUR FIREARM AS IF IT WERE LOADED so that you never accidentally discharge it when you think it is unloaded.
- 2. **NEVER POINT YOUR FIREARM AT ANY UNDESIRED TARGET**, loaded or unloaded, as accidental discharge causing injury, death or damage to property might occur.
- 3. NEVER SQUEEZE THE TRIGGER OR PUT YOUR FINGER IN THE TRIGGER GUARD UNTIL YOU ARE AIMING AT A TARGET AND READY TO SHOOT. This will prevent you from firing the firearm when it is pointing in an unsafe direction.
- 4. ALWAYS KEEP AND CARRY YOUR WEAPON EMPTY AND BLOCKED, EXCEPT WHEN YOU INTEND TO SHOOT, SO THAT IT CANNOT BE FIRED WHEN YOU DO NOT MEAN IT.
- 5. NEVER DRINK ALCOHOLIC BEVERAGES OR TAKE DRUGS BEFORE OR DURING SHOOTING, as your vision and judgment could be seriously impaired making your weapon handling unsafe.
- 6. NEVER INDULGE IN HORSEPLAY WHILE HOLDING YOUR WEAPON AS IT MAY BE ACCIDENTALLY DISCHARGED.
- 7. **NEVER** LEAVE YOUR WEAPON READY TO FIRE, SINCE THIS POSITION IS EXTREMELY DANGEROUS BECAUSE OF RISK OF ACCIDENTAL DISCHARGE CAUSING SERIOUS INJURY, DEATH OR DAMAGE TO PROPERTY.
- 8. **NEVER LEAVE A LOADED WEAPON UNATTENDED**. There is always a chance that someone might use it, and causing injury, death or damage to property.

- 9. ALWAYS KEEP YOUR HANDS AWAY FROM THE BARREL AND EXTERNAL MOVING PARTS OF THE WEAPON WHILE OPERATING, AS YOU CAN GET HURT.
- 10. ALWAYS BE SURE THAT BARREL INTERIOR IS CLEAN AND THAT THE BORE AND THE MUZZLE ARE CLEAR OF OBSTRUCTIONS. Clean a fouled weapon immediately, so that it will function correctly and safely.
- 11. ALWAYS WEAR AND ENCOURAGE OTHERS TO **WEAR EAR PROTECTION WHEN SHOOTING**, especially on a range. Without ear protection the noise from your weapon and other weapon close to you, could leave ringing in the ears for some time after firing, while the cumulative long term effect could be permanent hearing loss.
- 12. ALWAYS WEAR PROTECTIVE-SHOOTING GLASSES. There's always a chance that gun powder, gas, carbon residue, lubricant, metallic particles, or other debris that may blow back and injure eyes of the shooter. Injury in such circumstances can be severe, including the possible loss of vision. ENCOURAGE OTHERS TO WEAR SAFETY GLASSES TOO!
- 13. ALWAYS USE ONLY COMMERCIALLY MANUFACTURED AMMUNITION IN GOOD CONDITION (CLEAN, DRY, ORIGINAL, HIGH GRADE), WHICH IS APPROPRIATE TO THE CALIBER OF YOUR WEAPON.
- 14. NEVER USE AMMUNITION NOT SPECIFICALLY DESIGNATED FOR USE IN YOUR FIREARM. FAILURE TO USE THE CORRECT TYPE OR CALIBER OF AMMUNITION MAY CAUSE THE FIREARM TO JAM, OR FAIL TO FIRE, OR MAY GENERATE EXCESSIVE PRESSURE WHICH CAN DAMAGE OR EVEN RUPTURE YOUR FIREARM, CAUSING PERSONAL INJURY OR DEATH TO YOU OR BYSTANDERS.

- 15. **NEVER SHOOT AT A HARD SURFACE OR AT WATER.** A bullet may ricochet and travel in any direction to strike you, or an object you cannot see, causing injury, death or damage to property.
- 16. **NEVER** TAKE ANYONE'S WORD THAT A WEAPON IS UN-LOADED! Check it for yourself first, pointed in a safe direction.
- 17. **NEVER FIRE YOUR WEAPON NEAR AN ANIMAL** UNLESS IT IS TRAINED TO ACCEPT THE NOISE; an animal's startled reaction could injure it or cause an accident.
- 18. ALWAYS BE SURE YOUR BACKSTOP IS ADEQUATE TO STOP AND CONTAIN BULLETS BEFORE BEGINNING TARGET PRACTICE, SO THAT YOU DO NOT HIT ANYTHING OUTSIDE THE RANGE SHOOTING AREA.
- 19. ALWAYS BE ABSOLUTELY SURE OF YOUR TARGET AND THE AREA BEHIND IT BEFORE YOU SQUEEZE THE TRIGGER. A bullet could travel through or past our target.
- 20. **NEVER USE YOUR WEAPON IF IT FAILS TO FUNCTION PROP- ERLY,** AND NEVER FORCE A JAMMED ACTION, AS A ROUND MAY
 EXPLODE CAUSING SEVERE DAMAGE TO YOUR WEAPON, SERIOUS INJURY OR POSSIBLE DEATH.
- 21. **KEEP THE WEAPON POINTING TOWARDS THE BACKSTOP** WHEN LOADING, FIRING AND UNLOADING, TO ELIMINATE THE RISK OF INJURY, DEATH OR DAMAGE TO PROPERTY.
- 22. ALWAYS INSTRUCT CHILDREN TO RESPECT FIREARMS. Keep your weapon out of reach of children. The training of all, including children (age determined by law), should be performed by authorized people in institutions equipped and authorized for that kind of activity.

- 23. ALWAYS MAKE SURE YOUR WEAPON IS NOT LOADED BEFORE CLEANING, STORING OR TRAVELING, MAGAZINE REMOVED FROM IT, BEFORE YOU STORE IT OR TRANSFER IT TO SOMEBODY ELSE, SO THAT IT CANNOT FIRE ACCIDENTALLY.
- 24. ALWAYS KEEP AND STORE YOUR WEAPON AND AMMUNITION IN SEPARATE LOCKED RECEPTACLES, OUT OF REACH AND SIGHT OF CHILDREN AND UNTRAINED PEOPLE.
- 25. THE SHOOTER (AND ALL BYSTANDERS) MUST BE OUT OF THE LINE OF FIRE at all times and safe distance away from other shooters, since they may be struck by a ricochet, or by ejected cases from firearms.
- **IN CASE OF MISFIRE:** When the weapon fails to fire, keep holding it pointed toward the target or a safe open area and wait at least 60 seconds. If a hang fire (slow ignition) has occurred, round will fire within 60 seconds. If round does not fire, remove magazine eject round, and examine primer. If firing pin indent on primer is light, off center, or non-existent, have the firearm examined by a competent gunsmith. If firing pin indent on primer appears normal (in comparison with similar previously fired rounds) assume faulty ammunition. Segregate misfired round from other live ammunition and empty cases, reload and carry on firing.

LEAD WARNING: CLEANING AND DISCHARGING FIREARMS in poorly ventilated areas may result in exposure to lead and other substances known to cause birth defects, reproductive harm and other serious injuries. Have adequate ventilation at all times when shooting. Wash hands thoroughly after exposure.

SECTION 2

MODEL OVERVIEW AND SPECIFICATION

IMPORTANT: This firearm comes factory pre-tested, carefully inspected for possible defects and packaged. The manufacturer cannot control product handling after it leaves the factory, therefore, please examine your firearm carefully at the time of purchase.

ZPAP92 & ZPAP85 are semi-automatic pistols modern handguns incorporating the latest technical advances in weapon design for military, law enforcement and sporting use. Created by modification of ZPAPM70 rifle, these are mechanically locked, short recoil operated pistols. Firing takes place with single pull of the trigger, until the magazine is empty. Precision and accuracy of ZPAPM70 rifle are kept in this compact, fun to shoot, short barrel version of Zastava's AK platform firearm. They come with black synthetic pistol grip and high quality wooden forearm, that gives it classic AK look everyone is a after. Both pistols share the same look, with only major difference in caliber.

DO NOT ALTER YOUR FIREARM! This firearm was assembled and tested to function properly in its original condition. Altering your firearm voids the manufacturer's warranty!

TECHNICAL SPECIFICATION:

ZPAP92 Caliber: 7.62x39mm.

Type of firearm: semi-automatic pistol.

Magazine Capacity: 30 rds.

Overall Length: 19.3" Barrel Length: 10"

Weight: 6.6 lbs.


ZPAP85 - Caliber: 5.56x45mm (.223)

Type of firearm: semi-automatic pistol.

Magazine Capacity: 30 rds.

Overall Length: 19.7" Barrel Length: 10"

Weight: 6.4 lbs.

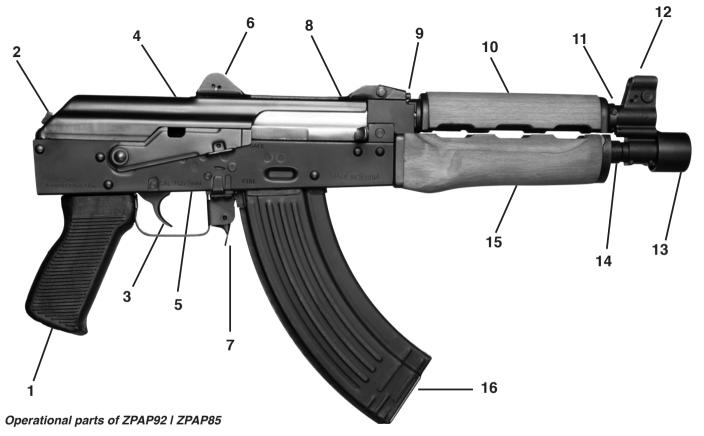

1. Pistol grip handle | 2. Recoil spring cam | 3. Trigger | 4. Safety lever | 5. Receiver | 6. Rear sight | 7. Magazine release lever 8. Bolt cocking handle | 9. Gas tube securing pin | 10. Upper handguard | 11. Gas tube | 12. Front sight | 13. Muzzle cap | 14. Barrel | 15. Lower handguard | 16. Magazine

SECTION 3 SAFETY

3.1 PISTOL SAFETY FEATURES

Both ZPAP92 and ZPAP85 Zastava pistols come equipped with safety locking mechanism that prevents it from accidental and unintentional discharge. **Bolt Safety Lever**, part of the receiver, enables and disables pistol's ability to fire. Located on the receiver right hand side, above the trigger.(picture #2)

NOTICE: Firearms should always be stored in "SAFE" position when not in use! Firearm is considered in "SAFE" mode, when the lever is moved to its uppermost (top) position on the receiver. When moved to the full up position, it blocks bolt and trigger movement and covers the bolt.

Bolt handle is located on right hand side and it's used to pull the bolt assembly rearward. When bolt mechanism is drawn backwards, a cartridge will be stripped from the top of the magazine and loaded into the firing chamber, and pistol will be initiated for firing. Action of drawing the bolt handle back is also being used for checking the firing chamber condition and for manually ejecting cartridges in cases of misfire or jams . (picture 3.)

CAUTION: Do not disengage pistol's safety until barrel has been pointed towards safe direction and YOU ARE READY TO FIRE! When safety lever is in the lower position, firearm is in "FIRE" position. The bolt is fully exposed and free to move, and firearm will fire if trigger is pulled! (picture #4.)



Picture #2 SAFETY ENGAGED! Bolt is covered and the trigger is blocked from full travel. **FIRE DISABLED!**



Picture #3 Bolt (cocking) handle is located on righthand side of the firearm used for pulling bolt rearward.

WARNING: PULING THE TRIGGER WHILE SAFETY LEVER IS IN LOWER (FIRE) POSITION WILL RESULT YOUR PISTOL FIRING! KEEP FINGERS AWAY FROM IT UNTIL READY TO FIRE!

The safety lever should not extend below the safety lever stop on the bottom of the receiver, or rise past the receiver cover. If it does, put the lever in the safe position by rotating it either up or down into the safe position. If this occurs, have the pistol inspected by a competent gunsmith before further use.

CAUTION: TO AVOID INJURIES DURING FIRING, ALWAYS KEEP YOUR FINGERS AND OTHER PARTS OF YOUR BODY AWAY FROM THE COCKING HANDLE AND FROM THE EJECTION.

Bolt Catch: To use the bolt catch, move the safety lever to the "FIRE" position, pull the bolt handle all the way back and lift the safety lever up to the "SAFE" position. Dedicated "catch" hole on the safety lever secures the bolt handle in the rear position. (picture #5.) To release the bolt from the catch hole, firmly pull the bolt handle backwards and while lower the safety lever to FIRE position. Once freed from the catch, bolt handle will be free to move to home position(forward).



Picture #4 Safety disengaged! Bolt is fully exposed and the trigger has full travel. FIRE ENABLED!



Picture #5 BOLT CATCH - Safety engaged!

Bolt is exposed, blocked and the trigger is blocked from full travel. FIRE DISABLED!

SECTION 4 HANDLING

4.1 PISTOL INSPECTION AND PREPARATION FOR INITIAL USE

Your Zastava firearm comes pre-inspected and pre-tested. However, we advise you to perform initial check of the entire pistol, clean and lubricate it, once unpacked. If you are not familiar with this procedure, please refer to CLEANING chapter (5.2) in this owners manual for detailed instructions.

If you notice any defects, or encounter malfunctions on the firearm, please contact Zastava Arms USA immediately (see page 30). If your pistol is clean an has no visual damage it is now ready to use.

CAUTION: TREAT FIREARMS AS IF THEY ARE LOADED AT ALL TIMES!

Use the following procedure to check that your rifle is unloaded and clear of any ammunition:

- -Have your ZPAP pistol pointed in the safe direction, and safety lever is in the upper (SAFE) position(picture2)
- -Depress the magazine release lever with your thumb and pull down the magazine to separate it from the receiver (Picture #6)
- -Move the safety lever to the "FIRE" position
- -Pull the bolt cocking handle all the way backward (Picture 7) and visually check the receiver. Make sure no cartridge is

WARNING: KEEP YOUR FINGERS OFF THE TRIGGER!

When magazine is removed and safety lever is in FIRE position, your pistol will fire if trigger is pulled and there is a cartridge present in the chamber.

-If there is a cartridge present in the chamber after removing the magazine, puling the bolt cocking handle should eject it from the receiver.

If this technique does not help, slowly return the bolt cocking handle to initial (home) position. Return it slowly to forward position, without allowing it to impact the back of the cartridge casing. Disassemble the firearm by following the instructions from FIELD STRIPPING chapter(5.1), to safely remove the cartridge. If you are still unable to remove the cartridge casing after field stripping procedure, do not reassemble the pistol! Take it to authorized repair shop or consult qualified gunsmith. If your pistol has been clear of any dirt, oil and foreign objects, you may proceed with loading procedure.



Picture #6
RELEASE MAGAZINE by pressing
the magazine release lever forward



Pull Bolt charging handle all the way back to expose the chamber

4.2 AMMUNITION

WARNING: USE ONLY ORIGINAL COMMERCIAL MANUFACTURED AMMUNITION WITH CORRECT CALIBER FOR YOUR FIREARM!

CAUTION: Death, serious injury, and severe damage to your firearm can result from the use of wrong ammunition!

Only usage of the correct caliber ammunition for your firearm has been suggested! The proper caliber for ZPAP 92 model is 7.62mm and 5.556mm(.223) for ZPAP 85! Never attempt to use ammunition of any other caliber. **DO NOT USE** dirty, wet, corroded, bent, or damaged rounds. Use of such cartridges can lead to a burst cartridge case and consequent damage to the firearm and personal injury from the sudden escape of high-pressure propellant gas within the firearm's mechanism. Do not spray aerosol-type lubricants, preservatives, or cleaners directly onto cartridges or where excess spray may flow into contact with cartridges. *Lubricant on cartridges can cause ammunition malfunctions which can be potentially dangerous*.

WARNING: DO NOT USE ANY NON-STANDARD "RE-MANUFACTURED" HAND-LOADED (RELOADED) AM-MUNITION!

If you use reloaded, "remanufactured" hand-loaded, or other non-standard ammunition all warranties for your firearm will be voided. Improperly loaded ammunition can be extremely dangerous. Severe damage to the firearm and serious injury to the shooter or to others may result. Always use ammunition that complies with the industry

performance standards established by the Sporting Arms and Ammunition Manufacturers' Institute, Inc. (SAAMI) of the United States or ammunition manufactured to military specifications.

4.3 LODGED BULLET

Bullets can occasionally get lodged (stuck) in the barrel if the loaded cartridge has insufficient propellant powder, or if the powder fails to ignite. In some cases, ignition of the cartridge primer alone will push the bullet out of the cartridge case, but usually does not generate sufficient energy to push the bullet completely out from the barrel.

If a bullet is obstructing the barrel, immediately unload the firearm and look through the bore. It is not sufficient to merely look and check the firing chamber. A bullet may be lodged some distance down the barrel where it cannot easily be seen.

WARNING: IF A BULLET IS STUCK IN THE BARREL, DO NOT ATTEMPT TO SHOOT IT OUT BY USING ANOTHER CARTRIDGE OR BY BLOWING IT OUT WITH A BLANK. SUCH PROCEDURE CAN GENERATE EXCESSIVE PRESSURE, DAMAGE THE FIREARM, AND CAUSE SERIOUS PERSONAL INJURY.

Try forcing the bullet forward with a cleaning rod instead. Clean any unburned powder grain from the barrel, chamber and shooting mechanism before you resume shooting. If you can't dislodge bullet by taping it with a cleaning rod, please seek help from qualified gunsmith or authorized

4.4 LOADING THE FIREARM

WARNING: DO NOT START LOADING YOUR FIREARMUNTIL YOU HAVE FULLY READ AND UNDERSTAND THIS MANUAL AND YOUR FIREARM FUNCTIONS! KEEP YOUR FINGERS AWAY FROM THE TRIGGER!

- 1. **Place safety lever UP in " SAFE"** position and detach magazine from the pistol (page 12).
- 2. Visually inspect ammunition rounds. Look for potential dents and manufacturers detects (cartridge case bulged or ruptured). We do not suggest using reloaded ammunition with this pistol. Use only the correct ammunition, designated for your pistol model! Feeding wrong caliber cartridges into magazine can lead to jamming, internal pistol mechanism parts defects and personal injuries!
- 3. **Load the cartridges into magazine** by pressing the round, one at a time, between the spring-loaded magazine's feed lips. Rear of the cartridge should be entering the magazine first (picture #8) Press down and push back, until it locks, securely inside the magazine. Repeat the same procedure until the magazine is full (30 rounds). A third party made magazine loading tools can also be used to aid safer and faster loading.
- 4. **Install the loaded magazine** by tilting it rearward, then inserting into the receiver, so that front lip securely latches into the front wall of the magazine well. Rotate bottom of the magazine rearward until the magazine release lever locks onto the rear locking surface of the magazine. Pull on the magazine to ensure it's fully seated and securely locked in receiver bay. (picture #9.)



Picture #8 Loading cartridges into magazine



Picture #9 Attaching magazine to the receiver

4.5 FIRING THE PISTOL

- 1. Point your firearm in safe direction, and return safety lever down to enable "FIRE" mode. **Use extreme caution when handling your firearm in this mode**
- 2. Action of pulling back the bolt cocking handle backward and releasing it, will strip the cartridge from loaded magazine and into the chamber. YOUR PISTOL IS NOW READY TO FIRE! Keep the barrel pointed in safe direction and use extreme caution!
- 3. Aim downrange, towards the target. Align front and rear sights.
- 4. Squeeze the trigger gently! Your pistol will fire single round! Due to state and federal laws, US models of this pistol fire only in single mode (single round per trigger squeeze, until the magazine is empty).

WARNING: DURING THE FIRING PROCESS BOLT HANDLE MOVES BACKWARD AND FORWARD! KEEP FINGERS CLEAR!

Being a semi-automatic pistol, Zastava ZPAP pistol's action (its moving parts) will cycle each time the round is fired. As the bolt moves rearward, the extractor will pull the empty cartridge case from the chamber and eject it from the pistol. Keep right hand side clear, and make sure there are no bystanders in close proximity on either side of the pistol. Keep your hands clear from the ejection port as injuries from the ejected cartridge case or gases expelled from the pistol can occur.

- 7. When the last round is fired, and firing cycle has finished, your pistol's safety lever should be set back to "SAFE " position! If you wish to seize firing before the magazine goes empty, secure your pistol by flipping up the safety lever up to SAFE position!
- 8. Remove the magazine and replace with loaded one, or leave the empty one attached, if you are done shooting.
- 9. Check the pistol's chamber to ensure it does not contain a round by placing the safety lever in the "FIRE" position, and by pulling the bolt cocking handle back(and holding it firmly). Look into the chamber through the ejection port while keeping the pistol pointed in a safe direction. If the chamber is clear, release the bolt cocking handle and return the safety lever to the "SAFE" position.

WARNING: STOP SHOOTING IMMEDIATELY AND UNLOAD YOUR FIREARM if one of these situations develop:

- 1.A mechanical malfunction 2. binding or stoppage
- 3. powder/ gas spitting 4.Firing rifle does not sound quite right! Unload your firearm and take it to a qualified gunsmith or authorized repair shop for examination. If your pistol ever fails to fire keep it pointed at the target for at least 30 seconds in the event of a hang-fire (slow ignition). If the round still does not fire, remove the magazine, eject and discard the bad round. Reload the pistol to resume firing.

CAUTION: After three magazines were fired without intermission (90 rounds), the firearms should be left to cool down, to avoid barrel overheating.

4.6 UNLOADING PISTOL

WARNING: Always keep magazine detached from the pistol, when not in use, when cleaning, storing or transporting it, to prevent accidental discharge!

Follow these 3 steps to detach the magazine from the pistol:

1. Place the SAFETY selector up to "SAFE" position.

- 2. Remove the magazine by depressing the magazine release lever with your thumb, while pulling magazine down.
- 3. Detach the magazine from the receiver by tilting it toward the muzzle end of the pistol and remove it from the magazine well in the receiver.

After firing all the rounds, magazine should be empty, with no rounds left. However, If removed before firing all available rounds, or your pistol has misfired, a cartridge is still going to be inside the firing chamber. In order to safely, **COMPLETELY UNLOAD** your pistol, you must eject the chambered round by following this procedure:

1. Point the pistol in safe direction. Keep your fingers away from trigger!

- 2. Push down the safety selector to "FIRE" mode
- 4. Pull the bolt cocking handle all the way back. This movement should force the round out of the chamber trough the ejector port.
- 5. If the cartridge is extracted return the safety lever UP to "SAFE" mode position! If you were unable to extract the cartridge, see "Dealing with jams" from the next topic.

CAUTION: Never assume that the firearm is empty merely because you checked the chamber. You must also check the bore for any fired shot or round jammed inside the barrel.

4.7 PROCEDURE FOR DEALING WITH JAMS

Your zastava ZPAP pistol should function reliably if well maintained. However, in certain situations, a malfunction may occur due to a cartridge or a bullet jam. In case of a cartridge jam, pull bolt cocking handle several times to try to eject it out. If this does not eject the cartridge, ride the bolt cocking handle home (slowly allow it to return to its forward position without allowing it to impact the back of the cartridge casing). Follow the instructions found in FIELD STRIPING (section 5.1), to field strip your pistol before attempting to remove the cartridge. If you are still unable to remove the cartridge casing after field stripping your pistol, do not reassemble it back! Take it to a qualified gunsmith. Also, see **LODGED BULLET section on page 13 for procedure when dealing with lodged bullets...**

CAUTION: PREVENT MALFUNCTIONS BY CLEANING YOUR PISTOL AFTER EACH SHOOTING SESSION!

IF A BULLET EVER GETS STUCK IN THE BORE, DO NOT ATTEMPT TO SHOOT IT OUT BY USING ANOTHER CARTRIDGE OR BY BLOWING IT OUT WITH A BLANK OR ONE FROM WHICH THE BULLET HAS BEEN REMOVED. THIS TECHNIQUES CAN GENERATE EXCESSIVE PRESSURE, DAMAGE THE FIREARM, AND CAUSE SERIOUS PERSONAL INJURY.

4.8 SIGHT ADJUSTMENT AND AMMUNITION

Since ammunition of different manufacturers has different characteristics, they may cause a drop of trajectory and deviation of shots from the aiming point.

To solve this problem and easily eliminate the differences in ammunition and aiming in regards to the factory setting of sight, your rifle is provided with built-in iron front adjustable and fixed rear sight.

ZPAP firearms come zeroed in, with factory adjusted sights. If necessary, elevation and windage adjustment of the front sight can be performed by qualified armorer with the special (optional- not provided) tool. Rear sight is fixed, non-adjustable, with flip style peep:

- 2 'U' two white dots with number 2, for close range & fast acquisition (up to 200 meters)
- 4 ´U for precision shots (up to 400 meters)

The ammunition should be purchased in original factory packages with exact caliber and mass of projectile. If the same ammunition is always used, the need for correction of sight is eliminated. The ammunition of unknown origin, oxidized, damaged or hand-loaded ammunition should NOT be used as it may cause malfunctions or heavy damages.



Front sight peep flipped up for enhanced visibility (200 meters)



Front sight - position 4 (400 meters)



Rear sight in position 2 (200 meters)



Rear sight flipped to position 4 (400 meters)

MAINTENANCE

5.1 FIELD STRIPING (DISASSEMBLY)

CAUTION: YOUR PISTOL MUST BE COMPLETELY UN-LOADED BEFORE YOU START THE STRIPPING!

To disassemble (strip) your firearm, use following procedure:

- 1. **Detach magazine** from the pistol(see picture #10
- 2. Move the SAFETY lever to "FIRE" position by sliding the safety selector down.
- 3. Check that firing chamber is clear, so it does not contain any cartridges. Pull back the bolt cocking handle (picture #11) and lock it in place with the bolt catch on the safety lever (picture 5). Inspect the firing chamber to ensure no cartridges are still inside. Once determined that the chamber is empty. push down on the safety lever and let the bolt go back forward to home position.
- 4. Raise the receiver (dust) cover by holding the pistol in a secure position (across your lap, resting on a table, etc.) and grasping the rear part of the receiver with your hand, depressing the spring loaded release button on the rear of the receiver. Press the recoil spring cam forward while holding the button, and raise the receiver cover from the back end with your other hand. (picture #12.)







Picture #11 Pull Bolt cocking handle

5. Remove recoil spring assembly from the pistol. Hold the forward part of the receiver with one hand and press on the back of the recoil spring cam with other hand until its rear face leaves the groove, at the rear of the receiver. Lift the recoil spring cam and remove recoil spring assembly from the bolt carrier channel (picture #13)

USE PROTECTIVE EYEWEAR TO PREVENT EYE INJU-RIES! POINT MUZZLE IN SAFE DIRECTION!







Use caution when field stripping your pistol, as spring and other parts may become dislodged during disassembly process!

- 6. **Remove bolt and bolt carrier** from the pistol by holding the receiver with one of your hands and the cocking handle with your other hand. Pull the bolt carrier and bolt to the rear, as far as possible. Once the back of the bolt carrier contacts the back plate of the receiver, release pressure on the bolt cocking handle, this will allow the bolt carrier to move up and off the receiver rails. Lift the rear portion of the bolt carrier and remove it and the bolt from the receiver. (picture #14)
- 7. **Separate bolt from the carrier** by turning the bolt carrier over and holding it in your left hand. Rotate the top of the bolt to the right and move it rearward with your right hand so that the guide lug on the bolt leaves the channel in the bolt carrier. You can now remove the bolt from the bolt carrier by moving it forward and out of its guide hole. **(picture #15)**
- 8. Remove the gas tube assembly and upper hand guard by holding the forward portion of the receiver with your left hand and pressing in the gas tube securing pin. Lift the gas tube end vertically out of its groove in the rear sight base and remove the front end of the gas tube from the gas block (picture #16).



Picture #14 Remove bolt and carrier



Picture #15 Separate bolt from carrier



Picture #16 Remove gas tube assy

5.2 CLEANING

CAUTION: PROTECT YOUR EYES! ALWAYS WEAR EYE PROTECTION WHEN CLEANING YOUR FIREARM!

To ensure long life, safer functioning and performance of your the firearm, it is necessary to properly clean and maintain it. Follow the advice in this manual to keep it in peak operating condition!

WHEN TO CLEAN:

- **-Before shooting**, your pistol should be wiped clean, and the barrel must be dry. Failure to do this may result in increasing soot deposits on the barrel bore, walls and bulging of the barrel.
- -As soon possible after firing, the rifle must be cleaned and wiped dry, and the barrel lubricated with oil. Thanks to its chemical composition the oil dissolves the soot residuals in the barrel bore. Your job will be easier and there will be less opportunity for corrosion to start.
- -Before storing, it is advised that pistol should be thoroughly cleaned and lightly lubricated. Apply light coat of high quality gun oil to all well cleaned metal surfaces, to prevent exposure to moisture. Remove excess lubrication. The most suitable place for keeping firearms is a safely locked cabinet, in a dry room, not exposed to a heat source.

- **-When removed from storage**, and before using the pistol again, barrel bore (inner cavity) and inside elements should be dry and free of any obstructions. Use cleaning rod , cloth and patch to remove any existing buildups.
- -When your pistol has not been fired, clean it periodically, every few months, or once a month if storing conditions are unfavorable. When your pistol is being carried outside, the it gets exposed to dust or moisture (dew, rain, snow) and therefore requires cleaning and lubrication. It is advised that you clean your pistol even if it's not fired from!

A poorly maintained and corroded firearm with soot in barrel caused by powder gases and deposits of dirt, oxidized and damaged parts of mechanisms result not only in improper function and shortening of life, but may also be a life hazard to the shooter and his companionship.

CLEANING MATERIALS: Cleaning rod, lubrication brush, cotton flannel patches (cut to fit into the bore), lubrication oil and gun cleaning solution to eliminate powder deposits. It is advised to use well-known oils intended for this purpose.

CLEANING PROCEDURE:

Clean the barrel from soot deposits with the barrel cleaner and rags changing rags several times until the last rag comes out clean which means that the barrel is well cleaned. After that lubricate the barrel with oil using the brush. Two-three days later inspect the barrel and wipe it again with a rag wrapped around the barrel cleaner until the rag comes out clean. Upon wiping lubricate the barrel again.

The following cleaning procedure may be used both periodically and after firing:

- 1. **CAUTION:** Ensure that the firearm is not loaded.
- 2. Strip for cleaning as described in this Instruction manual.
- 3. The brush dipped into gun cleaning solution pass through the barrel several times to eliminate powder deposits.
- 4. With the same brush, clean the grooves on the slide, frame, slide interior and top surface of the insert in frame.
- 5. Attach cotton flannel patch to end of cleaning rod and pass it through the barrel several times to eliminate dirt and powder deposits. Change the patches until the last patch comes out clean.
- 6. With cotton flannel patches clean external surfaces of the barrel, slide interior and the frame.
- 7. After cleaning, lubricate the barrel and other metal parts with oil.

If ambient temperature is below 0° C (32° F) avoid use of lubrication oil. Instead, apply a dry lubricant sparingly.

CAUTION: Using a firearm with presence of oil, grease or any other material, even partially obstructing the bore may result in damage to the firearm and injury to the shooter and nearby persons. DO NOT APPLY OR SPRAY LUBRICANTS DIRECTLY ON AMMUNITION!

If affected by the lubricant, the powder charge of a cartridge may not be ignited, and the sole energy from the primer may be sufficient enough to push the bullet forward into the bore, and get it lodged. If you fire a subsequent bullet into the obstructed bore, it will damage the firearm and may cause injury to the operator and those near vicinity. Use lubricants properly!

5.3 REASSEMBLY

- 1. Attach the gas tube assembly and upper handguard by holding the pistol with one hand, and install the front end of the gas tube on the gas block with other hand. (picture #17). Align the gas tube end with groove in the rear sight base, and rotate it downward until it is fully seated in the rear sight base. When the gas tube assembly is fully seated in the rear sight base, the gas tube securing pin will move out and over the gas tube, to lock it in place.
- 2. **Install the bolt back into the bolt carrier**. Hold the bolt carrier upside-down in one hand, with the gas piston facing away from you. Take the bolt in your other hand, with bolt face facing away from you, and the guide lug facing upward. Insert the bolt shaft into the guide hole on the bolt carrier and bring the bolt fully rearward. Align the bolt guide lug with the channel in the bolt carrier and rotate the bolt counter-clockwise. Once the guide lug has entered the channel in the bolt carrier, continue to rotate until the bolt has moved fully forward. (picture #18)
- 3. **Make sure that the hammer is cocked** (locked underneath the sear) before attempting to install the bolt carrier!
- 4. **Install the bolt and bolt carrier back into the receiver** by holding the forward portion of the receiver with one hand, and take the bolt and bolt carrier with other hand. Ensure that your thumb is placed on the back of the bolt to hold it fully forward.



Picture #17



Picture #18



Picture #19

- 5. Insert the gas piston into the gas tube end (picture #19) and align the back face of the bolt carrier with the inside face of the back plate of the receiver. Depress the bolt carrier against the pressure from the hammer spring using the heel of your right hand, so that the guide grooves on the sides of the bolt carrier are aligned with rails on the receiver.
- 6. Move the bolt carrier to its fully forward position (picture #20).
- 7. **Install the recoil spring assembly** by holding the forward portion of the receiver in one, while inserting the recoil spring retainer into the bolt carrier channel with your other hand **(picture #21)**. Push the recoil spring cam forward, placing its guide lugs in front of the grooves, inside receiver's rear plate. Depress the recoil spring cam until its guide lugs are aligned with the channel on the top of the receiver rear plate. Release pressure on the recoil spring cam which will allow it to move rearward and lock into the receiver.
- 8. Rotate the receiver cover down into the groove in the back of the rear sight base (picture #22). Push the back end of the receiver cover forward and downward with the heel of your right hand until the recoil spring cam slides back into place and locks the receiver(dust) cover.
- 9. **Release the hammer**. Pull the trigger and move the safety lever to the "SAFE" position.







Picture #21




Picture #22

SECTION 6 PARTS



5.56x45mm exploded part view

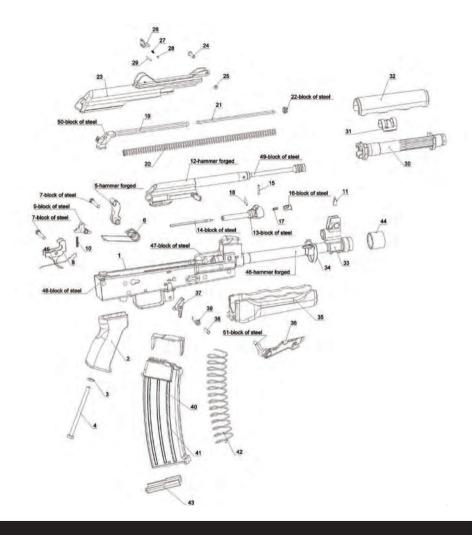


ZPAP85 - PARTS LIST

No.	Part number	Part name				
1		Barrel - Receiver ass				
2	3106	Pistol grip				
3	3002	Plate				
4	3001	Pistol grip bolt				
5	101442	Hammer				
6	3087	Hammer spring				
7	3089	Trigger and hammer pin				
8	3094	Trigger				
9	101478	Sear				
10	3092	Sear spring				
11	105370	Front sight				
12	104564	Bolt carrier				
13	9870	Bolt				
14	9871	Firing pin				
15	9874	Firing pin pin				
16	9872	Extractor				
17	3035	Extractor spring				
18	9873	Extractor pin				
19	105377	Recoil spring guide as- sembly				
20	3064	Front recoil spring guide				

No.	Part number	Part name					
21	3157	Recoil spring					
22	3063	Recoil spring holder					
23	105362	Cover assembly					
24	105369	Cover axle pin					
25	107240	Washer					
26	129982	Rear sight					
27	6914	Rear sight spring					
28	6913	Rear sight retainer					
29	105368	Rear sight axle pin					
30	130465	Cylinder ass					
31	3056	Wooden upper hand- guard leaf spring					
32	130467	Wooden upper hand- guard					
33		Gas chamber ass					
34		Wooden handguard re- tainer ass					
35	105356	Wooden handguard					
36	7371	Fire selector					
37	5682	Magazine release					
38	3005	Magazine release axle pin					

No.	Part number	Part name					
39	3006	Magazine release spring					
40	117029	Magazine body					
41	117031	Follower					
42	117032	Magazine bottom					
43	117035	Follower spring					
44	129895	Nut					
45	101441	Pin Retainer					
46		Barrel					
47		Trunion					
48		Folding stock carrier					
49	130458	Gas piston					
50	105378	Recoil spring guide -					
		body					
51	3098	Fire selector - body					

ZPAP92 7.62x39mm exploded part view

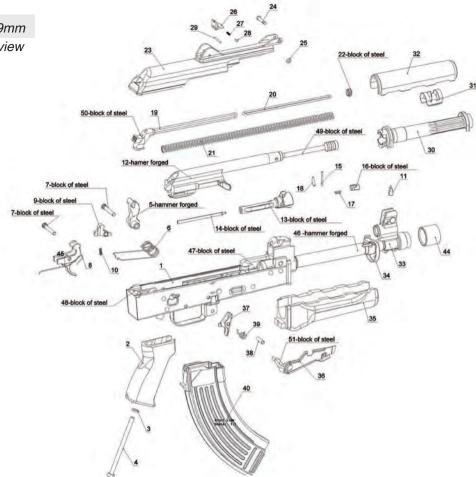

ZPAP92 - PARTS LIST

No.	Part number	Part name					
1		Barrel - Receiver ass					
2	3106	Pistol grip					
3	3002 Plate 3001 Pistol grip bolt 101442 Hammer						
4							
5							
6	3087	Hammer spring					
7	3089	Trigger and hammer pin					
8	3094	Trigger					
9	6827	Sear					
10	3092	Sear spring					
11	105370	Front sight					
12	101558	Bolt carrier					
13	7224	Bolt					
14	3045	Firing pin					
15	3034	Firing pin pin					
16	3046	Extractor					
17	3035	Extractor spring					
18	3033	Extractor pin					
19	105377	Recoil spring guide assembly					
20	3064	Front recoil spring guide					

No.	Part number	Part name			
21	3157	Recoil spring			
22	3063	Recoil spring holder			
23	108394	Cover assembly			
24	105369	Cover axle pin			
25	107240	Washer			
26	126579	Rear sight			
27	6914	Rear sight spring			
28	6913	Rear sight retainer			
29	105368	Rear sight axle pin			
30	130460	Cylinder ass			
31	3056	Wooden upper hand- guard leaf spring			
32	130467	Wooden upper hand- guard			
33		Gas chamber ass			
34		Wooden handguard re- tainer ass			
35	105356	Wooden handguard			
36	7371	Fire selector			
37	5682	Magazine release			
38	3005	Magazine release axle pin			

No.	Part number	Part name				
39	3006	Magazine release spring				
40	5666	Magazine body				
41	5668	Follower				
42	3116	Magazine bottom				
43	3125	Follower spring				
44	129895	Nut				
45	101441	Pin Retainer				
46		Barrel				
47		Trunion				
48		Folding stock carrier				
49	130458	Gas piston				
50	105378	Recoil spring guide - body				
51	3098	Fire selector - body				

LIMITED PARTS REPLACEMENT WARRANTY

The enclosed firearm is warranted to be free of manufacturing defects for a period of one year from the original date of purchase from a federally licensed firearms retailer. The warranty only applies to the first retail purchaser and is not transferable or assignable. Proof of purchase must be presented at the time any warranty claim is made. This is a one year warranty limited to replacement of improperly manufactured parts.

Any alternations, modifications, abuse, misuse or discharge of poor quality, corrosive or defective ammunition voids the warranty. If your weapon needs servicing, apply to one of the service shops authorized by your dealer. Do not send your weapon directly to the manufacturer!

REGISTER ONLINE TODAY!

To activate your warranty, please register your firearm online at www.zastavaarmsusa.com after purchase.

DO NOT ALTER YOUR FIREARM!
This firearm was assembled and tested to function properly in its original condition. Altering your firearm voids the manufacturer's warranty!

DISCLAIMER OF LIABILITY

The manufacturer shall not be responsible for injury, death, or damage to property resulting from either intentional or accidental discharge of this firearm, or from its function when used for purposes or subjected to treatment for which it was not designed. The manufacturer also will not honor claims involving this firearm which result from careless or improper handling, unauthorized adjustment or parts replacement, corrosion, neglect, or the use of wrong caliber ammunition, or the use of ammunition other than original high quality commercially manufactured ammunition in good condition, or any combination thereof.

RETURN AUTHORIZATION

To obtain warranty service, please contact us at warranty@ zastavaarmsusa.com. Please note that a return authorization must be obtained prior to returning the firearm.

ZASTAVA ARMS USA

55 Bradrock Des Plaines, IL 60018 ph: 847-250-9727

info@zastavaarmsusa.com www.zastavaarmsusa.com

TRANSPORTATION AND STORAGE

WARNING: ALWAYS CHECK TO ENSURE THAT YOUR FIREARM IS NOT LOADED BEFORE TRANSPORTING, OR PUTTING IT AWAY FOR STORAGE.

PREVENT UNAUTHORIZED ACCESS: For increased safety, firearms should be stored unloaded and locked in a SECURE, hidden location, separate from the ammunition for the same rifle. Out of reach of children and unauthorized persons!

WHEN STORED IN AN IRRESPONSIBLE AND UNSAFE MANNER, FIREARMS CAN BE DANGEROUS, POSING A HUGE RISK OF POTENTIAL SERIOUS OR FATAL INJURIES TO CHILDREN AND OTHER UNQUALIFIED PERSONS.

NEVER ASSUME THAT STORING A FIREARM AT A "SE-CRET HIDING" PLACE IS A SECURE STORAGE METH-OD. Others may get sooner or later get aware of your storage location by chance.

The most suitable place for keeping firearms is a safely locked cabinet. *Use the locking device with this firearm for storage*. The use of a locking device or safety lock is only one aspect of responsible firearms storage.

WARNING: NEVER LOAD A LOCKED FIREARM! NEVER LOCK A LOADED FIREARM!

When transporting your rifle, ALWAYS keep it unloaded for your own, and safety of others.

By purchasing this firearm, you have accepted the responsibility of safely securing the firearm at all times and preventing its unauthorized use.

GET FAMILIAR WITH YOUR STATE'S "SAFE AND SECURE STORAGE OF FIREARMS AND AMMUNITION" GUN LAWS AND REGULATIONS, THE MOST IMPORTANT LAW!

DRUGS & ALCOHOL WARNING: DO NOT TRANS-PORT OR HANDLE FIREARM WHILE UNDER THE INFLUENCE!

Alcohol, certain drugs and illegal supstances can impare your judgement, physical coordination, and you actions.

TABLE OF CONTENTS

STATE BY STATE WARNINGS	4
SECTION 1	
SAFETY GUIDES & PRECAUTIONS	6
SECTION 2	
MODEL OVERVIEW AND SPECIFICATION	8
SECTION 3	
3.1 PISTOL SAFETY FEATURES	10
SECTION 4	
4.1 PISTOL INSPECTION AND PREPARATION FOR INITIAL USE	12
4.2 AMMUNITION	
4.3 LODGED BULLET	
4.4 LOADING THE FIREARM	
4.5 FIRING THE PISTOL	
4.6 UNLOADING PISTOL	16
4.7 PROCEDURE FOR DEALING WITH JAMS	16
4.7 SIGHT ADJUSTMENT	17
SECTION 5	
5.1 FIELD STRIPING	
5.2 CLEANING	
5.3 REASSEMBLY	22
SECTION 6	
PARTS LIST ZPAP85	
ZPAP92	
Warranty Disclaimer of Liability	28
Transportation and storage	29

1	NOTES		 		 	
		4 4 2 2 2 2 3	 	2	 	
						 -
-			 	 	 	

