

TABLE OF CONTENTS

Safety	Informa	ition and Warnings	2
Overvi	ew		5
	l.	Description	5
	II.	Safety	6
	III.	Nomenclature	7
	IV.	Specifications	7
		A. Overall	7
		B. Measurements	8
	V.	Ammunition	8
Operat	ing Inst	ructions	9
	I.	Loading Magazine and Chambering	9
	II.	Unloading	.11
	III.	Sights	.12
	IV.	Firing	.13
Breako	down		.15
	I.	Disassembly	.15
		A. Removal of Grip Assembly	.15
		B. Removal of Bolt Assembly	.16
	II.	Assembly	.17
		A. Inserting Bolt Assembly	.17
		B. Installing of Grip Assembly	.18
	III.	Proper Care	. 19
		A. Maintenance	. 19
		B. Lubrication	. 19
		C. Troubleshooting	.20
Custor	ner Ser	vice	.21
	I.	Service/Repair	.21
	II.	Warranty	.21
Explod	led Viev	v and Parts	.23
	I.	Barrel Group	.23
	II.	Grip Group	.24

SAFETY INFORMATION AND WARNINGS

This manual explains the function and the handling of the CP33 and warns of the potential dangers, including death or serious personal injury that can result from the unsafe use of the CP33. This manual should always accompany the CP33 and be transferred with it, as well as, if it is sold or loaned to another person.

Even if you are an experienced shooter, you must READ THIS ENTIRE MANUAL CAREFULLY before loading or firing the CP33. This manual gives basic instructions on the proper handling and functioning of the CP33. The safety of yourself and that of others will depend on you following the instructions and warnings in this manual. Always use safe firearms practices. If you are unfamiliar with firearms, take a course in the safe handling of firearms run by a qualified firearms instructor, your local gun club, or a similar qualified organization.

This manual contains several safety warnings and instructions preceded with ACAUTION, or NOTICE. These signal words are designed to draw your attention to important safety information.

AWARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.

ACAUTION indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

NOTICE addresses safety practices not related to personal injury.

AWARNING Firearms can cause death or serious personal injury. Safety must be the prime consideration of anyone who handles firearms.

The CP33 is designed to function reliably with proper care and knowledgeable use. Do not use your CP33 unless you fully understand how to safely operate it.

It is your responsibility to use safe firearm handling habits. Accidents are the result of violating the rules of safe firearms handling as well as the warnings noted in this manual.

Always seek a doctor's advice if you are taking medication and/or are pregnant to be sure that you are able to shoot and handle a firearm safely. Never drink alcoholic beverages and/or take drugs before or while shooting. Your vision and judgment could be seriously impaired, making your firearm handling unsafe.

Always treat a firearm as though it were loaded.

Always keep the muzzle pointed in a safe direction. Never point a firearm at anyone or anything you do not intend to shoot.

Always keep your finger off the trigger and outside the trigger guard until you have made the decision to fire.

Always wear hearing and eye protection when using your firearm.

Never accept or pick up a firearm without checking the magazine and the chamber to make sure that it is unloaded.

▲ WARNING Do not trust the extractor to remove the cartridge from the chamber. Always check to confirm that it is empty.

Always make sure the CP33 is unloaded, on SAFE, and the action is open before handing it to another person.

AWARNING Never allow a firearm to be used by individuals who are not familiar with its safe operation and rules of firearm safety.

Marning Never alter or modify the CP33 because this could cause it to malfunction, create a dangerous condition, and void the warranty.

AWARNING

Be sure all accessories are compatible with the firearm, properly installed on the firearm, and that the accessories do not interfere with safe operation of the firearm. Follow the instructions provided by the accessory manufacturer to the extent those instructions are not inconsistent with the warnings and instructions contained in this manual.

AWARNING If the CP33 is dropped or forcefully struck, it could be damaged and may not function properly. Have it inspected by Kel-Tec CNC Industries, Inc. before continued use.

AWARNING Never load a firearm except immediately before shooting. When transporting your firearm, be sure your firearm is unloaded, on SAFE, and the action is open.

AWARNING Never store or transport firearms and ammunition together, keep them locked up and away from children and other unauthorized persons.

Always secure firearms from children. You are responsible for the firearm's safety and security.

ACAUTION Most ammunition contains lead in the projectile and/or primer. Discharging firearms in poorly ventilated areas, cleaning firearms, or handling ammunition may result in exposure to lead and other substances known to cause birth defects, reproductive harm, cancer, and other serious physical injury. Have adequate ventilation at all times. Wash hands thoroughly after exposure.

The CP33 was tested, carefully inspected, and packaged before it left the factory. Kel-Tec CNC Industries, Inc. cannot control what happens to the CP33 after it leaves the factory. Therefore, carefully examine the CP33 when you acquire it to ensure that it is unloaded and undamaged. If you do not understand any of the warnings and instructions in this manual or have any problems operating the CP33, contact Kel-Tec CNC Industries, Inc. at:

KEL-TEC CNC INDUSTRIES INC

1505 Cox Road Cocoa, FL 32926

Telephone Number: 321-631-0068 Toll free: 1-800-515-9983

Hours: M-F 9am-6pm EST (excluding holidays) **Website**: https://www.keltecweapons.com **Email**: customerservice@keltecweapons.com

The current version of the instruction manual can also be downloaded at: https://www.keltecweapons.com

OVERVIEW

I. DESCRIPTION

The CP33 is a lightweight auto-loading firearm that accepts a patented 33 round double stack magazine. The safety and magazine catch are accessible from both sides of the firearm, and the rear mounted operating handle is non-reciprocating.

The CP33 features a rigid aluminum upper assembly that houses the barrel and integrates a Picatinny-style rail for mounting of optics or other accessories. The rigidly mounted barrel allows for excellent accuracy. The end of the barrel is threaded ½"-28 TPI to accept a wide range of standard muzzle devices.

An M-LOK [™] slot located under the barrel allows for the mounting of a small Picatinny rail (not included) or other standard accessories. The integrated fiber optic sights include a fully adjustable rear sight.



Figure 1 - CP33

NOTICE Check with federal and local laws before attaching ANY type of extra grip to this rail.

II. SAFETY



Figure 2 - Fire Position

When the safety lever is in the **SAFE** position, the lever will be up and the red colored oval will not be visible. PLEASE NOTE THAT THE SAFETY LEVER WILL NOT BE ABLE TO GO INTO THE SAFE POSITION UNLESS THE HAMMER IS COCKED. DO NOT FORCE THE SAFETY LEVER IF THE HAMMER IS NOT COCKED. The firing mechanism is hammer fired and of conventional single action type. The safety disconnects the trigger mechanism and fully blocks the sear so the hammer cannot drop.

The CP33 features an ambidextrous lever style safety located above the rear of the grip and can be activated with the thumb of the grip hand. When the safety lever is in the **FIRE** position, the lever will be down and a red colored oval will be visible above the lever.



Figure 3 – Safe Position

The safety lever **MUST** reach its intended position. If you do not completely disengage or engage the safety lever and instead stop the safety midway, you may still be able to pull the trigger.

AWARNING Never completely rely on a mechanical safety as it can fail or become unintentionally disengaged. A mechanical safety is **NOT A SUBSTITUTE** for safe firearm handling practices.

III. NOMENCLATURE

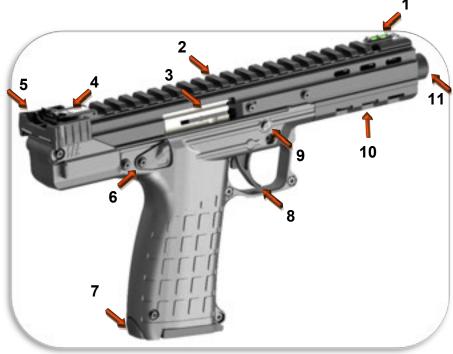


Figure 4 – Part Identification

1 – FRONT SIGHT
2 – PICATINNY STYLE RAIL
3 – EJECTION PORT
4 – REAR SIGHT
5 – OPERATING HANDLE
6 - SAFETY
7 – MAGAZINE CATCH
8 – TRIGGER
9 – ASSEMBLY PIN
10 - M-LOK SLOT
11 – MUZZLE NUT

IV. SPECIFICATIONS: CP33

A. OVERALL

Caliber
Operation
Mode of Fire
Trigger System
Magazine Capacity (Included)

.22LR Straight blowback Semi-automatic Hammer fired, single-action 33 + 1 rounds

B. MEASUREMENTS

Weight				
Pistol w/o Magazine	1.5	lbs	669	g
Loaded Magazine	5.56	oz	157	g
(33 rounds)				
Dimensions				
Overall Length	10.6	in	269	mm
Barrel Length	5.5	in	141	mm
Width (widest point)	1.7	in	44	mm
Height	6.0	in	153	mm
Rifling	1 in 14	in	1 in 356	mm
Force				
Trigger Pull	4.0	lb	1.8	kg

V. AMMUNITION

The CP33 pistol has been designed and chambered to operate with **HIGH VELOCITY** .22 LR cartridge ammunition. This is generally with a bullet weight of 40 grains and up. The use of ammunition for self-loading firearms should fit these criteria and be suitable for the intended performance. Use only US made, SAAMI spec, commercially manufactured, clean, dry, high-quality, and good condition ammunition. Use only brass-cased ammunition. Any other ammunition is considered non-standard and use of it may cause functioning issues and void the warranty of the firearm.

KelTec firearms are manufactured from high quality materials. They will provide extended service life. However, all warranties, expressed or implied, are voided and KelTec will not be liable for property damage or personal injury and consequential damages, if faulty, non-standard, or reloaded ammunition is used in any KelTec firearm.

Low power ammo and/or light weight bullets may cause feeding problems due to the lack of energy to fully cycle the slide. This is also the case if the grip is not held firmly. Not all ammunition produces the same result, we recommend that once you find a brand that functions best, keep using it. KelTecdoes not recommend using hand loads, reloads, damaged, remanufactured ammunition, foreign or military surplus ammunition of unknown or questionable quality. The use of this type of ammunition will: void the warranty, be dangerous, and possibly cause death or serious injury if the ammunition is not made to the proper specifications.


Never use non-standard ammunition or cartridges with pressures or dimensions exceeding SAAMI standards, failure to follow this warning may result in serious injury or death and damage to your firearm.

OPERATING INSTRUCTIONS

I. LOADING MAGAZINES AND CHAMBERING

NOTICE Loading the double stack magazine of the CP33 is very different from loading most other magazines. Failure to load the magazine properly **WILL** result in rim-lock which will lead to a Fail to Feed (FTFD) malfunction.

NOTICE Brand new magazines may be difficult to fully load. If this is the case, load to 20 or 25 rounds for the first 5 to 10 uses before fully loading the magazine.

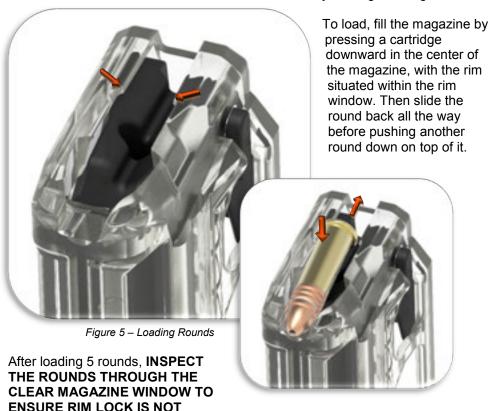

OCCURING (Figure 5). The first two rounds to be loaded should be pushed to the outside of the magazine, and the other rounds above it should stagger evenly. Also verify that the rim of each round is in front of the rim of the round directly below it. If a round is not in the correct place, you can use the windows on the side to correct the placement, and then tap the side of the magazine onto a table or similar hard object to re-seat the rounds.

Do not load more than 33 rounds in the magazine. The last round should be on the left side of the magazine when 33 rounds are loaded. Before using this magazine, **ALL LOADED ROUNDS MUST BE CASCADING** correctly so that the rim-lock does not occur, as shown in Figure 6.

Cheap, bulk pack ammo with cartridges that are too short, and/or bullets that can twist and wobble in the case will not feed correctly from the specially designed double stack magazine.

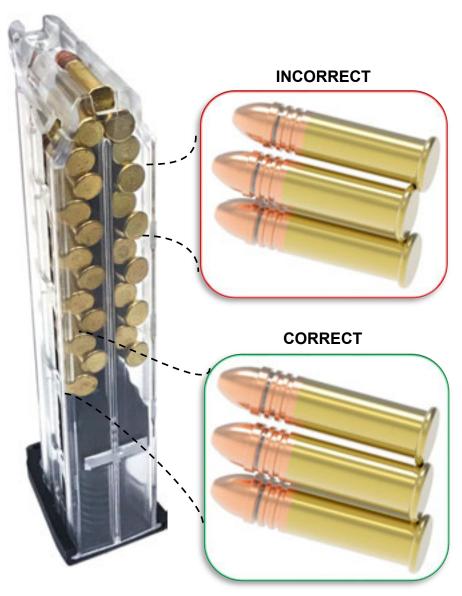


Figure 6 – Proper Stacking

Always check that the ammunition is clean, undamaged, and the correct caliber for the pistol. Forcing substandard ammunition into the chamber could result in damage to property, damage to your firearm, serious injury, or death.

- 1. Insert the loaded magazine into the bottom of the grip of the firearm, then firmly slap the butt of the magazine until a "click" is heard to ensure it is fully seated.
- To chamber, hold the firearm in your shooting hand with the safety lever on SAFE (lever up), keep the muzzle pointed in a safe direction and your finger outside the trigger guard, pointing forward. Grab the operating handle and firmly pull all the way back and release. Releasing the operating handle on its own power will allow the bolt to properly chamber a round, while slowly guiding it closed may cause a malfunction.

A ROUND IS NOW CHAMBERED IN THE PISTOL. ENSURE SAFETY IS ENGAGED UNTIL THE FIREARM IS TO BE FIRED.

Always position the safety button upward in the **SAFE** position when loading and unloading the firearm!

II. UNLOADING

Always make sure the muzzle is pointed in a safe direction when unloading.

- 1. Remove the magazine by squeezing the magazine catch button and pulling out the magazine by its base plate in one motion.
- 2. Grab the operating handle, pull and hold it all the way back in one fast motion to eject any round in the chamber. While holding the action back, use your thumb to slide and hold the bolt stop button up. Now slowly release the operating handle and it should be held open by the bolt stop.
- 3. Sweep the safety lever up for **SAFE**.
- 4. Turn the CP33 to the side, visually and physically inspect the chamber, bolt, and magazine well to make sure no cartridges are left in the action.

AWARNING When the bolt is in the locked position an accidental release can cause severe injury.



Figure 7 – Round Removal

5. To close the action, pull back on the operating handle and **SLOWLY** follow it forward. It is not recommended that you release the bolt to slam closed on an empty chamber, as this puts extra stress on the bolt and barrel where they contact.

To unload a full or partially full magazine, use a cartridge or small tool to push each round forward and out of the magazine. Continue until all rounds are pushed out.

III. SIGHTS

The CP33 sights come from the manufacturer with a general alignment. It is always best to accurately align and zero your sights. The rear sight screw adjusts for windage/horizontal alignment and the center sight screw adjusts for elevation/vertical alignment. To make horizontal adjustments; shift the rear sight to

the right for the shot group to shift right and the opposite for moving the group left. To make vertical adjustments; shift the rear sight up for the shot group to shift up and the opposite for moving the group down.



Figure 8 - Sight Alignment and Adjustment

IV. FIRING

AWARNING Never discharge a firearm without proper shooting glasses and ear protection.

AWARNING Never shoot until you are sure of your backstop and what lies beyond it.

AWARNING Never shoot at a hard surface, such as a rock, or a liquid surface, such as water, because a bullet may ricochet and travel in any direction, striking you or someone else.

When firing on a target range, be alert and follow the range officer's commands. Always be aware of other people so that they cannot accidentally walk into the line of fire. Make sure your "audience" is always at least 5 feet behind you, not next to you, when firing.

Always carry the CP33 unloaded while on a range until preparing to fire. Always keep the CP33 pointed towards the backstop and/or safe direction when loading, firing, and unloading it.

After firing several rounds, the exterior metal parts of the CP33 get very hot and can cause severe burns if touched.

The CP33 ejects spent cases outwards to the right side. Even after limited firing those cases are hot and can cause burns if contacting unprotected skin.

AWARNING The CP33 is a very short firearm. Make sure you have a firm grip of the handle and at no time extend fingers or body parts in the line of fire.

Once all warnings are understood and implemented, prepare to fire:

- 1. Center the front sight in between the rear sight notch and align the sights as shown in Figure 8. Take aim at the target while also taking notice of the target's backdrop.
- 2. Disengage the safety by sweeping the safety lever down with your thumb.
- 3. Place trigger finger into the trigger guard.
- 4. WHEN THE TRIGGER IS PRESSED, THE CP33 WILL FIRE. Slowly squeeze the trigger until a round is fired. Upon firing, the bolt moves rearward extracting and ejecting the empty case, and also returns to the forward position feeding another round automatically. Release the trigger and you are ready to fire another round.

- 5. To fire another round, squeeze the trigger. This sequence can be repeated until the last round has been fired. The bolt will automatically lock back after the last round is fired. After the magazine is emptied, sweep the safety lever up to **SAFE** with your thumb.
- 6. Remove the empty magazine (pg. 11). If you wish to continue firing, insert a loaded magazine, and slap the butt of the magazine to ensure it is fully seated. Then push down the slide release or pull back and release the operating handle to chamber another round.
- 7. If you are finished firing, place the firearm on **SAFE**, remove the magazine, and ensure the chamber is empty. Then pull the operating handle back and **SLOWLY** follow it forward.

BREAKDOWN

I. DISASSEMBLY

Remove the magazine, verify that the chamber is unloaded, and remove all live ammunition from the area before disassembling the CP33 to reduce the chance of a negligent discharge. Never rely on your memory to determine whether the CP33 is loaded or unloaded. Always open the action and then visually and physically (with your finger) check to make sure there is not a round in the chamber.

Always wear safety glasses when disassembling the CP33 to protect your eyes from components that are under pressure, such as springs.

▲ WARNING If the CP33 has been fired, wait a sufficient amount of time for the components to cool before attempting disassembly. Failure to do so may result in burns.

NOTICE For disassembly, the CP33 safety lever should be in the **SAFE** position and the firearm should be cleared following the unloading procedure on pg. 11.

A. REMOVAL OF THE GRIP ASSEMBLY

- Push out and remove the assembly pin (a small pointed object may be necessary to start the pin out). The pin has a large head on one side, push on the opposite side of where that large head is.
- 2. Remove the grip assembly by sliding the grip straight back at least one inch, and then pull it away from the barrel assembly as shown in Figure 9.



Figure 9 – Grip Removal

B. REMOVAL OF THE BOLT ASSEMBLY

- Position the barrel assembly upside down, resting on the sights. Pull the operating handle back, away from the barrel and the bolt assembly should come out.
- 2. Grab the bolt and lift it off of the operating handle.
- 3. This is as far as the KelTec recommends field stripping the CP33. From this point, the cleaning procedure can be implemented as needed.

EXECUTE: Further disassembly should only be performed by a certified gunsmith or Kel-Tec CNC Industries, Inc. Attempting further disassembly may void your warranty.

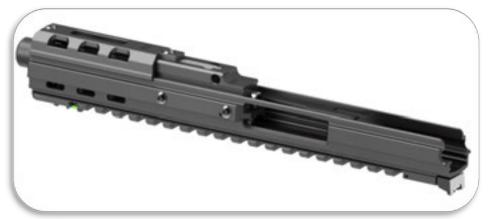


Figure 10 - CP33-1105 Barrel Assembly



Figure 11 - CP33-1325 Operating Handle Assembly



Figure 12 - CP33-1521 Bolt Assembly



Figure 13 - CP33-1605 Grip Group

II. ASSEMBLY


Always wear safety glasses when reassembling the CP33 to protect your eyes from springs.

Assembly is essentially disassembly in reverse, however some steps warrant extra attention.

A. INSERTING BOLT ASSEMBLY

- 1. Verify that no round is in the chamber.
- 2. Position the barrel assembly upside down, resting on the sights.
- 3. With the operating handle upside down (the metal frame should be most visible) insert the operating handle about a quarter of an inch (6.35mm) into the lowest slot in the upper.

- 4. With the bolt assembly also upside down, drop the bolt onto the operating handle and slide it forward into the barrel assembly. The slots in the bolt should line up with the rails in the upper.
- 5. Continue to slide the bolt into the upper until the buffer is near the upper, the operating handle should move with the bolt.

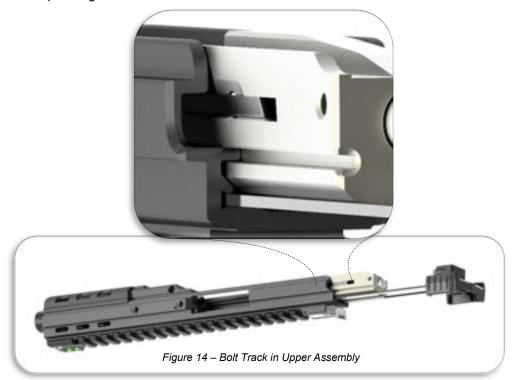

6. Push the buffer forward a little while holding the operating handle before the buffer goes into the upper so that the slots in the buffer align with the rails in the upper.

B. INSTALLING THE GRIP ASSEMBLY

- 1. Verify that no round is in the chamber, the hammer is cocked, safety is on SAFE, and that no magazine is present in the grip assembly.
- 2. Position the grip onto the bottom of the upper assembly, as shown in Figure 9 (pg. 15).
- 3. Slide the grip forward onto the barrel assembly until the assembly pin hole aligns with the hole in the barrel assembly. Insert the assembly pin from either side of the grip.
- 4. **VERIFY FUNCTION.** Use operating handle to cycle bolt smoothly.

III. PROPER CARE

A. MAINTENANCE

Always wear safety glasses when cleaning the CP33 to protect your eyes from cleaning materials.

Always make sure that no ammunition is located in the area where you clean the CP33. Cleaning solvents can affect the primer and powder in ammunition which cause it to malfunction. This could result in a bullet being pushed into the barrel of the CP33 and getting stuck. Firing another round with a bullet stuck in the barrel could cause the barrel to burst and result in death or serious personal injury and/or damage to the CP33.

AWARNING If the CP33 has been fired, wait a sufficient amount of time for the components to cool before attempting disassembly. Failure to do so may result in burns.

Your CP33 is a precision instrument and will provide a lifetime of faithful service if it is properly cleaned and maintained. It is recommended that you clean your CP33 after every shooting session or more frequently if needed. Be sure to unload your CP33 (see Unloading on pg. 11) before performing any cleaning or maintenance procedures.

NOTICE Only use commercially available gun solvent and gun oil or a cleaner-lubricant-preservative. Use of improper cleaning fluids could damage the CP33 and void the warranty.

NOTICE DO NOT USE solvent on the clear polymer portion of the magazine. Only use soap and water.

- 1. Disassemble the CP33 (see Disassembly on pg.15).
- 2. Thoroughly clean all exterior sides of the bolt with solvent and brush.
- 3. Brush the barrel bore and chamber with a good powder removing solvent and bore brush. Wipe the areas clean with patches or a swab.
- 4. Using a small brush dipped in solvent, remove all deposits from around the breech of the barrel as well as all adjacent areas that have been subjected to powder or primer residue.
- Clean the magazines with soap and water (no solvent) and brush if needed.

B. LUBRICATION

After cleaning the entire gun, use a cloth to apply a light coating of high quality gun oil to all interior and exterior metal surfaces and wipe clean. Manually cycle the action back and forth to check the function of the firearm. If any parts are damaged or badly worn or the firearm does not work correctly, the firearm should not be fired and should be returned to KelTec for servicing immediately.

AWARNING Discharging a firearm with oil, grease, or any other material even partially obstructing the bore could result in serious injury, damage to your firearm, and death.

C. TROUBLESHOOTING

Proper functioning of your firearm is directly related to proper maintenance and care as well as the quality of ammunition you use. If in the unlikely circumstance your CP33 malfunctions, we have included a list of several suggested remedies below. In the case of malfunctions beyond the scope of the stated failures below, Contact KelTec Service at: www.keltecweapons.com/contacts. If the CP33:

Failure to Fire (FTFR):

Also known as a dud or misfire. This occurs when the round feeds correctly in the chamber, the trigger is pulled, but the primer in the round is not discharged. Point the barrel of the CP33 in a safe direction, engage the safety if possible. Otherwise the hammer is down and the safety may not engage. For either scenario, wait at least 1 minute before fully cycling the action and ejecting the round.

Remove the magazine, eject the round and set aside. Load the magazine
and proceed to fire as normal. Fire one round to see if the failure repeats.
If it does not, fire a couple more, and if they are without failure the FTFR
round that was set aside is a faulty round and should be DISPOSED OF
PROPERLY. If the FTFR continues to occur with successive rounds then it
is likely that a thorough cleaning is required to ensure proper contact
between the hammer and the round.

Failure to Feed (FTFD):

This type of failure occurs when the cartridge does not fully seat in the chamber.

 It is most like that the chamber, feed ramp, recoil spring and/or the magazine/spring need to be cleaned. Properly clean and lubricate the pistol.

Failure to Eject (FTEJ):

When an empty cartridge does not fully exit the pistol but leaves the chamber it is an FTEJ.

Rotate the CP33 with the ejection port downward, pull back and release
the operating handle. The cartridge should eject and a new round should
feed into the chamber. Proceed to fire and see if the problem repeats, if so
the chamber and bolt need to be cleaned.

Failure to Extract (FTEX):

This failure occurs when the spent cartridge is not removed from the chamber.

 A faulty round could expand and get stuck in the chamber. The barrel could also be dirty and require cleaning. Additionally, check the extractor for visible damage and make sure that the spring is working.

CUSTOMER SERVICE

I. SERVICE/ REPAIR

Always make sure the CP33 is unloaded before sending it in for service.

If your CP33 ever requires adjustment, refinishing or repair, it should be returned to Kel-Tec CNC Industries, Inc.'s service department. The unloaded firearm should be sent prepaid shipping charges to:

Kel-Tec CNC Industries, Inc. ATTN: Service Department 1505 Cox Road

Cocoa, FL 32926

Contact your chosen carrier to determine its requirements for shipping firearms. In certain states, your firearm may have to be returned to you through a local, federally licensed firearms dealer. Be sure to securely package your firearm and insure it for its full value because Kel-Tec CNC Industries, Inc. is not responsible for firearms lost or damaged during shipment.

To ensure prompt service and handling, include a brief letter including your name, address, telephone number, the serial number of your CP33, and what you would like to be done with it, or the issue that you would like addressed. No return authorization number is required. Once your firearm has been received, we will provide a quotation of all charges (unless the repairs are covered by the warranty) and will not begin work until we receive your approval. Charges for adjustments, refinishing, and repairs are payable by money order, Master Card, Visa or American Express. No COD or personal checks are accepted.

II. LIMITED LIFETIME WARRANTY

Subject to the terms, conditions and limitations outlined below, Kel-Tec CNC Industries, Inc. guarantees your CP33 against defects in materials and workmanship for the lifetime of the original consumer purchaser. To make a claim under this warranty, return your CP33 pursuant to the instructions above and include a copy of a bill of sale in your name, or a copy of the 4473 form, showing that you are the original consumer purchaser. For repairs that are covered by the warranty, Kel-Tec CNC Industries, Inc. will pay the transportation and insurance charges to return your CP33.

LIMITATIONS OF WARRANTY

The warranty will be void if any of the following occur:

- (1) the instructions in the Instruction Manual are not followed;
- (2) the CP33 or any of its parts are altered or modified from their original state:

(3) damage is caused by misuse, abuse or improper maintenance; or

(4) the CP33 is disassembled beyond the breakdown procedure listed in the Instruction Manual.

There are no warranties which extend beyond the description on the face hereof.

The sole and exclusive remedy pursuant to this warranty is the repair or replacement of the CP33, at the sole discretion of Kel-Tec CNC Industries, Inc.

The implied warranties of merchantability and fitness for a particular purpose are expressly disclaimed.


All disclaimers and limitations of liability shall still apply even if the limited remedy of repair and replacement fails of its essential purpose.

In States where permitted, Kel-Tec CNC Industries, Inc. assumes no liability for incidental or consequential damage or for incidental expenses.

Any action against Kel-Tec CNC Industries, Inc. based on an alleged breach of this warranty must be brought within one (1) year of the claimed breach.


Kel-Tec CNC Industries, Inc.'s liability for breach of warranty shall be limited to repair or replacement of the CP33, at the sole discretion of Kel-Tec CNC Industries, Inc.

The CP33 is a dangerous firearm. The purchaser assumes all liability resulting from unsafe handling or any action that constitutes a violation of any applicable laws or regulations. KelTec will not be responsible for injuries or damages resulting from careless handling, unauthorized or unsafe adjustments or modifications, the use of non-standard, defective, or improper ammunition, the use of incompatible or improperly installed accessories, corrosion, neglect, fire damage, water damage, theft, abuse, ordinary wear and tear, or unreasonable use of the CP33. Under no circumstances shall KelTec be responsible for incidental or consequential damages with respect to economic loss or injury or property damage, whether as a result of breach of express or implied warranty, negligence or otherwise.

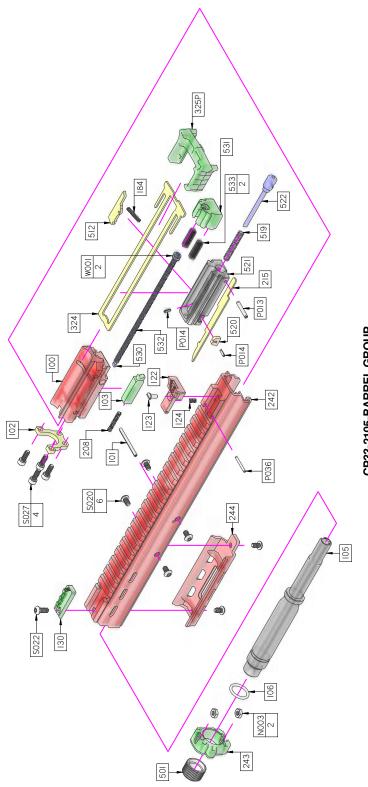

CP33-2105-BARREL GROUP

CMR-30-101	TRUNNION PIN	1	[P33-123	REAR SIGHT SCREW	1	CP33-325P	OPERATING HANDLE GRIP	1	FAS-N003	6-32 X 1/4 NUT	2
EMR-30-106	Barrel o-ring	1	FB33-124	REAR SIGHT SPRING	1	[P33-501	THREAD PROTECTOR	1	FAS-P013	3/32 X 5/8 CSP	1
EMR-30-512	EXTRACTOR	1	[P33-130	FRONT SIGHT	1	[P33-520	BOLT CATCH PLATE	1	FAS-P014	1/16 X 1/4 SSP	2
EMR-30-519	FIRING PIN SPRING	1	[P33-208	ASSEMBLY PIN CATCH SPRING	1	[P33-521	BOLT	1	FAS-P036	1/16 x 5/8 SSP	1
[P33-100	TRUNNION	1	[P33-215	EJECTOR	1	[P33-522	FIRING PIN	1	FAS-S020	6-32 X 1/4 BHS	9
[P33-102	SHORT BARREL CLAMP	1	Cb33-242	UPPER EXTRUSION	1	[P33-530	GUIDE ROD	1	FAS-S022	6-32 X 3/8 BHS	1
[P33-103	ASSEMBLY PIN CATCH	1	E47-E6J]	BARREL BLOCK	1	[P33-531	BUFFER	1	FAS-S027	6-32 X 3/8 SHS	+
CP33-105	Barrel 5	1	CP33-244	BOTTOM COVER	1	CP33-532	RECOIL SPRING	1	FAS-W001	WASHER	2
[P33-122	REAR SIGHT	1	LP33-324	OPERATING HANDLE FRAME	1	[P33-533	BUFFER BUMPER	7	PMR-30-184	EXTRACTOR SPRING	1

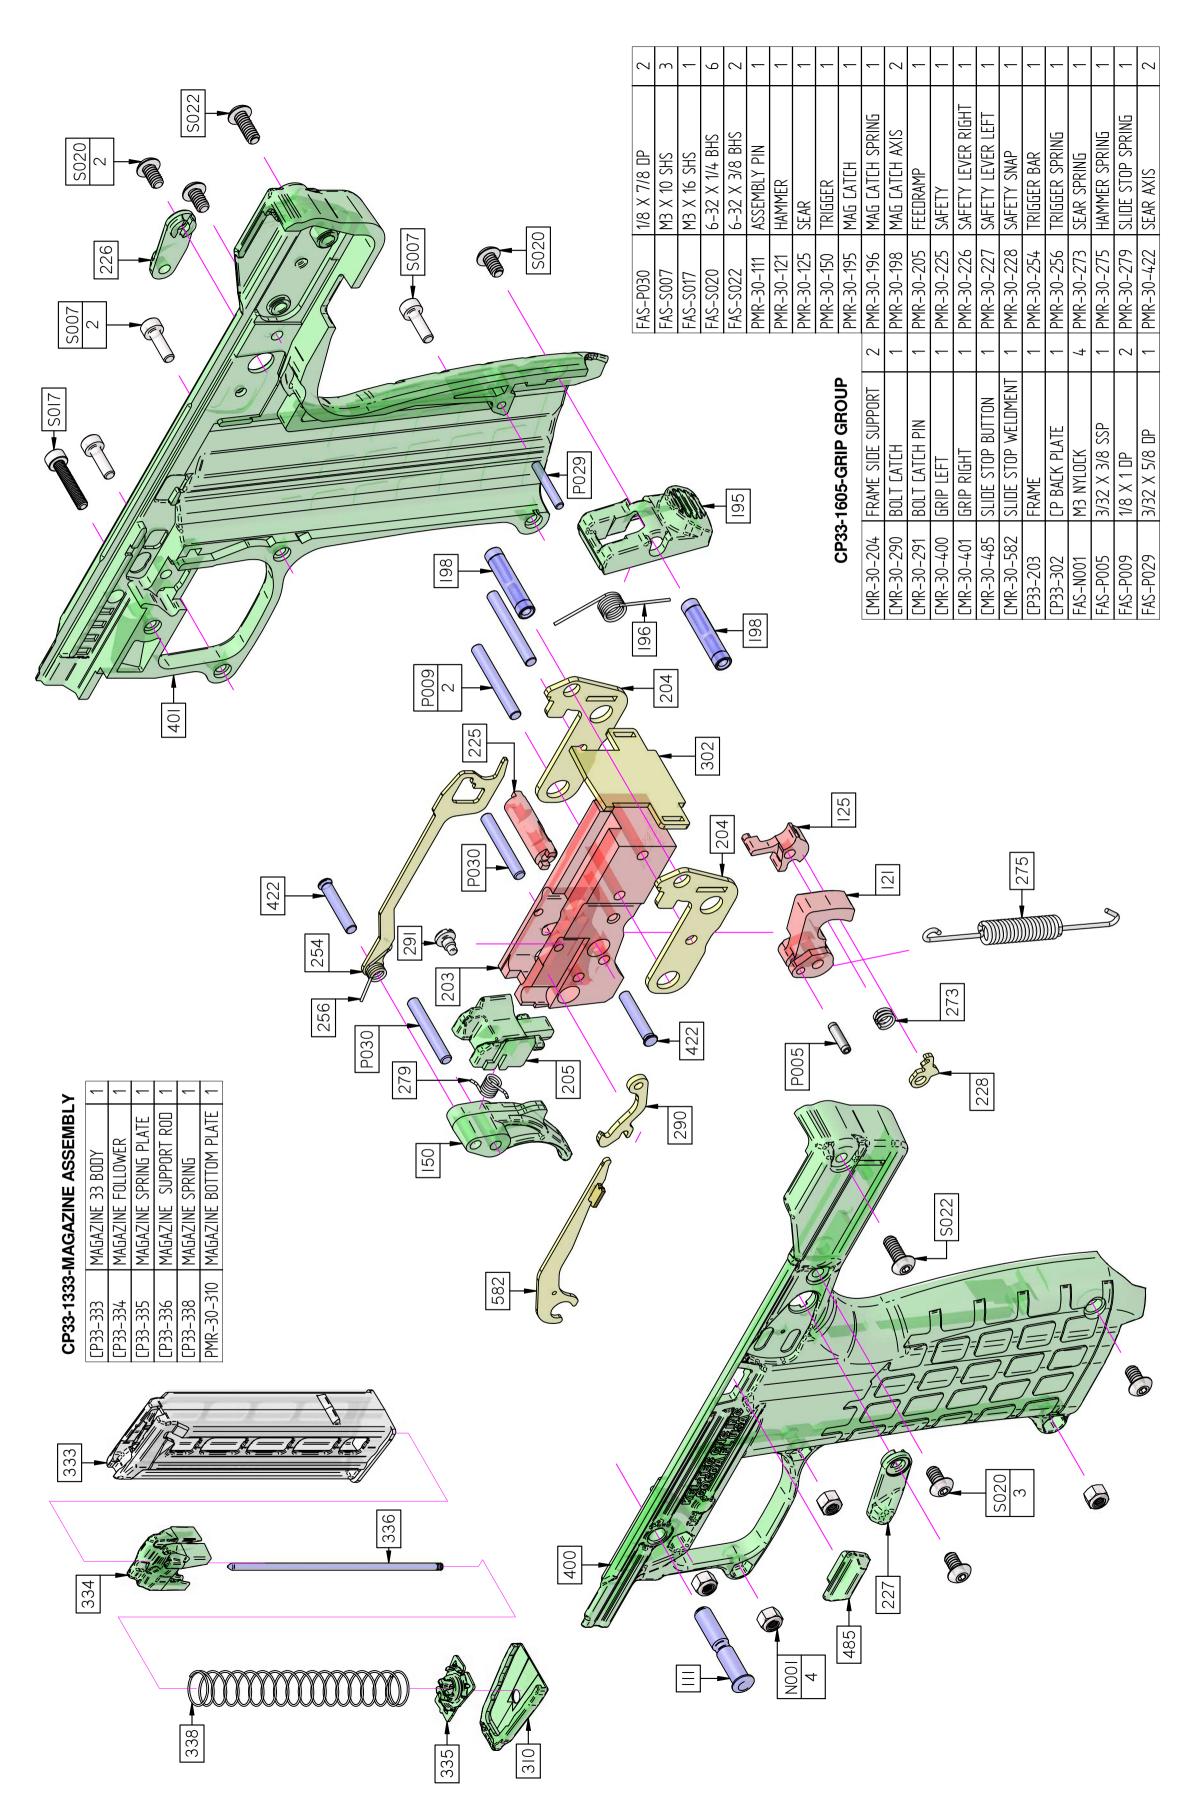



1505 Cox Rd Cocoa FL 32926 p: 800.515.9983 f: 321.631.1169 e: info@keltecweapons.com

KELTECWEAPONS.COM