



**Witness Pavona**

**Semi-Automatic Pistol**  
Instruction & Maintenance Manual



**WARNING**

**Do Not Use +P Ammunition or High Velocity High Pressure Ammunition (factory or handloaded)**

**ALWAYS KEEP MUZZLE POINTED IN A SAFE DIRECTION**

**WITNESS PAVONA SEMI-AUTOMATIC PISTOL  
WARNING AND INSTRUCTION MANUAL  
PLEASE READ THESE INSTRUCTIONS**

FOR YOUR SAFETY AND THE SAFETY OF OTHERS, this owner's manual contains important warnings, instructions and safety procedures which must be understood BEFORE using this firearm. Read the ENTIRE MANUAL you do not understand any part of it or the operation of your pistol, stop and seek professional firearms instructions. You can get a copy of this manual from Pavona upon request.

Record the serial number, seller name/purchase date and a description of your firearm (located on the receiver on the right hand side):

---

Serial Number

---

Seller and Purchase Date

---

Description

Make a copy of this manual and proof of purchase/sales record for safekeeping in a secure safe or fireproof container. Such proof is necessary if the firearm is damaged, stolen or sent in for warranty repair.

We've included an Owner's Card for you. We recommend you fill in the white block with the serial number of your firearm. Keep the card in a secure place separate from your firearm.



# READ MANUAL ENTIRELY BEFORE USING THIS FIREARM

**⚠ WARNING**  
**\*\*YOU RISK PERSONAL INJURY OR**  
**DEATH BY HANDLING THIS FIREARM\*\***

Before handling any firearm, make sure you know the safety procedures and most importantly, keep the firearm pointed in a safe direction.

Before handling this firearm, read, understand and follow the instructions in this manual. Always keep this manual with the firearm. If you lend, give or sell this firearm, be sure the manual goes with it. If there is anything you do not understand, seek advice from someone qualified in safe handling of firearms. You must ALWAYS obey the following warnings, instructions and safety procedures:

1. Always keep the muzzle pointed in a safe direction.
2. Firearms should be unloaded and secured when not actually in use.
3. Don't rely on your firearm's safety.
4. Be sure of your target and what is beyond it.
5. Use only proper ammunition matching the precise caliber of your specific pistol.
6. If your pistol fails to fire when the trigger is pulled, handle with care.
7. Always wear ear and eye protection when shooting.
8. Be sure the barrel is clear of obstructions before shooting.
9. Don't alter or modify your firearm. Have it serviced regularly.
10. Learn the mechanical and handling characteristics of your pistol.
11. Shoot sober!



# ALWAYS KEEP MUZZLE POINTED IN A SAFE DIRECTION

## TYPE OF AMMUNITION TO BE USED

It is suggested that high quality commercially manufactured ammunition be used in this firearm. Avoid military surplus or old ammunition as it may not fire with sufficient force to expel the projectile from the barrel. The use of reloaded, high pressure or hand-loaded ammunition can be dangerous and will void the warranty.

**LEAD WARNING:** The actual firearm does not contain any lead; however, it does fire ammunition which contains lead or lead compounds known to the State of California to cause cancer, birth defects, reproductive toxicity, and other serious physical injury. Those who discharge a firearm, stand near someone who discharges a firearm or clean firearms are hereby warned of the dangers presented by lead and lead compounds and should take protective health measures. Avoid exposure to lead while handling and wash your hands after contact. Proper air ventilation is absolutely necessary when shooting indoors.



**WARNING:** These products can expose you to chemicals including LEAD, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).



**ADVERTENCIA:** Este producto puede exponerle a químicos incluyendo PLOMO, que es conocido por el Estado de California como causante de cáncer y defectos de nacimiento u otros daños reproductivos. Para mayor información, visite [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

## NOTICE

SEMI-AUTOMATIC PISTOLS ARE CLASSIFIED AS FIREARMS OR DANGEROUS WEAPONS and are sold by Pavona with the specific understanding that we are not responsible in any manner whatsoever for their safe handling or resale under local laws and regulations. Pavona shall not be responsible in any manner whatsoever for malfunctioning of the firearm, for physical injury or for property damage resulting in whole or in part from (1) intentional or negligent discharge, (2) improper or careless handling, (3) unauthorized modifications and/or alteration of the internal/safety mechanisms, (4) defective, improper, high pressure, handloaded, or reloaded ammunition, (5) corrosion and/or lack of proper maintenance, (6) neglect, or (7) other influences beyond our direct and immediate control. This limitation applies regardless of whether liability is asserted on the basis of contract, negligence or strict liability (including any failure to warn). Under no circumstance shall Pavona be liable for incidental or consequential damages, such as loss of use of property, commercial loss and loss of earnings or profits.



# READ MANUAL ENTIRELY BEFORE USING THIS FIREARM

## FOLLOWING THESE SAFETY RULES CAN SAVE YOUR LIFE OR THE LIFE OF SOMEONE ELSE

Get competent firearms instruction in safe handling before using this firearm. Please ask your dealer for names of qualified instructors near you. All guns are extremely dangerous if carelessly handled or used. Remember that the firearm user is the primary “safety” and that reliance on any mechanical safety device should never replace safe handling procedures.

This firearm **WILL FIRE** if a cartridge is in the chamber and the trigger is pulled while the safety is disengaged.

**DO NOT LOAD THIS PISTOL UNTIL YOU UNDERSTAND HOW IT OPERATES.** KEEP this pistol unloaded at all times except when you are ready to fire and are sure of your target.

**ALWAYS** carry this pistol unloaded in a case or original box.

**NEVER** point this pistol at anything that is not your intended target even if the pistol is unloaded. When loading, unloading, cleaning or handling, always be sure the muzzle is pointed in a safe direction and always keep your finger off the trigger.

**NEVER** assume any gun is unloaded. Before handling, check to make sure the chamber is empty. See Unloading Instructions. Make sure you know that this or any firearm is fully unloaded before displaying or handling it. When handling any firearm, keep your fingers away from the trigger at all times until you intend to fire.

Get instructions from a competent firearms instructor before using this or any firearm. Learn from a professional how to handle, load, unload, operate, fire and care for your gun.

**NEVER PLAY** with your firearm. It is not a toy and can be a very dangerous weapon that can cause serious personal injury or death.

Always keep the gun pointed in a safe direction. Treat every gun as if it is loaded ... all the time. **NEVER** point any firearm (loaded or unloaded) at any person or anything you do not intend to shoot. Always keep your gun unloaded until ready to use and make sure that it is unloaded before cleaning.



# ALWAYS KEEP MUZZLE POINTED IN A SAFE DIRECTION

## FOLLOWING THESE SAFETY RULES CAN SAVE YOUR LIFE OR THE LIFE OF SOMEONE ELSE

Keep your finger OFF the trigger until you are actually aiming at the target and ready to shoot. Learn to rest your finger outside of the trigger guard.

Never rely on a gun's "safety" to protect you from unsafe gun handling. A safety is only a mechanical device, not a substitute for using common sense and following gun safety procedures.

Never leave a gun unattended or where it could fall.

Store guns and ammunition separately beyond the reach of children. Make sure that they are properly secured so untrained individuals and children will be denied access to your guns and ammunition.

Test your gun's operation and safeties only at a shooting range while the firearm is pointed in a safe direction.

Know your target and what is beyond. Ask yourself what your projectile will hit if it misses the target or passes through the intended target. Remember, a fired projectile can travel over a mile (including a ricochet) and is capable of going through walls. Never shoot at hard flat surfaces or water ... bullets ricochet.

Guns and alcohol or drugs do not mix. Don't take any alcoholic beverages and/or drugs before or during shooting activities.

Never pull a gun toward you by the muzzle. Don't climb a tree, cross a ditch or fence with a loaded gun.

Always empty guns before entering a house, car, truck, boat, RV, camp or any building.

When receiving a gun, always open the action and check to make sure the chamber is unloaded.

**NEVER** accept anyone's word that a gun is "unloaded" or "empty." You should immediately open the action and check to make sure it is unloaded.



# READ MANUAL ENTIRELY BEFORE USING THIS FIREARM

## FOLLOWING THESE SAFETY RULES CAN SAVE YOUR LIFE OR THE LIFE OF SOMEONE ELSE

Be careful with **ALL** ammunition. Even “blank” cartridges are deadly at close range due to the muzzle blast. Make sure your ammunition is new and in good clean condition. Do **NOT** oil or grease ammunition as this may damage the cartridge primer. Do **NOT** tamper with or alter the standard factory ammunition.

Keep firearms unloaded when not actually in use. Load the gun only when on the range preparing to fire and unload it before leaving the range.

Never put your hand over the muzzle of a gun.

**ALWAYS WEAR** protective shooting glasses and hearing protection when using firearms.

Spectators should be at least 10 feet behind and away from the shooter while the shooter is loading, shooting and unloading.

Spectators should wear protection for hearing and sight loss and they should avoid distracting those shooting their firearms.

Never drop your gun. If you do drop it, unload it and check it for proper function before using it again.

Do **NOT** alter or modify your gun. Don't try to change your gun's trigger pull, because it may affect sear engagement and thereby cause accidental firing.

Do **NOT** remove any internal safety or safety device on the firearm. Safety mechanisms are designed to help protect you from personal injury or death.

Properly maintain and keep your gun clean. Keep in a dry place away from other metals and water. If your gun shows sign of corrosion or improper operation, have it serviced by a competent gunsmith.

Keep the muzzle pointed in a safe direction when loading and unloading your gun. Never point the muzzle at anyone.

# ALWAYS KEEP MUZZLE POINTED IN A SAFE DIRECTION

## FOLLOWING THESE SAFETY RULES CAN SAVE YOUR LIFE OR THE LIFE OF SOMEONE ELSE

If a gun fails to fire when the trigger is pulled, keep it pointed down range at the target for 60 seconds. Sometimes slow primer ignition will cause a “hang fire” and the cartridge will go off after a short pause. If it still fails to fire, keep muzzle pointed in safe direction and avoid exposure to the breech, as you attempt to unload your firearm.

Never let water, snow, mud or other material enter the barrel. Always be sure the barrel is free of any obstruction.

Use the correct ammunition for your firearm. (See Ammunition Warning)

### Teach children:

1. **NOT** to touch guns, bullets, cartridges, shells, flares or any explosive device;

and

2. That if they discover such a dangerous item or weapon, they must not touch it and must immediately report its location to their parents, school, teacher or police or other adult authority.

Remember a firearm has the capability of taking your life or the life of someone else. Be careful with your firearm - an accident is almost always the result of not following basic safety rules.





# READ MANUAL ENTIRELY BEFORE USING THIS FIREARM

## USE THE SECURITY LOCK PROVIDED WITH YOUR PISTOL

This pistol comes with a security lock to assist in protecting against unauthorized use. The pistol must be unloaded when the security lock and block are in place on the pistol or if the pistol is locked in its carry case. See Figure 1.

### ⚠ WARNING

Using the security lock and block or lockable case cannot substitute for securing your firearm and ammunition in separate, locked locations.

The security lock operates as follows:

A) Remove security lock and block from its package that came with the firearm.

B) Install security lock on plastic box with gun inside and magazine removed See Figure 2.

or

C) Install block on trigger and then install security lock on the security block, See Figures 3(a, b, c).

### ⚠ WARNING

Always store the key to the security lock: (1) in a separate location away from the pistol; (2) in a secure location unknown and not accessible to others, especially children. Whether you secure your firearms by using the supplied security lock, a gun lock or safe or some other mechanism, it is YOUR RESPONSIBILITY to store your firearms in such a manner that children and other unauthorized persons cannot gain access to them.



Figure 1



Figure 2



Figure 3c



Figure 3b



Figure 3a

# ALWAYS KEEP MUZZLE POINTED IN A SAFE DIRECTION

**USED FIREARMS** - Firearms are sometimes altered to work incorrectly, or parts may be removed, lost or replaced with incorrect parts. If you bought your Pavona firearm as a used gun, **BEFORE USING IT** you should take it to a good gunsmith who knows Pavona firearms, and have him examine it.

WRITE PAVONA concerning any items or circumstances that you do not understand and which might relate to your safety and the operation of your firearm at:

Pavona  
1426 King Street  
Cocoa, FL 32922  
(321) 639-4842.

## **WARNING** (POTENTIAL OBSTRUCTIONS)

**BEFORE LOADING** or firing a pistol, examine the bore and the firing chamber to be certain they are clean and free of any obstruction. Even a heavy coat of oil, grease, snow or water may result in damage to the firearm and injury to the shooter and/or persons near the firearm. A misfire or unusual sound upon firing is a signal to cease firing and to examine the chamber and bore. If there is any obstruction, clear the obstruction and clean the bore and chamber before firing.

Any bore obstruction, even if it is only partly blocked, may cause the gun to blow up if it is fired, or may cause damage to the gun such as a bulged barrel. To avoid injury or death to the shooter or bystanders, check the barrels before shooting or if a shot does not sound normal.

## **WARNING**

Always keep the muzzle pointed in a safe direction! Never attempt to load or unload any firearm inside a vehicle, building or other confined space (except a properly constructed shooting range). Enclosed areas frequently offer no completely safe direction in which to point the firearm. If an accidental discharge occurs, there is great risk of death, personal injury or property damage. Before loading, always clean all grease and oil from the bores and chambers, and check to be certain that no obstructions are in the barrel. Any foreign matter in the barrels could result in a bulged or burst barrel or other damage to the firearm and could cause serious injury to the shooter or to others.



## **WARNING**

If there is any reason to suspect that a projectile is obstructing the barrel, immediately unload the firearm (See Unloading Instructions) and check the chamber and the bore. A projectile or some other matter may be lodged some distance down the barrel where it can not easily be seen. Check the bore by using a cleaning rod to pass through the barrel.

If a blockage is in the bore, **DO NOT ATTEMPT TO SHOOT IT OUT WITH ANOTHER CARTRIDGE, OR BLOW IT OUT WITH A BLANK CARTRIDGE OR A CARTRIDGE FROM WHICH THE BULLET HAS BEEN REMOVED. SUCH TECHNIQUE(S) CAN GENERATE EXCESSIVE PRESSURE, DAMAGE THE FIREARM AND CAUSE SERIOUS PERSONAL INJURY.**

## **WARNING** (EYE AND EAR PROTECTION)

When shooting, full eye and ear protection is mandatory at all times. Shooters and spectators must wear shooting glasses and hearing protection to prevent eye injury and hearing loss. Vision and hearing impairment can occur with only one moment of non-protection.

## **WARNING** (MECHANICAL MALFUNCTIONS)

**STOP SHOOTING IMMEDIATELY AND UNLOAD YOUR FIREARM** if your firearm develops: a mechanical malfunction; binding or stoppage; spitting powder/gas; a punctured cartridge primer; a bulged or ruptured cartridge case; or a sound on firing does not sound quite right. Do **NOT** try one more shot but unload your firearm and take it and the ammunition to a qualified gunsmith or send the firearm back to Pavona for examination. Do not assume that the pistol is empty merely because you checked the chamber. You must also check the bore for any obstruction inside the barrel.

## BASIC PARTS OF YOUR PISTOL

### EXTERNAL CONTROL PARTS:

**Trigger Block Safety:** The safety mechanism of the pistol provides protection against accidental and unintentional discharge under normal usage when properly engaged and in good working order. The safety mechanism is not a substitute for following safe gun handling rules. Do not disengage the safety unless you are ready to fire the pistol. **MAKE SURE YOU UNDERSTAND HOW THE SAFETY WORKS BEFORE YOU LOAD OR USE THE PISTOL.**

The safety mechanism is a lever located on the side of the pistol's receiver. See Figure 4. The safety may be operated with the hammer cocked (fully back) or not cocked (all the way down) or in the resting position (about half way between fully cocked and not cocked) and with the pistol loaded or unloaded. To place the safety in the "on" or "safe" position, push the lever up so that it covers the red dot. When in the "on" or "safe" position, the safety blocks the rearward motion of the trigger so that it cannot be pulled to the rear thus stopping the movement of the hammer. To place the safety in the "off" or "fire" position, push the safety lever down. When in the "off" or "fire" position, the red dot is exposed. You have now disengaged the safety and the pistol is in the ready-to-fire position. See Figure 5.



Figure 4



Figure 5

**It is always a good idea to make sure the gun is pointed in a safe direction during any safety movement.** See Figure 6.

### **⚠ WARNING**

Do not touch the trigger while moving the safety. When operating the safety, make sure you move it to the full extent of its travel in the desired direction, either fully "on" or fully "off." Half-safe or partially-safe is UNSAFE.



Figure 6

# READ MANUAL ENTIRELY BEFORE USING THIS FIREARM

## ⚠ WARNING

The pistol does not incorporate a magazine disconnect safety, so the pistol may be fired with the magazine removed from the pistol.

## ⚠ WARNING

The pistol is designed to and WILL FIRE when the trigger is pulled and the safety mechanism is in the “off” or “fire” position.

**Your Safety Does:** Lock the sear so the trigger cannot be moved rearward. By blocking the trigger movement the hammer is also blocked from movement. If the hammer is back and the safety is on, you can move the slide to safely check the chamber.

**Firing Pin Block:** The pistol also incorporates an automatic, internal firing pin block which stops the firing pin from traveling forward. The firing pin block is released only by pulling the trigger all the way to the rear as is done in firing the pistol. It is located at the rear of the under-right hand side of the slide, just in front of the firing pin. See Figure 7.

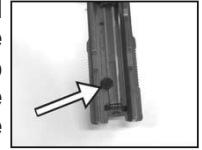


Figure 7

## ⚠ WARNING

Always keep your fingers off the trigger and outside of the trigger guard until you are ready to pull the trigger and fire the pistol.

## ⚠ WARNING

The pistol is designed to and WILL FIRE when the trigger is pulled and the safety mechanism is in the “off” or “fire” position.

## ⚠ WARNING

Always keep the muzzle pointed in a safe direction! See Figure 8.



Figure 8

**Hammer:** Located on the rear of the pistol and used to supply energy to the firing pin to ignite the cartridge primer. See Figure 9.

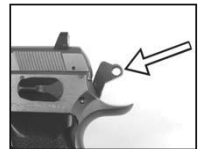


Figure 9

# ALWAYS KEEP MUZZLE POINTED IN A SAFE DIRECTION

## Lowering The Hammer:

### ⚠ WARNING

Make sure the pistol is unloaded (see Unloading Instructions) and pointed in a safe direction!

### ⚠ WARNING

Extreme caution must be used when lowering the hammer as the manual safety and automatic firing pin block are “off” safety when this is being done! If done incorrectly the pistol may FIRE.

### ⚠ WARNING

Your pistol has a resting position or notch on the hammer. This notch is not to be used as a half cock position. This notch's sole purpose is an additional notch on the hammer so as to allow the sear a chance to engage the hammer if the trigger is not pulled fully to the rear.

In order to lower the hammer, first move the safety to the “off” safe position. Grasp the hammer very firmly and put a finger between the hammer and the firing pin. See Figure 10. Then pull the trigger and slowly let the hammer move forward past the resting position. See Figure 11. **RELEASE THE TRIGGER.** Gently let the hammer down against the rear of the slide. See Figure 12. **PUSH THE MANUAL SAFETY LEVER TO THE “ON” OR “SAFE” POSITION.**

**Slide Stop:** Locks the slide back when engaged. It is located on left hand side of the gun. See Figure 13.

**Magazine Release:** Locks or holds the magazine in place and is depressed to release the magazine. See Figure 14.

**Rear Sight:** Drift adjustable, unless the gun is shipped with the optional windage / elevation adjustable sight. See Figure 15.

**Trigger:** A curved trigger is a single action/double action trigger and fires the gun in single action or double action mode. A single action only pistol has a trigger that is straight in shape and only fires the pistol in single action. See Figure 16. (Single action Trigger) See Figure 17. (Single Action / Double Action Trigger)



Figure 10



Figure 11



Figure 12

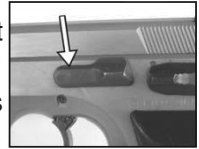


Figure 13

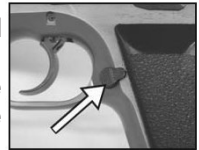


Figure 14



Figure 16

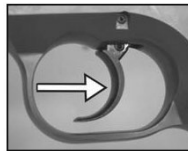


Figure 17



Figure 15

## LOADING AND UNLOADING YOUR PISTOL

### **⚠ WARNING**

Make sure the pistol is pointed in a safe direction and the trigger block safety is engaged at all times while loading and unloading. NEVER allow your fingers or other objects to contact the trigger while loading or unloading.

### **⚠ WARNING**

Do not disengage the trigger block safety until you are ready to fire and have the gun pointed safely downrange.

### **⚠ WARNING**

Do not load pistol until you are ready to fire.

### **TO LOAD THE MAGAZINE:**

1) Press the magazine release button and remove the magazine from the pistol. See Figure 18.



Figure 18

2) Load the cartridges into the magazine. Do NOT force the cartridges into the magazine. Do NOT overload the magazine. See Figure 19.



Figure 19

3) Push the magazine up into the pistol firmly until the magazine catch locks it into place. Do NOT slam the magazine into place. See Figure 20.



Figure 20

### **TO LOAD THE CHAMBER:**

### **⚠ WARNING**

**MAKE SURE YOUR FINGERS ARE OFF THE TRIGGER AND AWAY FROM THE TRIGGER GUARD.**

1) With the gun pointed in a safe direction. Move the safety to the “off” position if the hammer is in the down position or resting position. If the hammer is in the fully cocked position you may bypass this step.



Figure 21

2) Hold the pistol grip with one hand, grasp the rear slide serrations as far back as possible with your other hand. Pull the slide rearward until it cannot travel any farther. See Figure 21.

3) Release the slide and allow it to go forward into the closed position (as powdered by the recoil spring...Do not help/push the slide forward). The slide will automatically take a cartridge from the magazine and load it into the chamber. See Figure 22.



Figure 22

4) Do NOT put your fingers or hand in front of the barrel.

5) Move the safety to the “on” or “safe” position IMMEDIATELY!!!!

### **⚠ WARNING**

**YOUR PISTOL IS NOW LOADED AND READY TO FIRE, IF THE SAFETY IS MOVED TO THE OFF OR “FIRE” POSITION AND THE TRIGGER IS PULLED THE GUN WILL FIRE.**

# ALWAYS KEEP MUZZLE POINTED IN A SAFE DIRECTION

## TO UNLOAD:

Make Sure the Safety is in the "ON" position and the gun is pointed in a safe direction. See Figure 23.

1) Press the magazine release button and remove the magazine from the pistol. See Figure 24.

### ⚠ WARNING

The pistol does not incorporate a magazine disconnect safety, so the pistol may be fired with the magazine removed from the pistol.

### ⚠ WARNING

Removing the magazine does not unload the chamber. If a cartridge is in the chamber the pistol can fire with the magazine removed.

2) To unload the chamber, keep your finger OUT of the trigger guard and OFF THE TRIGGER and move the safety to the off position.... **THE PISTOL CAN NOW FIRE IF YOU PULL THE TRIGGER, SO BE VERY CAREFUL! Make sure your fingers are not in the trigger guard.**

Hold the pistol grip with one hand, grasp the rear slide serrations as far back as possible with your other hand. Pull the slide rearward and eject the cartridge in the chamber. See Figure 25.

3) Engage the slide stop, so that the slide stays in the rearward position. See Figure 26.

4) Visually check the chamber to insure that there is no cartridge in the chamber. See Figure 27.

5) To unload the magazine you press the top cartridge in the magazine down forward and out, repeat this procedure until the magazine is completely unloaded. See Figure 28.



Figure 23



Figure 24



Figure 25



Figure 26



Figure 27



Figure 28





# READ MANUAL ENTIRELY BEFORE USING THIS FIREARM

## FIRING YOUR PISTOL

### **⚠ WARNING**

Never load a cartridge into the chamber until you are ready to fire the pistol.

### **⚠ WARNING**

Do not disengage the trigger block safety until the pistol is pointed in a safe direction and you are ready to fire.

### **⚠ WARNING**

If a cartridge does not fire and the trigger has been pulled and the trigger block safety is disengaged, Stop! Then do the following: a) Make sure the gun is pointed in a safe direction b) Engage the trigger block safety c) Wait 60 seconds d) Follow the instructions above for unloading the pistol.

### **⚠ WARNING**

If during firing the sound of any cartridge is noticeably softer or louder than the previous cartridge fired, Stop! Then do the following: a) Make sure the gun is pointed in a safe direction b) Engage the trigger block safety c) Follow the instructions above for unloading the pistol and d) With the pistol unloaded visually inspect the pistol for barrel blockage or damage. Then inspect the receiver of the pistol for damage before continuing.

**READ, UNDERSTAND AND FOLLOW ALL WARNINGS AND INSTRUCTIONS IN THIS MANUAL BEFORE FIRING THE PISTOL.**

# ALWAYS KEEP MUZZLE POINTED IN A SAFE DIRECTION

## TO FIRE THE PISTOL:

1) Make sure the pistol is pointed in a safe direction with the trigger block safety engaged. See Figure 29.



Figure 29

2) Make sure you are wearing eye and ear protection.

3) Keep your fingers away from the trigger. See Figure 30.



Figure 30

4) Push the trigger block safety to the “off” or “fire” position with the red dot showing. See Figure 31.



Figure 31

5) Squeeze the trigger. The pistol will fire when you pull or squeeze the trigger with the required force.



Figure 32

6) The pistol will fire one shot with every squeeze of the trigger, until the magazine is empty. See Figure 32.

7) When the magazine is empty, the slide will stay open. You may remove the magazine and reload the magazine while the slide is locked open by the slide stop. See Figure 33.



Figure 33

8) Insert the loaded magazine into the pistol. You may either press down on the slide stop or pull slightly back on the slide and release it. The slide will close and reload the chamber. The pistol will then be ready to FIRE. See Figures 34a and 34b.



Figure 34a

## ⚠ WARNING

If you fired the pistol and wish to stop firing, immediately push the trigger block safety to the “on” or “safe” position. Then follow the unloading instructions above while keeping the muzzle pointed in a safe direction.



Figure 34b



# READ MANUAL ENTIRELY BEFORE USING THIS FIREARM

## DIRECTIONS FOR DISASSEMBLY/RE-ASSEMBLY:

1) Make sure the pistol is unloaded (FOLLOW UNLOADING INSTRUCTIONS) and pointed in a safe direction.

2) Pull the hammer back to the full cock position. See Figure 35.



Figure 35

3) Identify the two takedown marks behind the safety lever on the left side of the slide and frame. Pull the slide back slightly and line up the two marks. See Figure 36. HINT: Use the rear sight for leverage when lining up the marks.



Figure 36

4) Remove the slide stoptakedown lever by pushing on the end sticking out of the right side of the pistol and pull on the lever with your other hand. See Figures 37a and 37b.



Figure 37a

5) Slide the Barrel / Slide Assembly forward and off the receiver. See Figure 38.

6) Hold the slide upside down. Retract the recoil spring and guide and remove the recoil spring and guide as an assembly. See Figure 39.



Figure 37b

7) Remove the barrel from the slide. See Figures 40a and 40b.



Figure 38



Figure 39

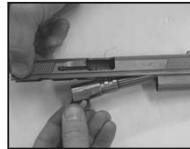


Figure 40a



Figure 40b

8) **NO FURTHER DISASSEMBLY** of the pistol is recommended unless performed by a qualified gunsmith. Remember that work done by others and unauthorized gunsmithing by non-factory personnel will **VOID** the warranty.

9) To reassemble the pistol, simply reverse these procedures.

# ALWAYS KEEP MUZZLE POINTED IN A SAFE DIRECTION

## SAFE USE OF PORTED AND COMPENSATED PISTOLS

If you are shooting one of our WITNESS Ported or Compensated Barrel model pistols in 9mm, 40S&W, .38super, .45ACP, or 10mm you should always wear shooting glasses and hearing protection while shooting these pistols. Gases and small particles of powder may be blown through these openings. You should never shoot these pistols from your side or close to any spectators. See Figure 53 for an example of a ported barrel and Figure 54 for an example of a compensated barrel.



Figure 53



Figure 54

## ⚠ MAUNFACTURER'S WARNING

This firearm was manufactured to properly perform with the original parts as designed. It is your duty to make sure any parts you buy are correctly installed and that neither replacements nor originals are altered or changed. Your gun is a complex tool with many parts that must relate correctly to other parts for safe and accurate operation. Putting a gun together wrong or with modified parts can result in a damaged gun, or personal injury or death to you or others. Always let a qualified gunsmith work on your gun or at least, check any work not performed by a gunsmith. Firearms safety is your primary concern. **THE GUN OWNER MUST ACCEPT FULL RESPONSIBILITY FOR THE CORRECT REASSEMBLY AND FUNCTIONING OF THE FIREARM AFTER ANY DISASSEMBLY OR REPLACEMENT OF PARTS.**



# READ MANUAL ENTIRELY BEFORE USING THIS FIREARM

## TO CLEAN AND MAINTAIN YOUR PISTOL:

A) Follow procedures for unloading pistol as described previously.

B) Follow procedures for disassembly of pistol as described previously.

C) Materials needed to clean this pistol are: a cleaning rod, cotton bore patches, brass bore brush, powder solvent, a small soft brush and good quality gun oil.

**WARNING:** Lead or lead compounds are known to the State of California to cause cancer, birth defects, reproductive toxicity, and other serious physical injury. Those who clean firearms should take protective measures to avoid contact or exposure to such chemicals.

D) Using the bore brush with powder solvent, scrub the interior of the barrel and chambers to remove any powder and lead residue in the bore. Always and lastly, swab the interior of the barrels with cotton patch with gun oil to coat and protect the bore and chambers from rust and corrosion.

E) Any powder fouling on the firing wall, barrel, etc. can be easily cleaned with a brush and powder solvent.

F) All external surfaces should be wiped down with a light coat of rust preventative. Avoid using too much oil as powder, dust or other foreign material may get trapped in the oil. This could lead to congealed deposits which may interfere with the safe and reliable operation of the pistol.

G) **USE CAUTION** while using solvents in gun bore cleaning. Prolonged or excess contact with solvents can damage the gun's bluing and finish. Be sure to wipe away all excess solvent and then lubricate with oil.

H) A gun should be cleaned after firing. In addition, external parts should be wiped with an oiled cloth after handling. A light oil is ordinarily all that is necessary in cleaning if the gun has not been fired or fired very little. If a gun is used frequently, it must be cleaned after each firing and regularly serviced by a professional gunsmith. If the gun has been stored, remove all excess oil and or grease before firing. Always check to be sure that no cleaning patch or other obstruction remains in the bore or chambers before firing.

# ALWAYS KEEP MUZZLE POINTED IN A SAFE DIRECTION

## **DANGER – AMMUNITION WARNING**

Firearms may be damaged and serious personal injury or death to the shooter or bystanders may result from any condition which contributes to the generation of excessive pressure or uncontrolled release of gas within the firearm. Such adverse conditions can be caused by bore or chamber obstruction, propellant powder overloads or by defective, incorrect or improperly loaded and assembled cartridge components. Even the strongest firearm can be blown up as a result of excessive pressure. It is extremely dangerous to use a cartridge whose pressure is greater than that developed by cartridges loaded to industry standards.

## **AMMUNITION (CARTRIDGES) NOTICE**

We specifically disclaim responsibility for any damage, personal injury or death occurring in connection with or as the result of the use of Pavona pistols with faulty, nonstandard, remanufactured, hand-loaded or reloaded ammunition, or with cartridges other than factory cartridges for which the firearm was originally chambered.

## **LUBRICATION WARNING**

Firing a pistol with oil, grease or any other material even partially obstructing the bore may result in damage to the pistol and personal injury to the shooter and those nearby. Do not spray or apply lubricants directly on ammunition. If the primer or powder charge of a cartridge is affected by the lubricant, they may not fully ignite yet the energy from the primer and/or powder may be sufficient to push the projectile or wad into the bore where it may become lodged. Firing a subsequent cartridge into the obstructed bore will damage the pistol and may cause personal injury to the shooter and those nearby. Use lubricants properly. You are responsible for the proper care and maintenance of your firearm and ammunition.



# READ MANUAL ENTIRELY BEFORE USING THIS FIREARM

## LIMITED LIFETIME WARRANTY

This Pavona firearm is warranted to the original retail customer for Life from date of purchase against defects in material and workmanship. All parts and labor or replacement at our option are covered. Transportation to and from our repair facilities, government fees, damage caused by failure to perform normal maintenance, sales outside the United States, damage due to use of high velocity, high pressure, reloaded or other nonstandard ammunition, or any unauthorized repair, modification, misuse, abuse, or alteration of the product is not covered by this Limited Warranty.

Any implied warranties, including the implied warranties of merchantability and fitness for a particular purpose, are limited to one year from date of original retail purchase. Consequential or incidental damages and/or expenses, or any other expenses are not covered by this warranty.


To obtain warranty performance send your firearm with proof of retail purchase, freight prepaid plus \$20.00 for return freight to:

Pavona  
1426 King Street  
Cocoa, FL 32922

**NOTICE:** It is illegal to ship a firearm with ammunition in the firearm or in the same packaging. Firearms and ammunition must be shipped separately. For information about shipping ammunition, call Pavona at (321) 639-4842.

ALWAYS KEEP MUZZLE POINTED IN A SAFE DIRECTION

WITNESS PAVONA EXPLODED VIEW

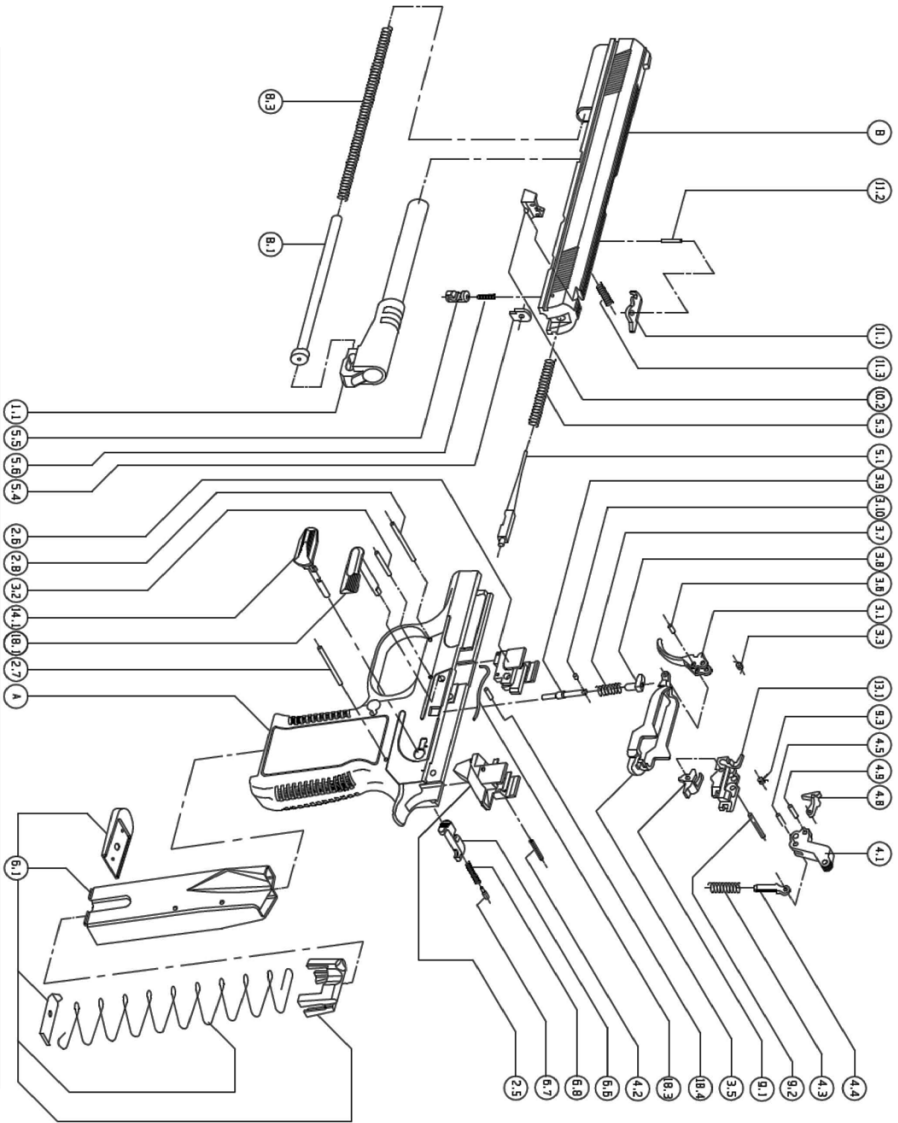



# READ MANUAL ENTIRELY BEFORE USING THIS FIREARM

## WITNESS PAVONA PARTS LIST

1.1	BARREL	5.4	FIRING PIN RETAINER
2.5	P REAR INSERT	5.5	FIRING PIN SAFETY
2.6	P FRONT INSERT	5.6	FIRING PIN SAFETY SPRING
2.7	P REAR INSERT PIN	6.1	MAGAZINE
2.8	P FRONT INSERT PIN	6.6	MAGAZINE CATCH
3.1	P TRIGGER	6.7	MAGAZINE CATCH PLUNGER
3.2	P TRIGGER PIN	6.8	MAGAZINE CATCH SPRING
3.3	TRIGGER SPRING	8.1	RECOIL SPRING GUIDE
3.5	TRIGGER BAR	8.3	RECOIL SPRING
3.6	TRIGGER BAR PIN	9.1	SEAR
3.7	TRIGGER BAR SPRING	9.2	SEAR PIN
3.8	TRIGGER BAR GUIDE	9.3	SEAR SPRING
3.9	TRIGGER BAR PLUNGER	10.2	REAR SIGHT
3.10	TRIGGER BAR PLUNGER PIN	11.1	EXTRACTOR
4.1	HAMMER	11.2	EXTRACTOR PIN
4.2	P HAMMER PIN	11.3	EXTRACTOR SPRING
4.3	HAMMER SPRING	13.1	SEAR HOUSING
4.4	HAMMER STRUT	14.1	P SAFETY
4.5	HAMMER STRUT PIN	18.1	SLIDE STOP PIN
4.8	INTERRUPTOR	18.3	SLIDE STOP PIN SPRING
4.9	INTERRUPTOR PIN	18.4	SLIDE STOP PIN SPRING PIN
5.1	FIRING PIN	A	FRAME
5.3	FIRING PIN SPRING	B	SLIDE

# ALWAYS KEEP MUZZLE POINTED IN A SAFE DIRECTION

## **WARNING—ALTERATIONS OR MODIFICATIONS**

Altering or modifying parts and/or internal safeties is dangerous and will void the warranty. This pistol was manufactured to perform properly with the original parts as designed. It is your duty to make sure any parts you buy are made for this firearm and are installed correctly and that neither the replacements nor originals are altered or changed. Your gun is a complex precision tool with many parts that must relate correctly to other parts in order for proper and safe operation. Putting a gun together wrong or with incorrect or modified parts can result in a damaged gun, danger, and personal injury or death to you and others through malfunction. Always have a qualified gunsmith work on your gun or at least check any work not performed by a gunsmith.

## **YOUR OWNER'S MANUAL**

Always keep this manual with your firearm. Make sure you understand all the warnings, operation instructions and safety procedures. When you lend, give or sell the firearm, be sure this manual goes with it. You can get a copy of this manual from Pavona upon request.

ALL PARTS ORDERS ARE SUBJECT TO A \$10.00 CHARGE FOR SHIPPING AND HANDLING. Please state Model, Caliber, Serial Number, and Finish Color when ordering. For parts, information and service contact:

Pavona  
1426 King Street  
Cocoa, FL 32922  
Phone: (321) 639-4842



**Notes:**

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

## **WARNING**

Children are attracted to and can operate firearms that can cause severe injuries or death.

Prevent child access by always keeping guns locked away and unloaded when not in use. If you keep a loaded firearm where a child obtains and improperly uses it, you may be fined or sent to prison.

## **ADVERTENCIA**

A los niños les atraen las armas de fuego y los pueden hacer funcionar. Ellos pueden causarse lesiones graves y la muerte.

Evite que los niños tengan acceso a las armas de fuego guardándolas siempre con llave y descargadas cuando no las esté utilizando. Si usted tiene un arma de fuego cargada en un lugar en que un niño tiene acceso a ella y la usa indebidamente. Le pueden dar una multa o enviarlo a la cárcel.

### **Importer:**

European American Armory Corp. for Pavona  
1426 King Street  
Cocoa, FL 32922  
[www.eaacorp.com](http://www.eaacorp.com)

### **Manufacturer:**

Fratelli Tanfoglio, S.n.c.  
Via Valtrompia 39/41  
25063 Gardone V.T.  
Brescia, Italy

