

PRODUCT INSTALLATION GUIDE

AK-47 Strikforce Adjustable Side Folding TactLite Stock

HARDWARE INCLUDED

[1] 14 x 1 1/4" Plastite Phillips Head Screw

Non Applicable



Flat Head Screwdriver

Phillips Head Screwdriver

Drill




Warning: When handling a firearm, always follow the proper handling procedures at all times. Failure to follow these procedures could result in serious damage, injury, or death. WE are not responsible for damage to property, injury, or death resulting from improper installation, misuse or modification of products. If you are not comfortable completing any of the following steps, or do not have the proper tools enlist the help of your local gunsmith. We are not responsible for components that are damaged due to improper installation.



After disassebling your AK using your owners manual, begin by placing the pivot housing assembly into the receiver as seen in Figure



Place the pivot housing assembly into the receiver, insert the (2) original screws and tighten both screws to secure the stock to the receiver as seen in Figure 4.

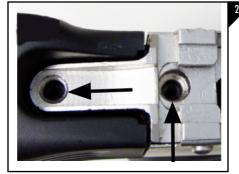


With the pivot housing assembly in the receiver, mark the two holes using a pen as seen in Figure 2. Measure the outside of the screw to make sure it measures .230". If the screw you are using does not have an outside diameter of .230", measure the outside diameter and use the appropriate drill bit.



Next, put your stock into the folded position by pressing together on the pin cap and under the pivot housing as seen in Figure 5.



If the screw measures .230 remove the pivot assembly and start by drilling pilot holes in the center of the 2 marked holes with a 1/16" starter drill bit as seen in Figure 3. Next, move up to the 3/16" drill bit and drill 2 wider holes using the two pilot holes.

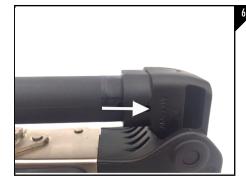

With the stock in the folded position, slide the buffer tube into the pivot housing as seen in Figure

THE USA LIMITED LIFE TIME WARRANTY



PRODUCT INSTALLATION GUIDE

AK-47 Strikforce TactLite Package with Scorpion Recoil System

PAGE 2



Using a phillips head screw driver, tighten the provided 14 x 1 1/4" plastite phillips head screw as seen in Figure 7.

LIMITED LIFE TIME WARRANTY

LIMITED LIFE TIME WARRANTY