


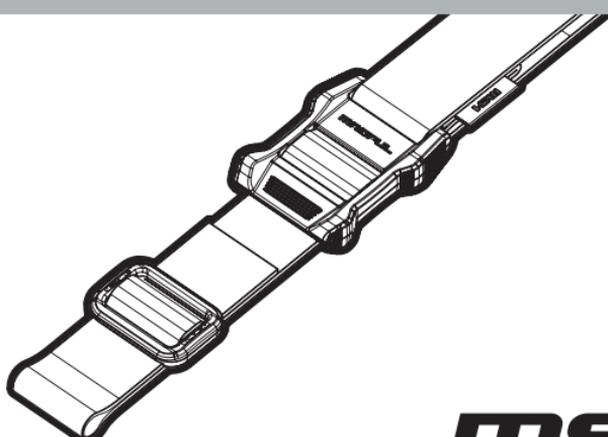


MS1™ Padded Sling



MS1
SYSTEM

- ⚠ **WARNING: BEFORE STARTING, MAKE SURE THE WEAPON IS UNLOADED, THE CHAMBER IS EMPTY, AND THE SAFETY ENGAGED.**
- ⚠ **CAUTION: PLEASE READ ALL INSTRUCTIONS BEFORE PROCEEDING. COMPONENTS UNDER SPRING PRESSURE MAY EJECT FORCEFULLY AND COULD CAUSE INJURY.**
- ⚠ **WARNING: OBSERVE SAFE FIREARM HANDLING PRACTICES AT ALL TIMES. FAILURE TO DO SO MAY RESULT IN SERIOUS BODILY INJURY OR DEATH. MAGPUL INDUSTRIES SHALL NOT BE RESPONSIBLE FOR INJURY, DEATH OR PROPERTY DAMAGE RESULTING FROM FAULTY INSTALLATION, MISUSE, ILLEGAL USE, OR MODIFICATION OF THIS PRODUCT.**

INSTALLATION INSTRUCTIONS

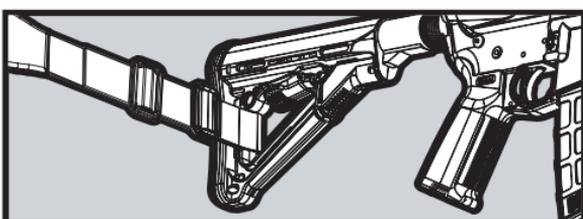


TWO-POINT CONFIGURATION - MUZZLE DOWN

To connect the sling via *sling loop*, run the tail end (the end of the sling with two *Fit Buckles*) of the MS1 through the *sling loop* on the outside of your rifle stock (the side away from the user when the rifle is slung - to avoid interference) and then back through the *Fit Buckles*. Double the webbing back through the upper *Fit Buckle* if possible.


Connect the front end to a *sling loop* or connector hardware via the same method, lacing the webbing through the front *Fit Buckle* and doubling back through the buckle.

The MS1® Sling can also be used with any 1-1/4" sling hardware.

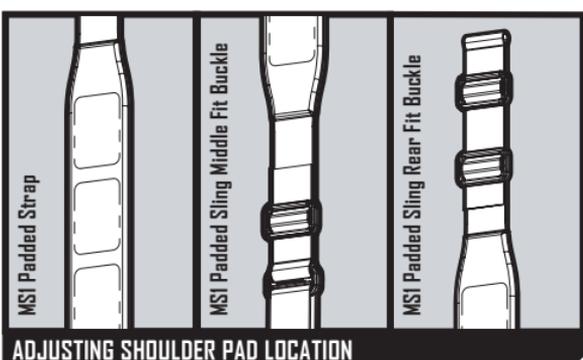


ADJUSTING SHOULDER PAD LOCATION

Adjust the two ends of the *Padded* section so that it maximizes contact with your shoulder. After you have determined the proper length for your MS1 *Padded Sling*, run the two strap ends back through both the *Rear* and *Middle Fit Buckles* provided.

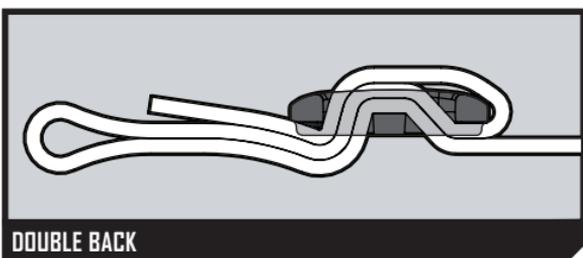

DOUBLE BACK


Double the webbing back through the *Fit Buckles* if possible to ensure sling is locked in position.

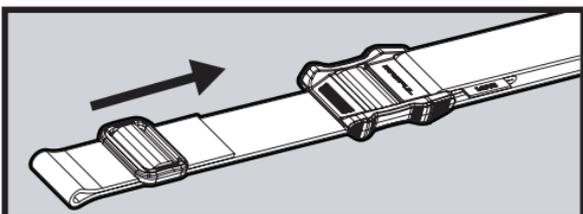

ADJUSTING THE MS1™ FOR PROPER FIT

To adjust for proper fit, make all adjustments on the forward end of the sling where it attaches to the front of the rifle. Adjust the length of the sling so that the *Slider* remains accessible to your non firing hand in the loose position. Once you have made your final adjustments, run the tail back through the *Fit Buckle* and double back and trim if necessary.

NOTE: If you do need to trim the webbing, re-bind the frayed end by melting it with a flame.

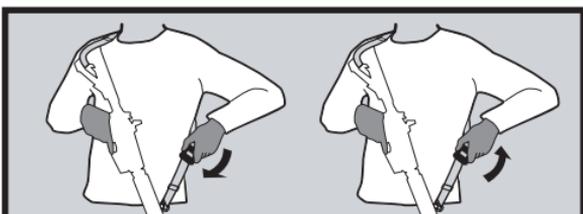

TWO-POINT ADJUSTMENT

To adjust the MS1 *Padded Sling* while in two-point configuration, simply grab the *Slider* with your non firing hand and push down to tighten or pull up to loosen the sling.