



*Youth
Archery*

VALIANT

Owner's Manual



*Actual model may differ in color and features.

2200 Stringtown Rd.

Evansville, IN 47711

800 - 694 - 9494

fax 812 - 467 - 1245

www.BearArchery.com

©2020 Bear Archery
2L-7898-00

INDEX

Section A	Safety Tips.....	pg. 3
Section B	Bow Preparation.....	pg. 4
Section C	Shooting Tips.....	pg. 5
Section D	Replacing Strings.....	pg. 6
Section E	Maintenance.....	pg. 7
Section F	Parts List/Anatomy.....	pg. 8
Section G	Warranty Information.....	pg. 9

WARNING

Safety Tips:


1. Never shoot the bow without an arrow in it. This is called dry firing and may damage the bow, or cause injury to you.
2. Keep bow pointed in a safe direction away from persons or anything you do not want to damage
3. Be careful with loose clothing, hooded strings, hair, earrings and bracelets. They can get caught in the bow string while shooting.
4. The elbow of the hand holding the bow needs to be kept bent so that it does not get hit by the bow string while shooting. The string hitting the arm can cause bruising or skin irritation. See pictures below.

WARNING


This product is not a toy. Shooting arrows at humans or animals could result in death or serious injury. Children under 16 require supervision. It is recommended that safety glasses be worn while shooting arrows.

CHOKING HAZARD—Small parts.
Not for children under 3 years.

Picture 1. Shows correct elbow position.

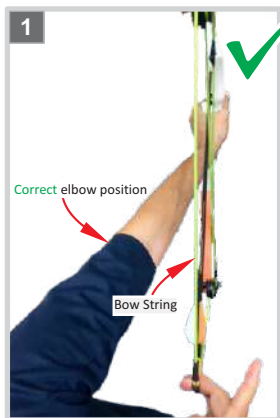


Picture 2. Shows improper Elbow Position – with elbow positioned as shown you can get hit by the bow string causing bruising.

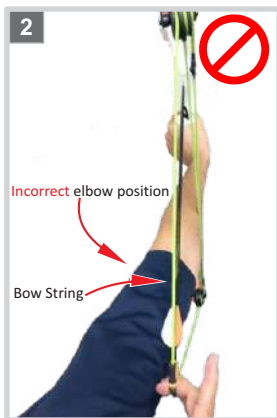



Section B – Bow Preparation

1. The arrow rest needs to be attached before shooting your bow. See **Detail B1**.
 - a. The rest comes with an adhesive back, remove backing before attaching.
 - b. Attach rest as shown in the picture below, with bent part on the lower half of the rest.

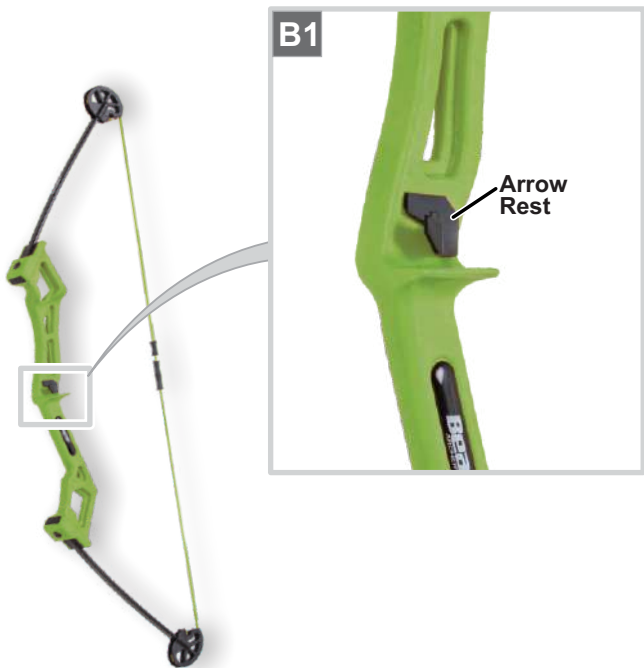


Section C – Shooting Tips

1. Make sure the arrow knock clips tightly on the string. See **Detail C1**.
2. Odd color arrow fletching/feather needs to be away from the bow on the arrow rest. See **Detail C2**.

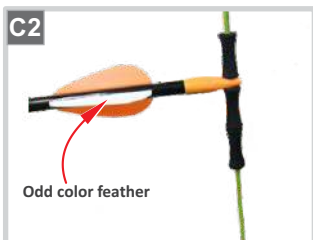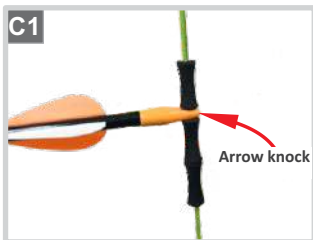

3. The finger rollers need to be placed in the following locations. See **Detail C3**.
 - a. 1 finger roller above the arrow
 - b. 2 finger rollers below the arrow
 - c. 2 Pullback using the 2 finger rollers below the arrow.

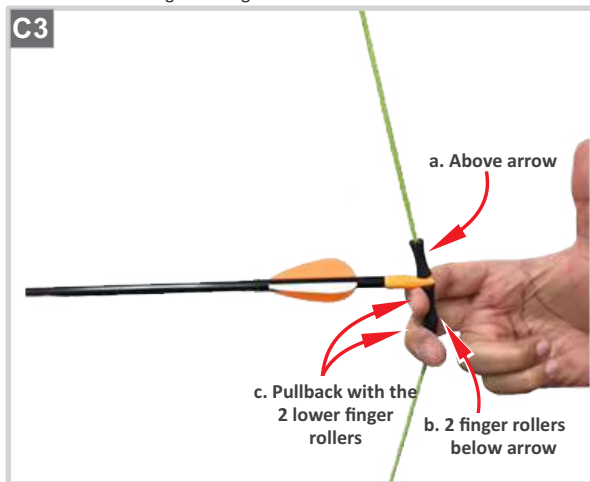

Section D - Replacing the string

1. Put tension on both cams, so that slack is created in the string. Remove the string from the cable tracks. See **Detail D1**.
2. With slack now in the string, un-knot one end of the string. This can be located on the inside notched area of the cam.
3. Once un-knotted, pull string through the limbs and completely out through the other cam so it is completely removed from the bow.
4. Take the new string and knot one end so that the knot is as far to the end of the string as possible, but not too far where it will pull through when pressure is applied. Insert open end of the string into the cam and limb hole, so that the string exits on the outside of the cam.
5. Without the string in the cam tracks, insert the string reversely on the opposite cam, so that the string ends on the interior notched side of the other cam.
6. Knot the string again as close to the end as possible, so that the string is unable to be pulled through the holes on either end.
7. Once secured, put light pressure on the limbs so that the string can be moved into both the top and bottom cam tracks.
8. Move finger savers accordingly so that an arrow is level when secured in arrow rest.



General Maintenance:

1. General

- Check for worn or loose parts before use.

2. String

- Replace immediately any worn strings or frayed strings.
- To change the strings follows steps as described in **Section D**.

3. Storage


- Never store the bow in a hot area, such as an attic, car trunk or next to heat source – long term exposure will damage your bow.
- Also, storing it in a humid location may cause some parts to rust.

4. Bolts and Screws

- Do not loosen limb bolts to relieve string pressure when not in use.

5. Questions

- For questions contact the Customer Service Department at 1-800-694-9494.

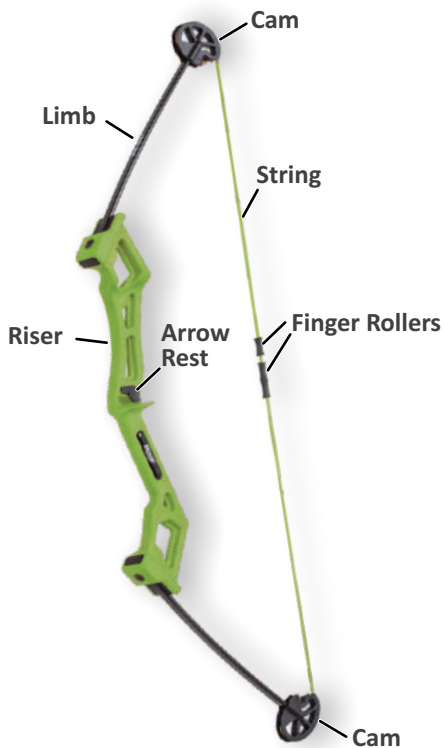

Parts List:
Valiant Bow

Accessories:
Safety Glass Arrows (2)
Arrow Rest
Finger Tab
Target

BEAR ARCHERY WARRANTY STATEMENT

All Bear Archery compound bows are backed with a Limited Lifetime Warranty to the original owner. This warranty applies to limbs, risers, and cams. This warranty consists of the following programs:

Limbs: 100% covered at no charge for the first 5 years, 50% of replacement cost after.

- Risers: Lifetime Warranty.
- Cams: Lifetime Warranty.

Original Owner

Warranty applies only to the original owner and is not transferable. Proof of purchase may be required.

Items Not Covered

Cables, strings, bearings, paint and/or film dipped finishes resulting from normal wear and tear are not included in this warranty.

Damage Not Covered

Damage caused by abuse, mishandling, dry firing, alteration or modification made to original products are not covered under this warranty. The use of any bow press other than those approved by Bear Archery will void this warranty. Additionally, shooting of arrows less than 5 grains per pound of peak draw weight will void this warranty. Bear Archery reserves the right to make parts substitutions on warranty coverage at Bear Archery's sole discretion, for any reason.

Bow Warranty Registration

For this warranty to be in effect, the on-line warranty registration process must be completed at BearArchery.com and submitted within 30 days of purchase.

Traditional Bows

1 year Limited Warranty to the original owner.

Youth Bows

90 Day Limited Warranty to the original owner.

In the event a bow requires warranty service, please contact the Bear Archery Customer Department at 800-694-9494 for a return authorization (RA) number and return shipping instructions. For full warranty details, please log on to BearArcheryProducts.com for further information.