



INSTRUCTION and MAINTENANCE MANUAL

WARNING!

DO NOT USE +P Ammo or High Velocity High Pressure Ammunition (factory or handloaded)

MODEL SARGUN SEMIAUTOMATIC PISTOL

WARNING AND INSTRUCTION MANUAL PLEASE READ THESE INSTRUCTIONS

FOR YOUR SAFETY AND THE SAFETY OF OTHERS, this owner's manual contains important warnings, instructions and safety procedures which must be understood BEFORE using this firearm. Read the ENTIRE MANUAL you do not understand any part of it or the operation of your pistol, stop and seek professional firearms instructions. You can get a copy of this manual from European American Armory Corp. upon request.

Record the serial number of your firearm (located on the receiver on the righthand side): #
and a description of it:

Make a copy of this manual, proof of purchase/sales record for safekeeping in a secure safe or fireproof container. Such proof is necessary if the firearm is damaged, stolen or sent in for warranty repair.

⚠ W A R N I N G **YOU RISK PERSONAL INJURY OR DEATH BY HANDLING THIS FIREARM**

Before handling any firearm, make sure you know the safety procedures and most importantly, keep the firearm pointed in a safe direction.

Before handling this firearm, read, understand and follow the instructions in this manual. Always keep this manual with the firearm. If you lend, give or sell this firearm, be sure the manual goes with it. If there is anything you do not understand, seek advice from someone qualified in safe handling of firearms. You must ALWAYS obey the following warnings, instructions and safety procedures:

- 1. Always keep the muzzle point in a safe direction.
- 2. Firearms should be unloaded and secured when not actually in use.
- 3. Don't rely on your firearm's safety.
- 4. Be sure of your target and what's beyond it.
- 5. Use only proper ammunition matching the precise caliber of your specific pistol.
- 6. If your pistol fails to fire when the trigger is pulled, handle with care.
- 7. Always wear ear and eye protection when shooting.
- 8. Be sure the barrel is clear of obstructions before shooting.
- 9. Don't alter or modify your firearm and have it serviced regularly.
- 10. Learn the mechanical and handling characteristics of your pistol.
- 11. Shoot sober!

Type Of Ammunition To Be Used

It is suggested that high quality commercially manufactured ammunition be used in this firearm. Avoid military surplus or old ammunition as it may not fire with sufficient force to expel the projectile from the barrel. The use of reloaded, high pressure or hand-loaded ammunition can be dangerous and will void the warranty.

LEAD WARNING: The actual firearm does not contain any lead; however, it does fire ammunition which contains lead or lead compounds known to the State of California to cause cancer, birth defects, reproductive toxicity, and other serious physical injury. Those who discharge a firearm, stand near someone who discharges a firearm or clean firearms are hereby warned of the dangers presented by lead and lead compounds and should take protective health measures. Avoid exposure to lead while handling and wash your hands after contact. Proper air ventilation is absolutely necessary when shooting indoors.

NOTICE

SEMI-AUTOMATIC PISTOLS ARE CLASSIFIED AS FIREARMS OR DANGER- OUS WEAPONS and are sold by European American Armory Corp. with the specific understanding that we are not responsible in any manner whatsoever for their safe handling or resale under local laws and regulations.

European American Armory Corp. shall not be responsible in any manner whatsoever for malfunctioning of the firearm, for physical injury or for property damage resulting in whole or in part from (1) intentional or negligent discharge, (2) improper or careless handling, (3) unauthorized modifications and/or alteration of the internal/safety mechanisms, (4) defective, improper, high pressure, handloaded, or reloaded ammunition, (5) corrosion and/or lack of proper maintenance (6) neglect, or (7) other influences beyond our direct and immediate control. This limitation applies regardless of whether liability is asserted on the basis of contract, negligence or strict liability (including any failure to warn). Under no circumstance shall European American Armory Corp. be liable for incidental or consequential damages, such as loss of use of property, commercial loss and loss of earnings or profits.

FOLLOWING THESE SAFETY RULES CAN SAVE YOUR LIFE OR THE LIFE OF SOMEONE ELSE

Get competent firearms instruction in safe handling before using this firearm. Please ask your dealer for names of qualified instructors near you. All guns are extremely dangerous if carelessly handled or used. Remember that the firearm user is the primary "safety" and that reliance on any mechanical safety device should never replace safe handling procedures.

This firearm **WILL FIRE** if a cartridge is in the chamber and the trigger is pulled while the safety is disengaged.

DO NOT LOAD THIS PISTOL UNTIL YOU UNDERSTAND HOW IT OPER- ATES. KEEP this pistol unloaded at all times except when you are ready to fire and are sure of your target.

ALWAYS carry this pistol in a case or original box unloaded.

NEVER point this pistol at anything that is not your intended target even if the pistol is unloaded. When loading, unloading, cleaning or handling, always be sure the muzzle is pointed in a safe direction and always keep your finger off the trigger.

NEVER assume any gun is unloaded. Before handling, check to make sure the chamber is empty. See Unloading Instructions. Make sure you know that this or any firearm is fully unloaded before displaying or handling it. When handling any firearm, keep your fingers away from the trigger at all times until you intend to fire.

Get instructions from a competent firearms instructor before using this or any firearm. Learn from a professional how to handle, load, unload, operate, fire and care for your gun.

NEVER PLAY with your firearm. It is not a toy and can be a very dangerous weapon that can cause serious personal injury or death.

Always keep the gun pointed in a safe direction. Treat every gun as if it is loaded...all the time. **NEVER** point any firearm (loaded or unloaded) at any person or anything you do not intend to shoot. Always keep your gun unloaded until ready to use and make sure that it is unloaded before cleaning.

Keep your finger **OFF** the trigger until you are actually aiming at the target and ready to shoot. Learn to rest your finger outside of the trigger guard.

Never rely on a gun's "safety" to protect you from unsafe gun handling. A safety is only a mechanical device, not a substitute for using common sense and following gun safety procedures.

FOLLOWING THESE SAFETY RULES CAN SAVE YOUR LIFE OR THE LIFE OF SOMEONE ELSE

Never leave a gun unattended or where it could fall.

Store guns and ammunition separately **beyond the reach of children**. Make sure that they are properly secured so untrained individuals and children will be denied access to your guns and ammunition.

Test your gun's operation and safeties only at a shooting range while the firearm is pointed in a safe direction.

Know your target and what is beyond. Ask yourself what your projectile will hit if it misses the target or passes through the intended target. Remember, a fired projectile can travel over a mile (including a ricochet) and is capable of going through walls. Never shoot at hard flat surfaces or water. . . bullets ricochet.

Guns and alcohol or drugs do not mix. Don't take any alcoholic beverages and/ or drugs before or during shooting activities.

Never pull a gun toward you by the muzzle. Don't climb a tree, cross a ditch or fence with a loaded gun.

Always empty guns before entering a house, car, truck, boat, RV, camp or any building.

When receiving a gun, always open the action and check to make sure the chamber is unloaded.

NEVER accept anyone's word that a gun is "unloaded" or "empty." You should immediately open the action and check to make sure it is unloaded.

Be careful with **ALL** ammunition. Even "blank" cartridges are deadly at close range due to the muzzle blast. Make sure your ammunition is new and in good clean condition. Do **NOT** oil or grease ammunition as this may damage the cartridge primer. Do **NOT** tamper with or alter the standard factory ammunition.

Keep firearms unloaded when not actually in use. Load the gun only when on the range preparing to fire and unload it before leaving the range.

Never put your hand over the muzzle of a gun.

ALWAYS WEAR protective shooting glasses and hearing protection when using firearms.

Spectators should be at least 10 feet behind and away from the shooter while the shooter is loading, shooting and unloading. Spectators should wear protection

FOLLOWING THESE SAFETY RULES CAN SAVE YOUR LIFE OR THE LIFE OF SOMEONE ELSE

for hearing and sight loss and they should avoid distracting those shooting their firearms.

Never drop your gun. If you do drop it, unload it and check it for proper function before using it again.

Do **NOT** alter or modify your gun. Don't try to change your gun's trigger pull, because it may affect sear engagement and thereby cause accidental firing.

Do **NOT** remove any internal safety or safety device on the firearm. Safety mechanisms are designed to help protect you from personal injury or death.

Properly maintain and keep your gun clean. Keep in a dry place away from other metals and water. If your gun shows sign of corrosion or improper operation, have it serviced by a competent gunsmith.

Keep the muzzle pointed in a safe direction when loading and unloading your gun. Never point the muzzle at anyone.

If a gun fails to fire when the trigger is pulled, keep it pointed down range at the target for 60 seconds. Sometimes slow primer ignition will cause a "hang fire" and the cartridge will go off after a short pause. If it still fails to fire, keep muzzle pointed in safe direction and avoid exposure to the breech, as you attempt to unload your firearm.

Never let water, snow, mud or other material enter the barrel. Always be sure the barrel is free of any obstruction.

Use the correct ammunition for your firearm. (See Ammunition Warning)

Teach children: 1. NOT to touch guns, bullets, cartridges, shells, flares or any explosive device and **2.** That if they discover such a dangerous item or weapon, they must immediately report its location to their parents, school teacher or police.

Remember a firearm has the capability of taking your life or the life of someone else. Be careful with your firearm - an accident is almost always the result of not following basic safety rules.

Use the Security Lock Provided with your

Fig 33 (picture of Security lock)

This pistol comes with a security lock to assist in protecting against unauthorized use. The pistol must be unloaded when the security lock is in place on the pistol

or if it is locked in it's carry case. WARNING: Using the security lock or lockable case, can not substitute for securing your firearm and ammunition in separate locked locations



Figure 33

- A) Remove security lock from it's package
- B) Install lock on firearm, See Figs 30, 31, 32



Figure 30

↑ WARNING

Always store the key to the security lock: (1) in a separate location away from the pistol; (2) in a secure location unknown and not accessible to others, especially children. Whether you secure your firearms by using the supplied security lock, a gun lock or safe or some other mechanism, it is YOUR RESPONSIBILITY to store your firearms in such a manner that children and other unauthorized persons cannot gain access to them.

USED FIREARMS - Firearms are sometimes altered to work incorrectly, or parts may be removed. lost or replaced with incorrect parts. If you got your European American Armory Corp. firearm as a used gun, BEFORE USING IT you should take it to a good gunsmith who knows European American Armory Corp. firearms, and have him examine it.



Figure 31



Figure 32

WRITE EUROPEAN AMERICAN ARMORY CORP. concerning any items or circumstances that you don't understand and which might relate to your safety and the operation of your firearm at: European American Armory Corp. 1426 King Street, Cocoa, Fl 32922. Phone: (321) 639-4842.

Or email to: eaacorp@eaacorp.com

\triangle w a r n i n g (potential obstructions)

BEFORE LOADING or firing a pistol, examine the bore and the firing chamber to be certain they are clean and free of any obstruction. Even a heavy coat of oil, grease, snow or water may result in damage to the firearm and injury to the shooter and/or persons near the firearm. A misfire or unusual sound upon firing is a signal to cease firing and to examine the chamber and bore. If there is any obstruction, clear the obstruction and clean the bore and chamber before firing.

Any bore obstruction, even if it is only partly blocked, may cause the gun to blow up if it is fired, or may cause damage to the gun such as a bulged barrel. To avoid injury or death to the shooter or bystanders, check the barrels before shooting or if a shot does not sound normal.

△ w a r n i n g

Always keep the muzzle pointed in a safe direction! Never attempt to load or unload any firearm inside a vehicle, building or other confined space (except a properly constructed shooting range). Enclosed areas frequently offer no completely safe direction in which to point the firearm. If an accidental discharge occurs, there is great risk of death, personal injury or property damage. Before loading, always clean all, grease and oil from the bores and chambers, and check to be certain that no obstructions are in the barrel. Any foreign matter in the barrels could result in a bulged or burst barrel or other damage to the firearm and could cause serious injury to the shooter or to others.

MWARNING

If there is any reason to suspect that a projectile is obstructing the barrel, immediately unload the firearm (See Unloading Instructions) and check the chamber and the bore. A projectile or some other matter may be lodged some distance down the barrel where it can not easily be seen. Check the bore by using a cleaning rod to pass through the barrel. If a blockage is in the bore, **DO NOT ATTEMPT TO SHOOT IT OUT WITH ANOTHER CARTRIDGE, OR BLOW IT OUT WITH A BLANK CARTRIDGE OR A CARTRIDGE FROM WHICH THE BULLET HAS BEEN REMOVED. SUCH TECHNIQUE(S) CAN GENERATE EXCESSIVE PRESSURE, DAMAGE THE FIREARM AND CAUSE SERIOUS PERSONAL INJURY. DO NOT ATTEMPT TO SHOOT IT OUT WITH ANOTHER CARTRIDGE, OR BLOW IT OUT WITH A BLANK CARTRIDGE OR A CARTRIDGE FROM WHICH THE BULLET HAS BEEN REMOVED. SUCH TECHNIQUE(S) CAN GENERATE EXCESSIVE PRESSURE, DAMAGE THE FIREARM AND CAUSE SERIOUS PERSONAL INJURY.**

⚠ W A R N I N G (EYE AND EAR PROTECTION)

When shooting, full eye and ear protection is mandatory at all times. Shooters and spectators must wear shooting glasses and hearing protection to prevent eye injury and hearing loss. Vision and hearing impairment can occur with only one moment of non-protection.

⚠ W A R N I N G (Mechanical Malfunctions)

STOP SHOOTING IMMEDIATELY AND UNLOAD YOUR FIREARM if your firearm develops: a mechanical malfunction; binding or stoppage; spitting powder/gas; a punctured cartridge primer; a bulged or ruptured cartridge case; or a sound on firing does not sound quite right. Do NOT try one more shot but unload your firearm and take it and the ammunition to a qualified gunsmith or send the firearm back to European American Armory Corp. for examination. Do not assume that the pistol is empty merely because you checked the chamber. You must also check the bore for any obstruction inside the barrel.

BASIC PARTS OF YOUR PISTOL

EXTERNAL CONTROL PARTS:

Trigger Block Safety: The safety mechanism of the pistol provides protection against accidental and unintentional discharge under normal usage when properly engaged and in good working order. The safety mechanism is not a substitute for following safe gun handling rules. Do not disengage the safety unless you are ready to fire the pistol. **MAKE SURE YOU UNDERSTAND HOW THE SAFETY WORKS BEFORE YOU LOAD OR USE THE PISTOL.**







Safety OFF

The safety mechanism is a lever located on the side of the pistol's receiver. **See Fig 1-2.**

To place the safety in the "off" or "fire" position, push the safety lever down. When in the "off" or "fire" position, the red dot is exposed. You have now disengaged the safety and the pistol is in the ready-to-fire position. Always make sure the gun is pointed in a safe direction. **See Fig 3.**

STRIKER INDICATOR: RED or Striker showing from back of slide and Pistol is cocked and ready to fire. Empty hole or no Red showing and Pistol is not cocked or not ready to fire. **See FIGURE ST1 & ST2**



Figure 3



ST1



ST2

Δ warning!

Do not touch the trigger while moving the safety. When operating the safety, make sure you move it to the full extent of its travel in the desired direction, either fully "on" or fully "off." Half-safe or partially-safe is UNSAFE.

△WARNING!

The pistol does not incorporate a magazine disconnect safety, so the pistol may be fired with the magazine removed from the pistol.

$oldsymbol{\Lambda}$ warning!

The pistol is designed to and will FIRE when the trigger is pulled and the safety mechanism is in the "off" or "fire" position.

Firing Pin Block:

The pistol also incorporates an automatic, internal firing pin block which stops the firing pin from traveling forward. The firing pin block is released only by pulling the trigger all the way to the rear as is done in firing the pistol. **See Fig 29**

∆WARNING!

Always keep your fingers off the trigger and outside of the trigger guard until you are ready to pull the trigger and fire the pistol.

Δ warning!

The pistol is designed to and will FIRE when the trigger is pulled and the safety mechanism is in the "off" or "fire" position.



Figure 29

Slide Stop:

Locks the slide back when engaged located on left hand side of the gun. See Fig 4

Magazine Release:

Locks or holds the magazine in place and is depressed to release the magazine. **See Fig 5**

Trigger:

A curved trigger is a single action fires the gun in single action mode. **See Fig 6**







Figure 4

Figure 5

Figure 6

△WARNING!

Make sure the pistol is pointed in a safe direction and the trigger block safety is engaged at all times while loading and unloading. NEVER allow your fingers or other objects to contact the trigger while loading or unloading.

△WARNING!

Do not disengage the trigger block safety until you are ready to fire and have the gun pointed safely downrange.

*** Warning ***

Do not load the pistol until you are ready to fire.

TO LOAD THE MAGAZINE:

- 1) Pull the magazine release button down and remove the magazine from the pistol.
 - See Fig 7
- 2) Load the cartridges into the magazine. Do NOT force the cartridges into the magazine. Do NOT overload the magazine. See Fig 8
- Push the magazine up into the pistol firmly until the magazine catch locks it into place.
 Do NOT slam the magazine into place.
 See Fig 9

TO LOAD THE CHAMBER:

MAKE SURE YOUR FINGERS ARE OFF THE TRIGGER AND AWAY FROM THE TRIGGER GUARD

- 1) Hold the pistol grip with one hand, grasp the rear slide serrations as far back as possible with your other hand. P ull the slide rearward until it cannot travel any further. See Fig 10
- 2) Release the slide and allow it to go forward into the closed position (as powdered by the recoil spring.. .Do not help/ push the slide forward). The slide will automatically take a cartridge from the magazine and load it into the chamber. See Fig 11
- 3) **Do NOT** put your fingers or hand in front of the barrel.



Figure 7



Figure 8



Figure 9



Figure 10



Figure 11

△WARNING!

YOUR PISTOL IS NOW LOADED AND READY TO FIRE, IF THE SAFETY IS MOVED TO THE OFF POSITION AND THE TRIGGER IS PULLED THE GUN WILL FIRE

TO UNLOAD:

Make Sure the Safety is in the "ON" position and the gun is pointed in a safe direction......
See Fig 12

 Push the magazine release button down and remove the magazine from the pistol.
 See Fig 13

△WARNING!

The pistol does not incorporate a magazine disconnect safety, so the pistol may be fired with the magazine removed from the pistol

MWARNING!

Removing the magazine does not unload the chamber. If a cartridge is in the chamber the pistol can fire with the magazine removed

- 2) To unload the chamber, keep your finger OUT of the trigger guard and OFF THE TRIGGER and move the safety to the off position.... THE PISTOL CAN NOW FIRE IF YOU PULL THE TRIGGER, SO BE VERY CAREFUL! Make sure your fingers are not in the trigger guard. Hold the pistol grip with one hand, grasp the rear slide serrations as far back as possible with your other hand. Pull the slide rearward and eject the cartridge in the chamber. See Fig 14
- Engage the slide stop, so that the slide stays in the rearward position. See Fig 15
- 4) Visually check the chamber to insure that there is no cartridge in the chamber. **See Fig 16**



Figure 12



Figure 13



Figure 14



Figure 15



Figure 16

5) To unload the magazine you press the top catridge in the magazine down forward and out, repeat this procedure until the magazine is completely unloaded. See Fig 17



Figure 17

FIRING YOUR PISTOL

*** Warning ***
Never load a cartridge into the chamber until you are ready to fire the pistol.

△WARNING!

Do not disengage the trigger block safety until the pistol is pointed in a safe direction and you are ready to fire.

△ WARNING!

If a cartridge does not fire and the trigger has been pulled and the trigger block safety is disengaged, Stop! Then do the following: **a)** Make sure the gun is pointed in a safe direction **b)** Engage the trigger block safety **c)** Wait 60 seconds **d)** Follow the instructions above for unloading the pistol.

△ WARNING!

If during firing the sound of any cartridge is noticeably softer or louder than the previous cartridge fired, Stop! Then do the following: **a)** Make sure the gun is pointed in a safe direction **b)** Engage the trigger block safety **c)** Follow the instructions above for unloading the pistol and **d)** With the pistol unloaded visually inspect the pistol for barrel blockage or damage. Then inspect the receiver of the pistol for damage before continuing.

READ, UNDERSTAND AND FOLLOW ALL WARNINGS AND INSTRUCTIONS IN THIS MANUAL BEFORE FIRING THE PISTOL.


TO FIRE THE PISTOL:


- Make sure the pistol is pointed in a safe direction with the trigger block safety engaged.
 See Fig 18
- **2)** Make sure you are wearing eye and ear protection.
- Keep your fingers away from the trigger.
 See Fig 18



Figure 18

- 4) Push the trigger block safety to the "off" or "fire" position with the red dot showing. See Fig 19
- Squeeze the trigger. The pistol will fire when you pull or squeeze the trigger with the required force. See Fig 20

 

 






Figure 19



Figure 20

 

Figure 22 A



Figure 22 B



Figure 21

∆WARNING!

If you fired the pistol and wish to stop firing, immediately push the trigger block safety to the "on" or "safe" position. Then follow the unloading instructions above while keeping the muzzle pointed in a safe direction.

DIRECTIONS FOR DISASSEMBLY / RE-ASSEMBLY OF THE PISTOL:

1) Make sure the pistol is unloaded (FOLLOW UNLOADING INSTRUCTIONS) and pointed in a safe direction.

3) Identify the two takedown marks behind the safety lever on the left side of the slide and frame. Pull the slide back slightly and line up the two marks. See Fig 23. HINT: Use the rear sight for leverage when lining up the marks.



Figure 23

4) Remove the slide stop-takedown lever by pushing on the end sticking out of the right side of the pistol and pull on the lever with your other hand. See Fig 24A and 24B



Try

Figure 24 A

Figure 24 B

- 5) Slide the Barrel / Slide Assembly forward and off the receiver. See Fig 25
- 6) Hold the slide upside down. Retract the recoil spring and guide and remove the recoil spring and guide as an assembly. See Fig 26



Figure 25

- 7) Remove the barrel from the slide.See Fig 27 and 28
- 8) NO FURTHER DISASSEMBLY of the pistol is recommended unless performed by a qualified gunsmith. Remember that work done by others and unauthorized gunsmithing by non-factory personnel will VOID the warranty.



Figure 26

 To re-assemble the pistol, simply reverse these procedures.



Figure 27



Figure 28

MANUFACTURER'S WARNING:

This firearm was manufactured to properly perform with the original parts as designed. It is your duty to make sure any parts you buy are correctly installed and that neither replacements nor originals are altered or changed. Your gun is a complex tool with many parts that must relate correctly to other parts for safe and accurate operation. Putting a gun together wrong or with modified parts can result in a damaged gun, or personal injury or death to you or others. Always let a qualified gunsmith work on your gun or at least, check any work not performed by a gunsmith. Firearms safety is your primary concern. THE GUN OWNER MUST ACCEPT FULL RESPONSIBILITY FOR THE CORRECT REASSEMBLY AND FUNCTIONING OF THE FIREARM AFTER ANY DISASSEMBLY OR REPLACEMENT OF PARTS.

TO CLEAN AND MAINTAIN YOUR PISTOL:

- Follow procedures for unloading pistol as described previously.
- **B)** Follow procedures for disassembly of pistol as described previously.
- **C)** Materials needed to clean this pistol are: a cleaning rod, cotton bore patches, brass bore brush, powder solvent, a small soft brush and good quality gun oil.

MWARNING

Lead or lead compounds are known to the State of California to cause cancer, birth defects, reproductive toxicity, and other serious physical injury. Those who clean firearms should take protective measures to avoid contact or exposure to such chemicals.

- **D)** Using the bore brush with powder solvent, scrub the interior of the barrel and chambers to remove any powder and lead residue in the bore. Always and lastly, swab the interior of the barrels with cotton patch with gun oil to coat and protect the bore and chambers from rust and corrosion.
- **E)** Any powder fouling on the firing wall, barrel, etc. can be easily cleaned with a brush and powder solvent.
- F) All external surfaces should be wiped down with a light coat of rust preventative. Avoid using too much oil as powder, dust or other foreign material may get trapped in the oil. This could lead to congealed deposits which may interfere with the safe and reliable operation of the pistol.
- **G) USE CAUTION** while using solvents in gun bore cleaning. Prolonged or excess contact with solvents can damage the gun's bluing and finish. Be

sure to wipe away all excess solvent and then lubricate with oil.

H) A gun should be cleaned after firing. In addition, external parts should be wiped with an oiled cloth after handling. A light oil is ordinarily all that is necessary in cleaning if the gun has not been fired or fired very little. If a gun is used frequently, it must be cleaned after each firing and regularly serviced by a professional gunsmith. If the gun has been stored, remove all excess oil and/or grease before firing. Always check to be sure that no cleaning patch or other obstruction remains in the bore or chambers before firing.

DANGER - AMMUNITION WARNING

Firearms may be damaged and serious personal injury or death to the shooter or bystanders may result from any condition which contributes to the generation of excessive pressure or uncontrolled release of gas within the firearm. Such adverse conditions can be caused by bore or chamber obstruction, propellant powder overloads or by defective, incorrect or improperly loaded and assembled cartridge components. Even the strongest firearm can be blown up as a result of excessive pressure. It is extremely dangerous to use a cartridge whose pressure is greater than that developed by cartridges loaded to industry standards.

AMMUNITION (CARTRIDGES) NOTICE

We specifically disclaim responsibility for any damage, personal injury or death occurring in connection with or as the result of the use of European American Armory Corp. pistols with faulty, non-standard, remanufactured, hand-loaded or reloaded ammunition, or with cartridges other than factory cartridges for which the firearm was originally chambered.

LUBRICATION WARNING

Firing a pistol with oil, grease or any other material even partially obstructing the bore may result in damage to the pistol and personal injury to the shooter and those nearby. Do not spray or apply lubricants directly on ammunition. If the primer or powder charge of a cartridge is affected by the lubricant, they may not fully ignite yet the energy from the primer and/or powder may be sufficient to push the projectile or wad into the bore where it may become lodged. Firing a subsequent cartridge into the obstructed bore will damage the pistol and may cause personal injury to the shooter and those nearby. Use lubricants properly. You are responsible for the proper care and maintenance of your firearm and ammunition.

ONE YEAR LIMITED WARRANTY

This European American Armory Corp. firearm is warranted to the original retail customer for One year from date of purchase against defects in material and workmanship. All parts and labor or replacement at our option are covered. Transportation to and from our repair facilities, government fees, damage caused by failure to perform normal maintenance, sales outside the

United States, damage due to use of high velocity, high pressure, reloaded or another nonstandard ammunition, or any unauthorized repair, modification, misuse, abuse or alteration of the product is not covered by this Limited Warranty.

Any implied warranties, including the implied warranties of merchantability and fitness for a particular purpose, are limited to one year from date of original retail purchase. Consequential or incidental damages and/or expenses, or any other expenses are not covered by this warranty.

To obtain warranty performance send your firearm with proof of retail purchase, freight prepaid plus \$20.00 for return freight to:

European American Armory Corp. 1426 King Street Cocoa, FL 32922

NOTICE: It is illegal to ship a firearm with ammunition in the firearm or in the same packaging. Firearms and ammunition must be shipped separately. For information about shipping ammunition, call European American Armory Corp. at (321) 639-4842.

WARNING—ALTERATIONS OR MODIFICATIONS


Altering or modifying parts and/or internal safeties is dangerous and will void the warranty. This pistol was manufactured to perform properly with the original parts as designed. It is your duty to make sure any parts you buy are made for this firearm and are installed correctly and that neither the replacements nor originals are altered or changed. Your gun is a complex precision tool with many parts that must relate correctly to other parts in order for proper and safe operation. Putting a gun together wrong or with incorrect or modified parts can result in a damaged gun, danger, and personal injury or death to you and others through malfunction. Always have a qualified gunsmith work on your gun or at least check any work not performed by a gunsmith.

YOUR OWNER'S MANUAL

Always keep this manual with your firearm. Make sure you understand all the warnings, operation instructions and safety procedures. When you lend, give or sell the firearm, be sure this manual goes with it. You can get a copy of this manual from European American Armory Corp. upon request.

ALL PARTS ORDERS ARE SUBJECT TO A \$10.00 CHARGE FOR SHIP-PING AND HANDLING. Please state Model, Caliber, Serial Number, and Finish Color when ordering. For parts, information and service contact: European American Armory Corp. 1426 King Street, Cocoa, FI 32922. Phone: (321) 639-4842.


SARGUN 9 mm SEMIAUTOMATIC PISTOL EXPLODED VIW

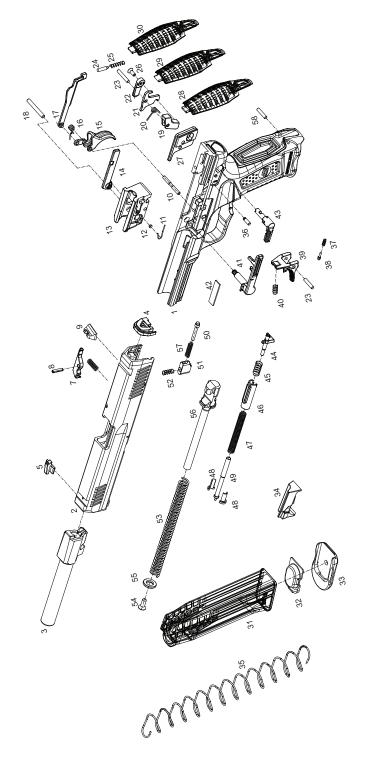

SARGUN 9 mm SEMIAUTOMATIC PISTOL PART LIST

1 2 3 4 5 6 7 8 9 10 11 2 13 14 15 16 17 18 19 22 12 22 23 4 25 26 27 28 9 30 1 32 33 34 5 36 37 38 9 40 14 24 34 44 50 15 12 25 31	FRAME SLIDE (9mm) BARREL (9 mm) FIRING CATCH FRONT SIGHT EXTRACTOR SPRING EXTRACTOR ROLL PIN REAR SIGHT TRIGGER PIN SLIDE RELEASE SPRING PIN SLIDE RELEASE SPRING PIN SLIDE RELEASE SPRING PIN SLIDE RELEASE CAP TRIGGER TRIGGER SPRING TRIGGER SPRING TRIGGER BAR SLIDE HOUSE ROLL PIN SEAR SEAR SPRING FIRING PIN LOCK BUTTON SAFETY BUTTON CAP SEAR & MAGAZINE RELEASE PIN TRIGGER BAR GUIDE GUIDE SPRING SAFETY BUTTON CAP SCREW EJECTOR BACK STRAP LARGE BACK STRAP MEDIUM BACK STRAP MEDIUM BACK STRAP SMALL MAGAZINE TUBE MAGAZINE TUBE MAGAZINE FLOOR PLATE FOLLOWER MAGAZINE SPRING SEAR SPRING PIN SAFETY SPRING SAFETY PIN MAGAZINE RELEASE MAGAZINE RELEASE MAGAZINE RELEASE SERIAL NUMBER PLATE SAFETY BUTTON FIRING PIN REAR PART FIRING PIN REAR PART FIRING PIN REAR PART FIRING PIN SPRING FIRING PIN LOCK FIRING FIRING PIN LOCK FIRING FIRING FIRING
49	FIRING PIN FRONT PART
50	FIRING PIN LOCK PIN
51	FIRING PIN LOCK
52	FIRING PIN LOCK SPRING
53	RECOIL SPRING
54	RECOIL PIN SCREW
55	RECOIL PIN WASHER
56	RECOIL PIN
57	GUIDE SPRING
58	BACK STRAP PIN


SARGUN .40 S & W SEMIAUTOMATIC PISTOL EXPLODED VIW

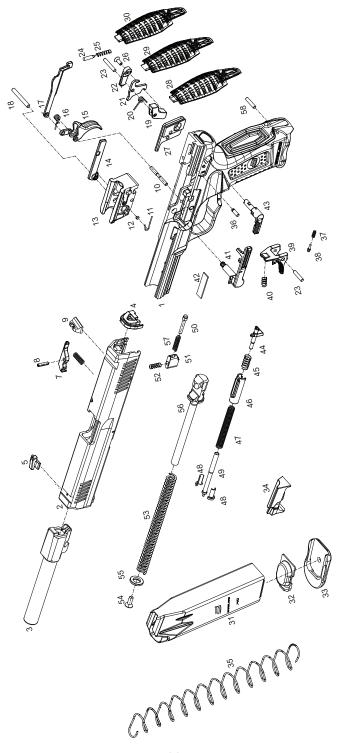

SARGUN .40 S & W SEMIAUTOMATIC PISTOL PART LIST

1 2 3 4 5 6 7 8 9 10 11 2 13 14 15 16 17 8 19 20 1 22 23 4 25 26 27 28 9 30 1 32 33 34 5 36 37 38 9 40 1 42 34 44 45 64 7 8 9 50 51 2 53 54	FRAME SLIDE (.40 S&W) BARREL (.40 S&W) FIRING CATCH FRONT SIGHT EXTRACTOR SPRING EXTRACTOR ROLL PIN REAR SIGHT TRIGGER PIN SLIDE RELEASE SPRING SLIDE RELEASE SPRING PIN SLIDE HOUSE SLIDE RELEASE SPRING PIN SLIDE HOUSE SLIDE RELEASE CAP TRIGGER TRIGGER SPRING TRIGGER BAR SLIDE HOUSE ROLL PIN SEAR SEAR SPRING FIRING PIN LOCK BUTTON SAFETY BUTTON CAP SEAR & MAGAZINE RELEASE PIN TRIGGER BAR GUIDE GUIDE SPRING SAFETY BUTTON CAP SCREW EJECTOR BACK STRAP LARGE BACK STRAP MEDIUM BACK STRAP MEDIUM BACK STRAP SMALL MAGAZINE TUBE MAGAZINE TUBE MAGAZINE FLOOR PLATE FOLLOWER MAGAZINE SPRING SEAR SPRING PIN SAFETY SPRING SAFETY PIN MAGAZINE RELEASE MAGAZINE RELEASE MAGAZINE RELEASE MAGAZINE RELEASE SERIAL NUMBER PLATE SAFETY BUTTON FIRING PIN REAR PART FIRING PIN REAR PART FIRING PIN REAR PART FIRING PIN SPRING FIRING PIN LOCK FIRING PIN SCREW
51 52 53	FIRING PIN LOCK FIRING PIN LOCK SPRING RECOIL SPRING
58	BACK STRAP PIN

SARGUN .45 AUTO SEMIAUTOMATIC PISTOL EXPLODED VIW

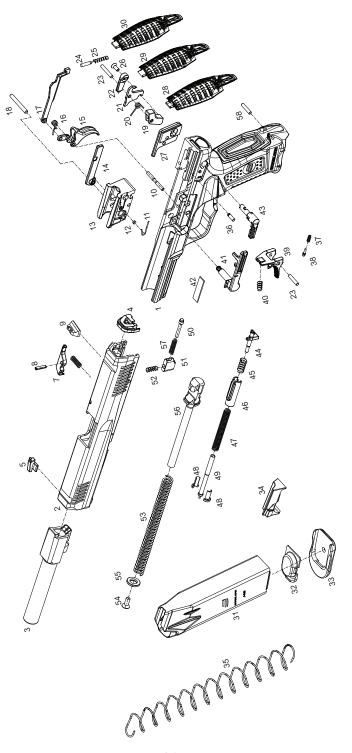

SARGUN .45 AUTO SEMIAUTOMATIC PISTOL PART LIST

1	FRAME
2	SLIDE (.45 AUTO)
3	BARREL (.45 AUTO)
4	FIRING CATCH
5	FRONT SIGHT
6	EXTRACTOR SPRING
7	EXTRACTOR
8	ROLL PIN
9	REAR SIGHT
10	TRIGGER PIN
11	SLIDE RELEASE SPRING
12	SLIDE RELEASE SPRING PIN
13	SLIDE HOUSE
14 15	SLIDE HOUSE SLIDE RELEASE CAP TRIGGER
16 17	TRIGGER TRIGGER SPRING TRIGGER BAR
18	SLIDE HOUSE ROLL PIN
19	SEAR
20	SEAR SPRING
21	FIRING PIN LOCK BUTTON
22	SAFETY BUTTON CAP
23	SEAR & MAGAZINE RELEASE PIN
24	TRIGGER BAR GUIDE
25	GUIDE SPRING
26	SAFETY BUTTON CAP SCREW
27	EJECTOR
28	BACK STRAP LARGE
29	BACK STRAP MEDIUM
30 31	BACK STRAP SMALL MAGAZINE TUBE
32	MAGAZINE INSERT
33	MAGAZINE FLOOR PLATE
34	FOLLOWER
35	MAGAZINE SPRING
36	SEAR SPRING PIN
37	SAFETY SPRING
38	SAFETY PIN
39	MAGAZINE RELEASE
40	MAGAZINE RELEASE SPRING
41	SLIDE RELEASE
42	SERIAL NUMBER PLATE
43	SAFETY BUTTON
44	FIRING PIN REAR PART
45	FIRING PIN RETURN SPRING
46	FIRING PIN SPACER SLEEVE
47	FIRING PIN SPRING
48	FIRING PIN SPRING CUPS
49	FIRING PIN FRONT PART
50 51	FIRING PIN FRONT FART FIRING PIN LOCK FIRING PIN LOCK
52	FIRING PIN LOCK SPRING
53	RECOIL SPRING
54	RECOIL PIN SCREW
55	RECOIL PIN WASHER
56	RECOIL PIN
57	GUIDE SPRING
58	BACK STRAP PIN

MARNING

Children are attracted to and can operate firearms that can cause severe injuries or death.

Prevent child access by always keeping guns locked away and unloaded when not in use. If you keep a loaded firearm where a child obtains and improperly uses it, you may be fined or sent to prison.

ADVERTENCIA

A los ninos los atroen las armaside de fuego y los pueden hacer funcionar. Ellos pueden causarses lesiones graves y la muerte.

Evite que los ninos tengon acceso a los armas de fuego guardandolas siempre con llave y descargadas cuando no las este utilizando. Si usted tiene un arma de fuego cargado en un lugar en que un nono tiene acceso a ella y la usa indebidamente. Le pueden dar una multa a enviarlo a la carcel.

Importer:

European American Armory Corp. 1426 King Street Cocoa, FL 32922 www.eaacorp.com

Manufacturer:

Sarsilmaz Nargileci Sk. Sarsilmaz Is Merkezi No:4 34116 Mercan Istanbul, Turkey