




Instructions & Safety Manual

HUB-STYLE GROUND BLINDS

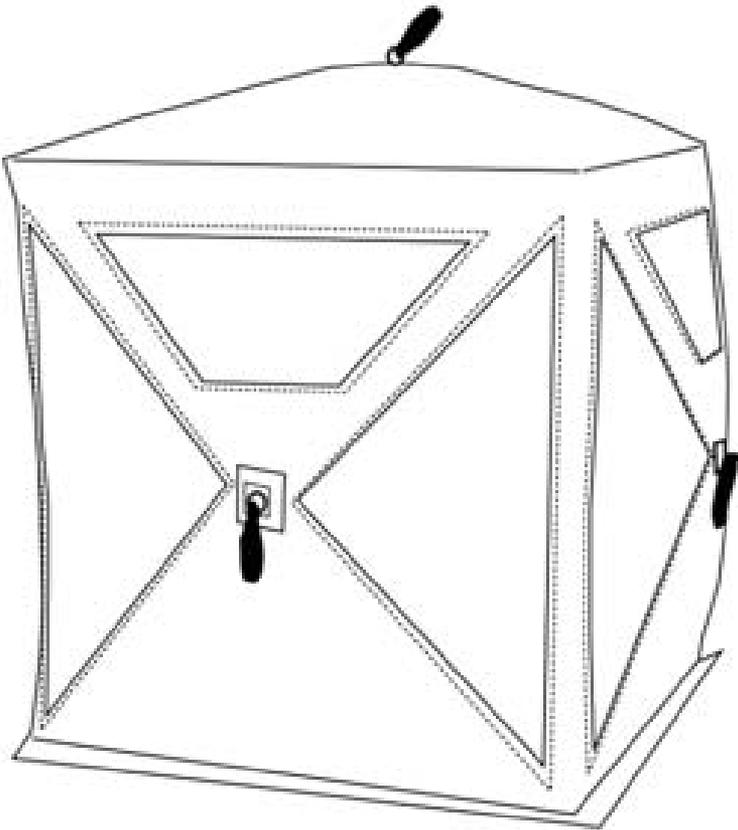


Be sure to follow these guidelines for using your Product. **READ AND UNDERSTAND ALL INSTRUCTIONS and WARNINGS FIRST.** If you have any questions or confusion regarding the use of this product contact our Customer Service Department.

SET-UP


- 1 Remove blind from back pack and spread out arms of blind out as much as possible as shown in Figure 1.

Figure 1

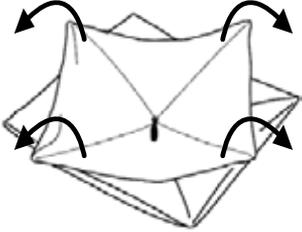


- 2 Firmly pull one of the hubs until it pops open. **Note:** You can start with any hub but it is usually best to open the roof hub last.

Figure 2

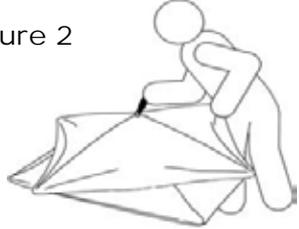


- 3 **Note:** If you cannot access the wall hub when starting to lift the blind in Step 4, rotate the opened wall left to right slightly as shown in Figure 3, while lifting. This will allow the blind to open so you can pull the remaining hubs into place.

Figure 3

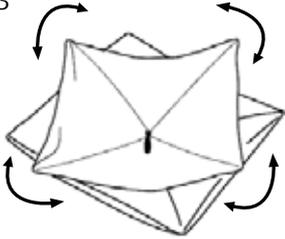


- 4 Lift the blind until you can access another wall hub and firmly pull until wall pops out as shown in Figure 4.

Figure 4

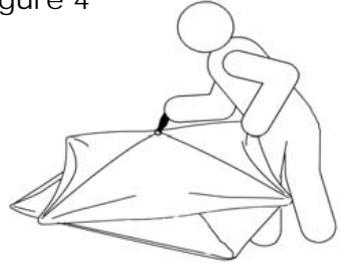

- 5 Continue around blind, pulling the hubs one at a time, until all hubs are extended as shown in Figure 5.

Figure 5

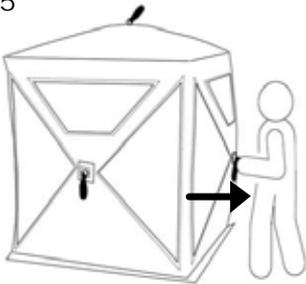

- 6 Your blind should now be set up as shown in Figure 6. Use stakes to secure blind to the ground. Adjust windows, and add native brush to stubble pockets (if available on your model) to optimize your camouflage.

Figure 6



Stakes and high wind tie-downs included
Back pack carrying case included

TAKE-DOWN

IMPORTANT: Be sure to remove ALL brush, dirt and debris. Remove stakes and tie-downs and be sure to close ALL windows BEFORE beginning take-down. If your blind includes a floor it must be removed before take-down or damage could be caused to your blind.

- 1 Exit blind, zip all windows shut, remove all ground stakes and store in small pouch.
- 2 Make sure door is zipped shut.
- 3 With an open palm, push center hub of one of the walls until the tension begins to give as shown in Figure 3.
- 4 Repeat Step 3 on remaining walls. Once all walls have been pushed in, blind will collapse onto ground as shown in Figure 4.

Figure 3

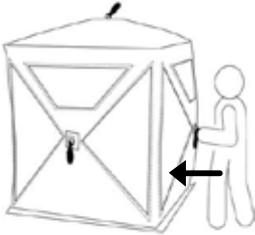


Figure 4




- 5 With an open palm, push center hub pole of roof until tension gives as shown in Figure 5.
- 6 Blind should look like Figure 6.

Figure 5



Figure 6

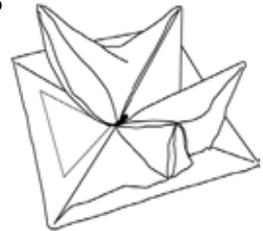

- 7 Gather all corners of blind as shown in Figure 7. Once all the corners are gathered, place blind into backpack with hubs at the bottom & the soft ends at the top.
- 8 **Note:** If you cannot bring all of the corners of the blind together, gently rotate the top-most corners from left to right as you continue to bring them together. You will feel them “free-up” and collapse as shown in Figure 8.

Figure 7


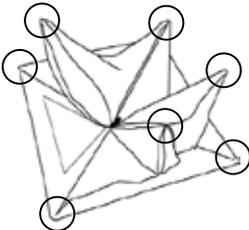


Figure 8

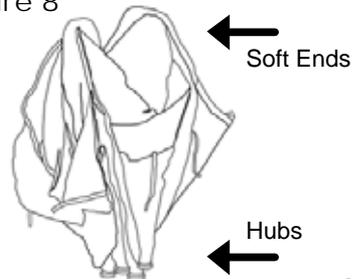

NOTE: Images used are for demonstration purposes only and may not depict actual product.

STORAGE & TIPS

STORAGE & TIPS

- Store Blind in a cool dry place - free of native brush, dirt and any debris
- Never store Blind wet or damp
- Avoid leaving Blind outdoors for any extended period of time. Prolonged exposure to sunlight may cause fabric to fade.
- To stop any leakage, use seam sealer on all seams and silicon spray on seams/sidewalls.

WARNING: KEEP ALL FLAME AND HEAT SOURCES AWAY FROM TENT FABRIC.

The fabric will burn if left in continuous contact with a flame source. It is not fireproof. Do not use candles, matches or open flames of any kind in or near a tent; do not cook inside a tent; do not smoke in a tent; do not store flammable liquids inside a tent; build campfires downwind and several meters away from a tent and be sure to fully extinguish campfires before leaving a campsite or before retiring for the night; exercise extreme caution when using fuel-powered lanterns or heaters inside a tent and use battery operated lanterns whenever possible; do not refuel lamps, heaters or stoves inside a tent; extinguish or turn off all lanterns before going to sleep.

THINK SAFETY!

- NEVER USE A HEATER IN YOUR AMERISTEP® BLIND UN-VENTED FUMES COULD CAUSE SICKNESS OR DEATH
 - NEVER EXPOSE YOUR BLIND TO ANY OPEN FLAME. THIS PRODUCT IS NOT FIREPROOF
 - NEVER SHOOT THROUGH MESH WITH A FIREARM SPARKS OR FLAME FROM THE MUZZLE COULD IGNITE THE MATERIAL
 - NEVER SHOOT EXPANDABLE BROADHEADS THROUGH THE TSC WINDOWS - THE MESH MAY CAUSE PREMATURE OPENING OF THE BLADES. USE FIXED BLADE BROADHEADS ONLY
 - FOR BEST ARROW FLIGHT THRU TSC AND SHOOT-THROUGH MESH WINDOWS, ALIGN BROADHEAD BLADES WITH FLETCHING
 - NEVER ALLOW CHILDREN TO PLAY WITH THIS PRODUCT WITHOUT ADULT SUPERVISION
 - NEVER ALLOW MATERIAL TO COVER YOUR FACE. IT CAN CAUSE SUFFOCATION AND DEATH
 - NEVER ALLOW ANYONE TO USE LIGHTED CANDLES, MATCHES OR OTHER SOURCES OF FIRE NEAR THIS PRODUCT
- UV (ULTRAVIOLET LIGHT) WARNING:
Ultraviolet light breaks down lightweight fabric fibers (and almost any synthetic material). The material will fade (discolor), lose strength and eventually disintegrate if left in prolonged sunlight. To extend the life of your Ameristep® product avoid leaving it out in direct sunlight. Set up your portable ground blind or accessory in a shady spot whenever possible to extend the product life.

Be sure to follow these guidelines for using your Product.
READ AND UNDERSTAND ALL INSTRUCTIONS and WARNINGS FIRST.
If you have any questions or confusion regarding the use of this product contact our Customer Service Department.