



Shotgun Mag Clamp and Sling Swivel Stud

Installation Instructions

PART# SMC1100

(Fits: 12 Ga Remington 870, Winchester 1200/1300 & SXP)


Thank you for purchasing an ATI product!

Advanced Technology
INTERNATIONAL



Mag Clamp Installation

Point the shotgun in a safe direction and place the safety in the "on" position. Next, cycle the shotgun and carefully inspect the chamber to be sure the shotgun is unloaded.

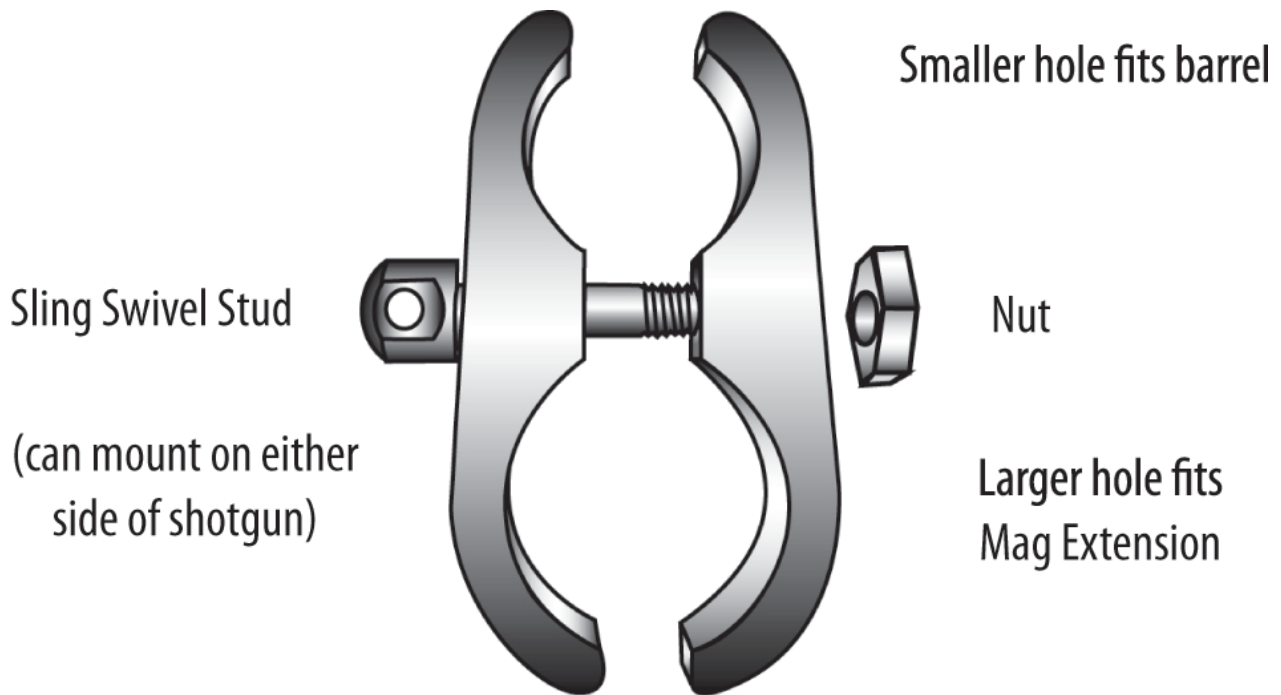

Advanced Technology International • Made In the USA • Limited Lifetime Warranty

2733 West Carmen Ave • Milwaukee, WI 53209

Toll Free: 800.925.2522 • Fax: 414.464.3112

www.ATIGunstocks.com