




This document is subject to the Arms Export Control Act (22 U.S.C. 7228) and the International Traffic in Arms Regulations (22 C.F.R. Parts 120-130). A prior authorization or license from the U.S. State Department Directorate of Defense Trade Controls is required to export, re-export, re-transfer, or show this document to any foreign person whether in the United States or abroad.

MOE SL"-K STOCK

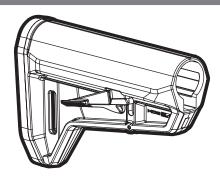

INSTALLATION INSTRUCTIONS


WARNING: BEFORE STARTING, MAKE SURE THE WEAPON IS UNLOADED, THE CHAMBER IS EMPTY, AND THE SAFETY ENGAGED.



STEP 1: REMOVE EXISTING STOCK


Remove existing stock per armory guidelines.

Refer to US Army TM 9-1005-319-23&P for assistance.

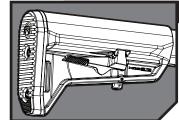

STEP 4: BOTTOM OUT CROSS PIN


Use a screwdriver or round punch in the Lock Pin Hole to pry the Lock Pin down until the Cross Pin bottoms out. Push Stock forward.

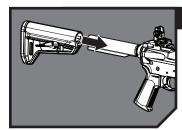

STEP 2: INSTALL STOCK


DO NOT FORCE PARTS TOGETHER! Align Stock Body with the carbine receiver extension and gently slide together until the stock stops (approx. 2-1/8").

If stock does not easily slide over receiver extension, refer to fit guide in box.

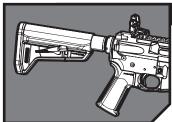

STEP 5: VERIFY INSTALL

Perform final inspection including function test per US Army TM 9-1005-319-23&P Unit and Direct Support Maintenance Manual to verify correct installation. Always test fire your weapon before using it in an operational environment.

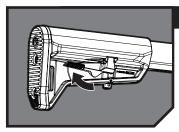

STEP 3: EXPOSE LOCK PIN HOLE

Depress Release Levers to expose Lock Pin Hole.

NOTE: The SL-K is for Military Spec Receiver Extension only.