



Rear Pistol Grip Assembly

Installation Instructions

PART#SRG0200

(Fits: 12 Ga Mossberg 500/535/590/835, Remington 870, Winchester 1200/1300)

Advanced Technology
INTERNATIONAL

Thank you for purchasing an ATI product!



Stock Installation

Point the shotgun in a safe direction and place the safety in the "on" position. Next, cycle the shotgun and carefully inspect the chamber to be sure the shotgun is unloaded.

Step #1

Remove the existing recoil pad from your stock by unscrewing the two phillips head screws in the rear of the pad.



Figure 1

Step #2

Use a long flat head screwdriver or the appropriate socket with extension to remove the stock bolt from the inside of the opening in the rear of the stock.



Figure 2

Step #3

Select the correct adapter for your shotgun. The Mossberg and Maverick require no adapters. The Remington/Norinco and Winchester adapters are marked.

Step #4

Select the mounting bolt supplied for your shotgun.
Note: Norinco 98 Series is for Law Enforcement only, a metric 6 x 50mm bolt must be purchased for the Norinco shotgun.

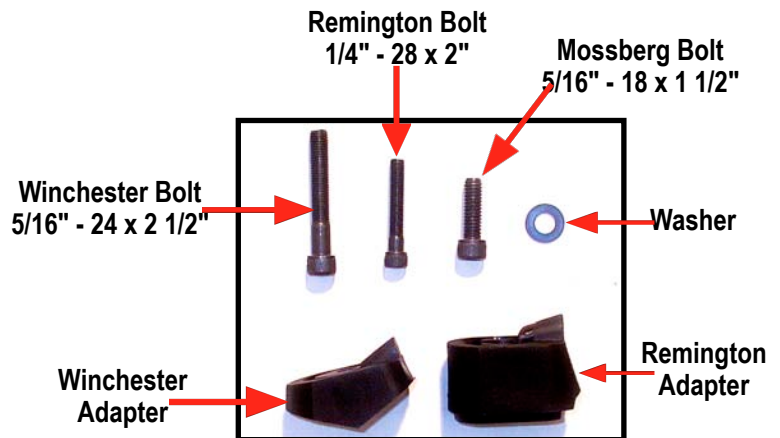


Figure 3

Advanced Technology International • Made In the USA • Limited Lifetime Warranty
2733 West Carmen Ave • Milwaukee, WI 53209
Toll Free: 800.925.2522 • Fax: 414.464.3112



Rear Pistol Grip Assembly

Installation Instructions

PART#SRG0200

(Fits: 12 Ga Mossberg 500/535/590/835, Remington 870, Winchester 1200/1300)

Thank you for purchasing an ATI product!

Advanced Technology
INTERNATIONAL



Stock Installation

Step #5

Place the bolt, with supplied washer through the back of the grip and adapter (if used).



Figure 4

Step #7

Place the pistol grip end cover at the rear of the grip and press into place.



Figure 6

Step #6

Secure to the shotgun receiver by tightening the bolt using an allen wrench.



Figure 5

Advanced Technology International • Made In the USA • Limited Lifetime Warranty

2733 West Carmen Ave • Milwaukee, WI 53209

Toll Free: 800.925.2522 • Fax: 414.464.3112