




## TactLite Stock Shell Carrier



### Warning:

When handling a firearm, always follow the proper handling procedures at all times. Failure to follow these procedures could result in serious damage, injury, or death. WE are not responsible for damage to property, injury, or death resulting from improper installation, misuse or modification of products. If you are not comfortable completing any of the following steps, or do not have the proper tools enlist the help of your local gunsmith. We are not responsible for components that are damaged due to improper installation.

### Parts List

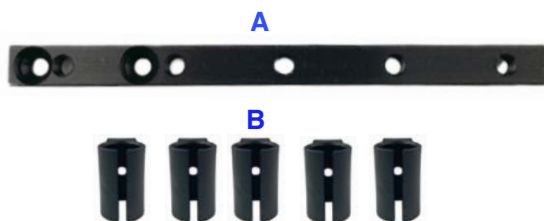


- A. Shell Carrier  
B. Add-a-Shell (5)

### Hardware List



1. Screw 6-32 x 7/16 (2)  
2. Screw 10-32 x 1/4" (5)


### 1 Shell Carrier Installation

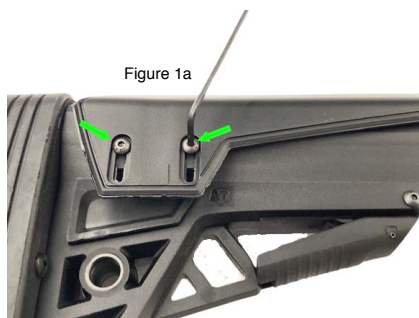

Using a 5/64 allen wrench, begin by removing the (2) 6-32 x 1/4" low profile allen head screws from the cheekrest as seen in (Figure 1).



Note: This Shell Carrier can be installed on either side of the cheekrest

### 1 Shell Carrier Installation Continued

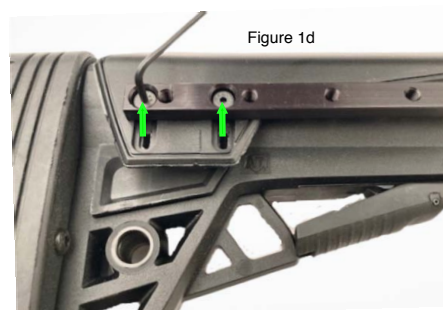

Using the provided (2) 6-32 x 7/16 flat head cap screws (#1) and a 5/64 allen wrench, tighten the shell carrier to the cheekrest as seen in (Figure 1d).

### 2 Shell Holder Installation

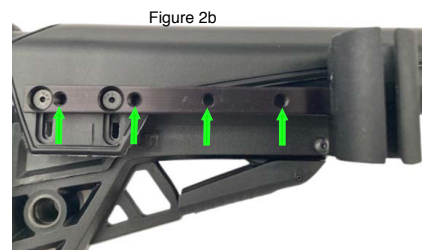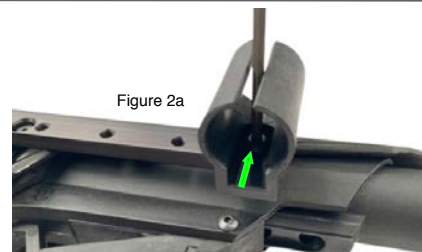

Next, take the shell carrier and place onto the cheekrest as seen in (Figure 1b) making sure that the locating tabs are positioned into the screw holes.

Place the shell holder onto the carrier and install the provided 10-32 x 1/4" low profile hex cap screw (#2) using a 1/8" allen wrench as seen in (Figure 2a). Note: You may install up to 5 shell holders as seen in (Figure 2b).

**You're finished.  
Now enjoy your New Product!**

**Add additional ATI Accessories  
to your Builds!**