


## BEFORE YOU BEGIN INSTALLATION:

*Make sure firearm is unloaded & the magazine removed.*

# ATI's AR-15 Sling Adapter

1. Remove lower handguard.
2. Insert round threaded adapter through hole in lower handguard. Align supplied washer over round threaded adapter. Install stud and tighten.
3. Install sling swivel onto stud.

**Note:** For M-4 Handguards, drill a 9/16" hole through the inner aluminum heatshield and in alignment with a hole in lower handguard.

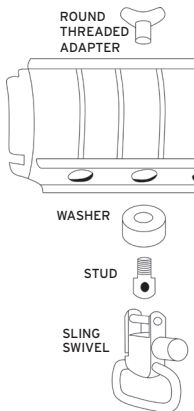

View Installation Videos at:  
[www.ATIGunstocks.com](http://www.ATIGunstocks.com)

Advanced Technology International  
2733 West Carmen Avenue • Milwaukee, WI 53209 • 800.925.2522