




Tactlite Adjustable Cheekrest Kit Installation



Warning:

When handling a firearm, always follow the proper handling procedures at all times. Failure to follow these procedures could result in serious damage, injury, or death. WE are not responsible for damage to property, injury, or death resulting from improper installation, misuse or modification of products. If you are not comfortable completing any of the following steps, or do not have the proper tools enlist the help of your local gunsmith. We are not responsible for components that are damaged due to improper installation.

Parts List

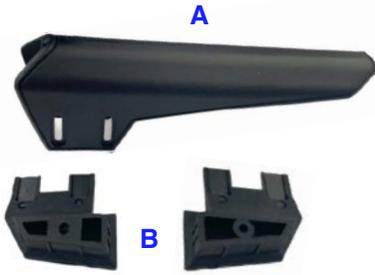


- A. Cheekrest
- B. Right/Left Mounts

Hardware List




- 1. Screw 6-3 x 3/4"
- 2. Screw 6-32 x 1/4" (4)
- 3. Nut 6-32 (5)

1 Hex Nut to Mount Installation

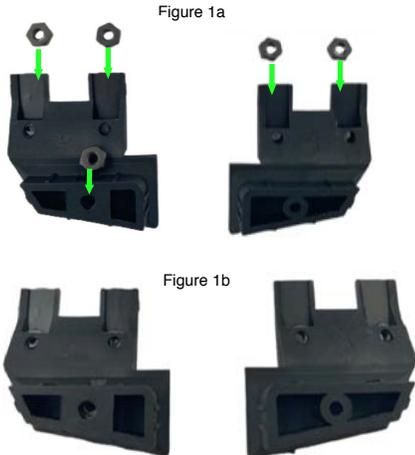


Begin by placing the (5) 6-32 hex nuts as seen in (Figure 1a) into the slots of the cheekrest mounts until seated as seen in (Figure 1b).

2 Cheekrest Mount Installation Continued

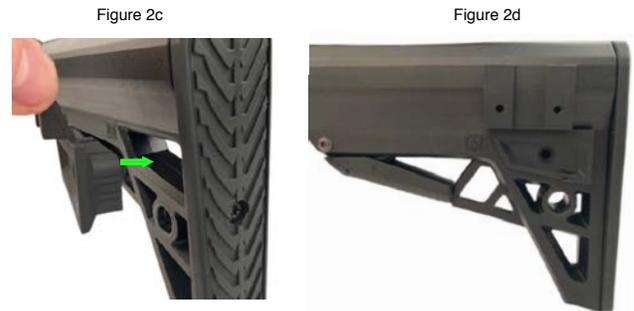


Turn the stock over and attach the left side cheekrest mount as seen in (Figure 2c) and snap into the pocket until seated as seen in (Figure 2d).

2 Cheekrest Mount Installation

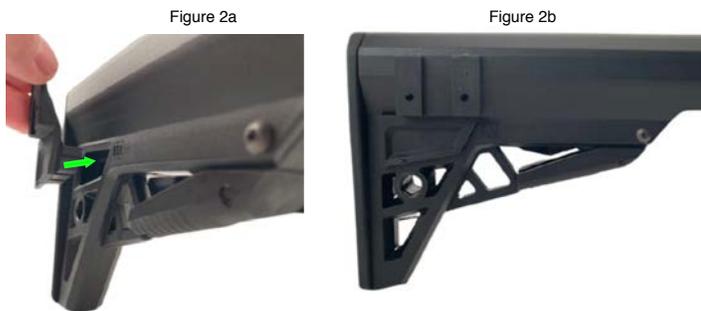

Begin by attaching the right side cheekrest mount as seen in (Figure 2a) and snap into the pocket until seated as seen in (Figure 2b).

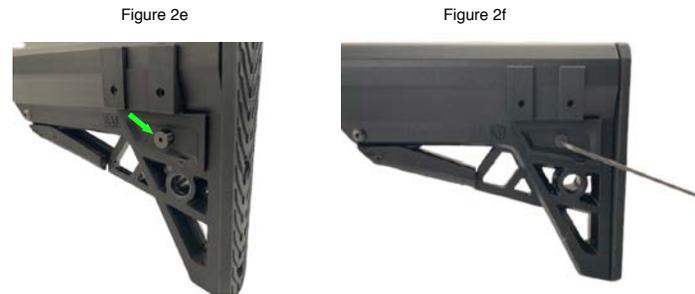

Using the provided 6-32 x 3/4" screw (1) as seen in (Figure 2e), thread the screw through the left side cheekrest mount and tighten using the appropriate allen wrench as seen in (Figure 2f).



Tactlite Adjustable Cheekrest Kit Installation



Warning:

When handling a firearm, always follow the proper handling procedures at all times. Failure to follow these procedures could result in serious damage, injury, or death. WE are not responsible for damage to property, injury, or death resulting from improper installation, misuse or modification of products. If you are not comfortable completing any of the following steps, or do not have the proper tools enlist the help of your local gunsmith. We are not responsible for components that are damaged due to improper installation.

3 Cheekrest Installation

Figure 3a



Figure 3b



Take the cheekrest as seen in (Figure 3a) and slide onto the cheekrest mounts making sure the holes on the cheekrest line up with the cheekrest mount holes as seen in (Figure 3b).

Figure 3c



Figure 3d



Using the provided 6-32 x 1/4" screws (2) and the appropriate allen wrench, tighten the left side of the cheekrest as seen in (Figure 3c). Turn the stock over and repeat the process to tighten the ride side of the cheekrest as seen in (Figure 3d).

**You're finished.
Now enjoy your New Stock!**

**Add additional ATI Accessories to
your Builds!**

▶ **Limited Life Time Warranty**

▶ **www.ATIoutdoors.com**

▶ **Made in the USA**