

SEMI-AUTOMATIC SHOTGUN INSTRUCTION MANUAL MODEL PARDUS SS/AS/CS

READ THE INTRUCTIONS AND WARNINGS IN THIS MANUAL CAREFULLY BEFORE USING THIS FIREARM

SAFETY FIRST

Please do not use your shotgun before reading safety rules and this manual.

Observe these rules of safe gun handling.

- 1. Always keep the muzzle pointed in a safe direction. Watch the muzzle at all time, never point a gun. accidentally or intentionally, at any person or anything you do not intend to shoot. Identify the target before shooting; do not shoot at sounds.
- 2. Always treat a gun as if it is loaded it may be!
- Keep your finger off the trigger while operating the action and at all other times until you are ready to shoot.
- 4. Keep the safety "on" or in the "safe" position at all times until you are ready to fire. Do not rely on your gun's safety, the safety on any gun is a mechanical device and is not intended as a substitute for common sense or safe gun handling.
- 5. Learn how your gun functions and handles. If you do not thoroughly understand the proper use and care of your gun, seek the advice of someone who is knowledgeable.
- 6. Do not alter or modify any part of the firearm.
- 7. Store guns unloaded, separate from any ammunition, and out of the reach of children.
- 8. Be sure the barrel is clear of any obstructions before loading. Make it a habit to check the barrel every time before loading.
- 9. Be sure you have and use the proper ammunition. A 20 gauge shell will enter a 12 gauge chamber far enough so that a 12 gauge shell can be loaded behind it. Also,
- a 3 inch shell may fit into a 2 inch chamber, but the crimp at the mouth of the shell will unfold into the forcing cone. If either of these things occur and you fire the gun, the gun will explode, damaging the gun and possibly causing serious injury or death
- to you and those around you.

 10. Wear protective shooting glasses and adequate ear protection when shooting.
- 11. Never climb or jump over anything, such as a tree, fence, or ditch, with a loaded gun. Put safety ON. Open the barrel on barrel break shotguns, remove the shells/discharge the chamber on pump and semi-auto shotguns and hand the gun to someone else or place it on the ground on the other side of the obstacle before crossing it yourself. Do not lean a gun against a tree or other object; it could fall and possibly discharge.
- 12. Do not shoot at a hard surface or at water. Bullet and shot can ricochet or bounce off and travel in unpredictable directions with great velocity.
- 13. Never transport a loaded gun. DO NOT place a loaded gun into a vehicle. The gun should be unloaded and placed into a case when not in use.
- 14. Never drink alcoholic beverages before or during shooting.
- 15. Never try to repair the shotgun on your own if you are not educated or expert of. This may cause un-willed damage to your gun which may seriously injure you or someone around you.
- 16. Never fire your gun without choke tubes (if comes with interchangable choke tubes and a thread in the muzzle) snuggly tightened in barrels.

SAFETY SWITCH OR BUTTON

The safety is designed to stop the trigger mechanism.

DON'T RELY ON YOUR GUN'S SAFETY. TREAT EVERY GUN AS IF IT WERE LOADED AND READY TO FIRE. The safety on any gun is a mechanical device, and it is not intended as a substitute for common sense or safe gun handling. Always keep the muzzle pointed in a safe direction.

cci-

A. The safety is located behind the trigger, and provides protection against a eddental or unintentional discharge under normal usage when properly engad

B. To engage the safety, push the button so that it protrudes from the right side of the gun and the RED BAND MARKING CAN NOT BE SEEN. The safety should always be in the "on" or "safe" position until you intend to fire the gun (photo 1).

C. When you are ready to fire the gun, press the safety button to the "off" or "fire" position, so that the safety protrudes from the left side of the gun and the RED BAND MARKING IS SHOWING.



llv/

DANGER: The gun will fire when the trigger is pulled intentionally or acciddenta when the **RED BAND MARKING IS SHOWING.**

ASSEMBLY

oup


In the packing, the shotgun is divided into two parts: receiver and barrel gr (photo 2).





To assemble the gun, follow the steps below:


Unscrew the cap (photo 3) and remove the forend (photo 4).

Pull the bolt hanging latch placed on the rear side of the carrier (photo 5). Assemble the barrel while centering the magazine and the receiver (photo 6). Reassemble the forend (photo 7) and screw the cap onto the threaded magazine tube (photo 8)

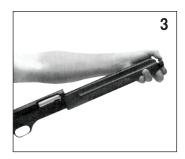

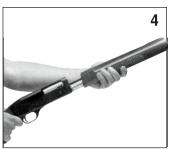

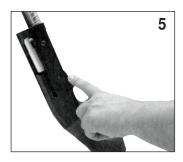

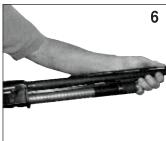





LOADING YOUR SHOTGUN


You can load your shotgun in the following ways:

1. Be certain the safety is in the "on" or "safe" position (see section regarding operation of the safety on pages 3 and 4).

Draw or pull the bolt rearward until it locks in the open position (photo 12). Place a shell into the breach (photo 9). Release the bolt by pressing the button located toward the front of the receiver (photo 10). This chambers a round, and the gun will fire if the trigger is pulled with the safety in the "off" or "fire" position. You can then load additional shells into the magazine by inserting them through the loading port on the bottom of the receiver and pushing them into the magazine (photo 11).

2. Be certain the safety is in the "on" or "safe" position (see section regarding operation of the safety on pages 3 and 4).


Draw or pull the bolt rearward until it locks in the open position (photo 12). Load shells into the magazine by inserting them through the loading port on the bottom of the receiver and pushing them into the magazine (photo 11). Push back the magazine shell latch on the rear side of the carrier (photo 13). This allows the shell to exit the magazine and move onto the carrier. Release the bolt by pressing the buttom located toward the front of the receiver (photo 10). This chambers a round, and the gun will fire if the trigger is pulled with the safety in the "off" or "fire" position.

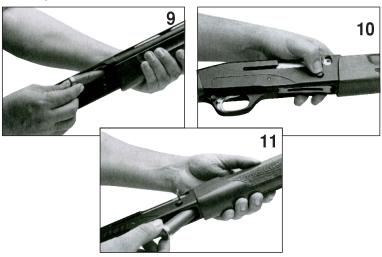


UNLOADING YOUR SHOTGUN

Be cartain the safety is in the "on" or "safe" position (see the section regarding operation of the safety on pages 3 and 4). Repidly draw or pull the bolt reaward to eject any shell in the chamber (photo 12). Lock the bolt open by pressing the button located toward the front of the receiver (photo 13). Lift thecarrier and push on the magazine shell latch (photo 14). The shells in the magazine will be ejected.



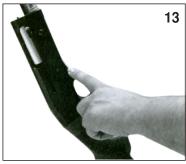

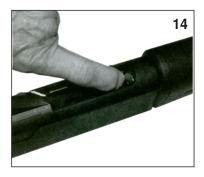


DISASSEMBLY

Unscrew the forend cap.

Take the forend and the barrel off (photo 15).

Take the handle off from the bolt and then all the bolt assembly (photo 16).

With a tool, push the pin(s) of the trigger group out (photo 17) and take the trigger group off (photo 18).

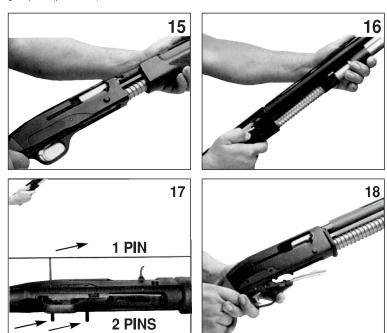


REASSEMBLY

Assemble on the magazine tube, the action spring and insert the bolt group into the receiver.

Insert the handle into its hole.

Reassemble the trigger group fixing it with the pin(s).

SPARE PARTS

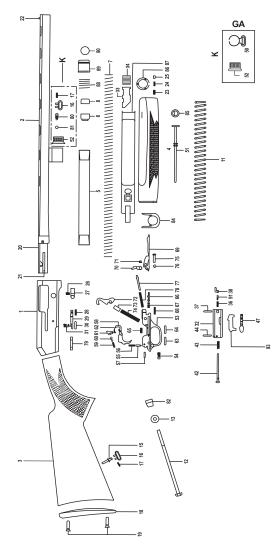


PART NO	DESCRIPTION
1	RECEIVER
2	BARREL
3	STOCK
4	FOREARM
5 6	MAGAZINE TUBE MAGAZINE FOLLOWER
7	MAGAZINE FOLLOVVEN MAGAZINE SPRING
8	MAGAZINE SPRING RETAINER
11	ACTION SPRING
12	STOCK BOLT
13	STOCK BOLT WASHER
15	STOCK SWIVER STUD
16	STOCK SWIVEL
17	STOCK SWIVEL PIN
18	BUTT PLATE
19	BUTT PLATE SCREW
20	BEARING BOLT
21	EJECTOR
22	FRONT BEAD
23	MAGAZINE CAP SPRING
24	MAGAZINE CAP PIN
25 26	MAGAZINE CAP SCREW BOLT RELEASE SPRING
27	BOLT RELEASE
28	BOLT RELEASE PIN
29	BOLT RELEASE LATCH
30	BOLT RELEASE LATCH PIN
31	BOLT RELEASE LATCH SPRING
32	BREECH BOLT
33	ARM PİPE
34	CONNECTION RUBBER
36	EXTRACTOR SPRING BOLT
37	EXTRACTOR RETAINIG PIN
38	EXTRACTOR
42	FIRING PIN
43	FIRING PIN SPRING FIRING PIN RETAINER
44 47	OPERATING HANDLE
50	FRONT SWIVEL
51	MAGAZINE PLUG
	IVIAGAZIIVE I LOG

52 MAGAZINE CAP 53 GUARD 54 SAFETY 55 SAFETY PLUNGER 56 SAFETY SPRING 57 SAFETY PLUNGER 58 TRIGGER 59 SEAR SPRING 60 SEAR PLUNGER 61 SEAR 62 SEAR PIN 63 TRIGGER PIN 64 TRIGGER PIN 65 TRIGGER SPRING 66 CARRIER PLUNGER 67 CARRIER SPRING 68 CARRIER RETAINING PIN 69 CARRIER 70 CARRIER LATCH 71 CARRIER LATCH PIN 72 HAMMER 73 HAMMER SPRING 75 TRIGGER ASSEMBLY PIN SLEEVE 76 TRIGGER ASSEMBLY PIN RETAINER 77 CARRIER LATCH PLUNGER 78 CARRIER LATCH PLUNGER 79 TRIGGER ASSEMBLY PIN RETAINER 70 CARRIER LATCH PLUNGER 71 CARRIER LATCH PLUNGER 72 TRIGGER ASSEMBLY PIN RETAINER 73 SWIVEL STUD 74 SWIVEL STUD 75 TRIGGER GUARD 76 SWIVEL STUD 77 TRIGGER GUARD 78 CARRIER LATCH PLUNGER 79 TRIGGER GUARD 80 SWIVEL STUD 81 SWIVEL STUD 81 SWIVEL STUD RETAINER 82 STOCK BOLT RECEIVER 84 PLATE 85 MAGAZINA CAP SUPPORT 86 MAGAZINA CAP SUPPORT 87 ACTION BAR 88 GAS PISTON SPRING 89 GAS PISTON 90 RUBBER GAS RING 91 EXTRACTOR SPRING	PART NO	DESCRIPTION
54 SAFETY 55 SAFETY PLUNGER 56 SAFETY SPRING 57 SAFETY PLUNGER 58 TRIGGER 59 SEAR SPRING 60 SEAR PLUNGER 61 SEAR 62 SEAR PIN 63 TRIGGER PIN 64 TRIGGER PIN 65 TRIGGER SPRING 66 CARRIER PLUNGER 67 CARRIER SPRING 68 CARRIER RETAINING PIN 69 CARRIER 70 CARRIER LATCH 71 CARRIER LATCH 71 CARRIER LATCH PIN 72 HAMMER 73 HAMMER SPRING 75 TRIGGER ASSEMBLY PIN SLEEVE 76 TRIGGER ASSEMBLY PIN RETAINER 77 CARRIER LATCH PLUNGER 78 CARRIER LATCH PLUNGER 79 TRIGGER ASSEMBLY PIN RETAINER 79 TRIGGER GUARD 80 SWIVEL STUD 81 SWIVEL STUD 81 SWIVEL STUD RETAINER 82 STOCK BOLT RECEIVER 84 PLATE 85 MAGAZINE PLUG RETAINER 86 MAGAZINA CAP SUPPORT 87 ACTION BAR 88 GAS PISTON SPRING 89 GAS PISTON 90 RUBBER GAS RING	52	MAGAZINE CAP
55 SAFETY PLUNGER 56 SAFETY SPRING 57 SAFETY PLUNGER 58 TRIGGER 59 SEAR SPRING 60 SEAR PLUNGER 61 SEAR 62 SEAR PIN 63 TRIGGER PIN 64 TRIGGER PIN 65 TRIGGER SPRING 66 CARRIER PLUNGER 67 CARRIER PLUNGER 68 CARRIER RETAINING PIN 69 CARRIER 70 CARRIER LATCH 71 CARRIER LATCH PIN 72 HAMMER 73 HAMMER PLUNGER 74 HAMMER SPRING 75 TRIGGER ASSEMBLY PIN SLEEVE 76 TRIGGER ASSEMBLY PIN RETAINER 77 CARRIER LATCH PLUNGER 78 CARRIER LATCH SPRING 79 TRIGGER GUARD 80 SWIVEL STUD 81 SWIVEL STUD RETAINER 82 STOCK BOLT RECEIVER 84 PLATE 85 MAGAZINE PLUG RETAINER 86 MAGAZINE PLUG RETAINER 87 ACTION BAR 88 GAS PISTON 90 RUBBER GAS RING	53	
56 SAFETY SPRING 57 SAFETY PLUNGER 58 TRIGGER 59 SEAR SPRING 60 SEAR PLUNGER 61 SEAR 62 SEAR PIN 63 TRIGGER PIN 64 TRIGGER PIN 65 TRIGGER SPRING 66 CARRIER PLUNGER 67 CARRIER PLUNGER 68 CARRIER RETAINING PIN 69 CARRIER 70 CARRIER LATCH 71 CARRIER LATCH PIN 72 HAMMER 73 HAMMER PLUNGER 74 HAMMER SPRING 75 TRIGGER ASSEMBLY PIN SLEEVE 76 TRIGGER ASSEMBLY PIN RETAINER 77 CARRIER LATCH PLUNGER 78 CARRIER LATCH PLUNGER 79 TRIGGER ASSEMBLY PIN RETAINER 79 TRIGGER ASSEMBLY PIN RETAINER 80 SWIVEL STUD 81 SWIVEL STUD 81 SWIVEL STUD 82 STOCK BOLT RECEIVER 84 PLATE 85 MAGAZINE PLUG RETAINER 86 MAGAZINA CAP SUPPORT 87 ACTION BAR 88 GAS PISTON 90 RUBBER GAS RING		
57 SAFETY PLUNGER 58 TRIGGER 59 SEAR SPRING 60 SEAR PLUNGER 61 SEAR 62 SEAR PIN 63 TRIGGER PIN 64 TRIGGER PIN 65 TRIGGER SPRING 66 CARRIER PLUNGER 67 CARRIER SPRING 68 CARRIER RETAINING PIN CARRIER LATCH 70 CARRIER LATCH PIN 71 CARRIER LATCH PIN 72 HAMMER 73 HAMMER PLUNGER 74 HAMMER SPRING 75 TRIGGER ASSEMBLY PIN SLEEVE 76 TRIGGER ASSEMBLY PIN RETAINER 77 CARRIER LATCH PLUNGER 78 CARRIER LATCH PLUNGER 79 TRIGGER GUARD 80 SWIVEL STUD 81 SWIVEL STUD 81 SWIVEL STUD RETAINER 82 STOCK BOLT RECEIVER 84 PLATE 85 MAGAZINE PLUG RETAINER 86 MAGAZINA CAP SUPPORT 87 ACTION BAR 88 GAS PISTON 90 RUBBER GAS RING		
TRIGGER SEAR SPRING SEAR PLUNGER SEAR PIN SEAR PIN TRIGGER PIN TRIGGER PIN TRIGGER SPRING CARRIER SPRING CARRIER SPRING CARRIER RETAINING PIN CARRIER LATCH CARRIER LATCH PIN AMMER HAMMER PLUNGER TRIGGER ASSEMBLY PIN SLEEVE TRIGGER ASSEMBLY PIN RETAINER CARRIER LATCH PLUNGER ARRIER LATCH PLUNGER SEAR PLUNGER AMMER PLUNGER AMMER PLUNGER AMMER SPRING TRIGGER ASSEMBLY PIN SLEEVE TRIGGER ASSEMBLY PIN RETAINER CARRIER LATCH PLUNGER SEAR CARRIER LATCH SPRING TRIGGER GUARD SWIVEL STUD SWIVEL STUD SWIVEL STUD MAGAZINE PLUG RETAINER MAGAZINA CAP SUPPORT ACTION BAR GAS PISTON BUBBER GAS RING		
SEAR SPRING SEAR PLUNGER SEAR SEAR PIN TRIGGER PIN TRIGGER PIN TRIGGER SPRING CARRIER PLUNGER CARRIER PLUNGER CARRIER RETAINING PIN CARRIER LATCH CARRIER LATCH CARRIER LATCH PIN TAMMER HAMMER PLUNGER TRIGGER ASSEMBLY PIN SLEEVE TRIGGER ASSEMBLY PIN RETAINER CARRIER LATCH PUNGER TRIGGER ASSEMBLY PIN RETAINER TRIGGER ASSEMBLY PIN RETAINER SCARRIER LATCH PLUNGER TRIGGER GUARD SWIVEL STUD SWIVEL STUD SWIVEL STUD RETAINER STOCK BOLT RECEIVER PLATE MAGAZINA CAP SUPPORT ACTION BAR GAS PISTON SPRING SUBBER GAS RING		
60 SEAR PLUNGER 61 SEAR 62 SEAR PIN 63 TRIGGER PIN 64 TRIGGER PIN 65 TRIGGER SPRING 66 CARRIER PLUNGER 67 CARRIER SPRING 68 CARRIER RETAINING PIN 69 CARRIER 70 CARRIER LATCH 71 CARRIER LATCH 71 CARRIER LATCH PIN 72 HAMMER 73 HAMMER PLUNGER 74 HAMMER SPRING 75 TRIGGER ASSEMBLY PIN SLEEVE 76 TRIGGER ASSEMBLY PIN RETAINER 77 CARRIER LATCH PLUNGER 78 CARRIER LATCH SPRING 79 TRIGGER GUARD 80 SWIVEL STUD 81 SWIVEL STUD 81 SWIVEL STUD RETAINER 82 STOCK BOLT RECEIVER 84 PLATE 85 MAGAZINE PLUG RETAINER 86 MAGAZINA CAP SUPPORT 87 ACTION BAR 88 GAS PISTON 90 RUBBER GAS RING		
61 SEAR 62 SEAR PIN 63 TRIGGER PIN 64 TRIGGER PIN 65 TRIGGER SPRING 66 CARRIER PLUNGER 67 CARRIER SPRING 68 CARRIER RETAINING PIN 69 CARRIER 70 CARRIER LATCH 71 CARRIER LATCH PIN 72 HAMMER 73 HAMMER PLUNGER 74 HAMMER SPRING 75 TRIGGER ASSEMBLY PIN SLEEVE 76 TRIGGER ASSEMBLY PIN RETAINER 77 CARRIER LATCH PLUNGER 78 CARRIER LATCH SPRING 79 TRIGGER GUARD 80 SWIVEL STUD 81 SWIVEL STUD 81 SWIVEL STUD RETAINER 82 STOCK BOLT RECEIVER 84 PLATE 85 MAGAZINE PLUG RETAINER 86 MAGAZINA CAP SUPPORT 87 ACTION BAR 88 GAS PISTON SPRING 90 RUBBER GAS RING		
62 SEAR PIN 63 TRIGGER PIN 64 TRIGGER PIN 65 TRIGGER SPRING 66 CARRIER PLUNGER 67 CARRIER SPRING 68 CARRIER RETAINING PIN 69 CARRIER 70 CARRIER LATCH 71 CARRIER LATCH PIN 72 HAMMER 73 HAMMER PLUNGER 74 HAMMER SPRING 75 TRIGGER ASSEMBLY PIN SLEEVE 76 TRIGGER ASSEMBLY PIN RETAINER 77 CARRIER LATCH PLUNGER 78 CARRIER LATCH SPRING 79 TRIGGER GUARD 80 SWIVEL STUD 81 SWIVEL STUD 81 SWIVEL STUD RETAINER 82 STOCK BOLT RECEIVER 84 PLATE 85 MAGAZINE PLUG RETAINER 86 MAGAZINA CAP SUPPORT 87 ACTION BAR 88 GAS PISTON 90 RUBBER GAS RING		
TRIGGER PIN TRIGGER PIN TRIGGER SPRING CARRIER PLUNGER CARRIER SPRING CARRIER RETAINING PIN CARRIER LATCH CARRIER LATCH THE CARRIER LATCH PIN TO CARRIER LATCH PIN SLEEVE TO TRIGGER ASSEMBLY PIN SLEEVE TO TRIGGER ASSEMBLY PIN RETAINER TO CARRIER LATCH SPRING TRIGGER GUARD TRIGGER GUARD SWIVEL STUD SWIVEL STUD SWIVEL STUD RETAINER STOCK BOLT RECEIVER PLATE MAGAZINE PLUG RETAINER MAGAZINA CAP SUPPORT ACTION BAR MAGAS PISTON SPRING SUBBER GAS RING		<u> </u>
TRIGGER PIN TRIGGER SPRING CARRIER PLUNGER CARRIER SPRING CARRIER RETAINING PIN CARRIER CARRIER LATCH CARRIER LATCH CARRIER LATCH PIN HAMMER HAMMER HAMMER SPRING TRIGGER ASSEMBLY PIN SLEEVE TRIGGER ASSEMBLY PIN RETAINER CARRIER LATCH PLUNGER TRIGGER ASSEMBLY PIN RETAINER CARRIER LATCH SPRING TRIGGER GUARD SWIVEL STUD SWIVEL STUD SWIVEL STUD RETAINER STOCK BOLT RECEIVER HAMGAZINE PLUG RETAINER MAGAZINE PLUG RETAINER MAGAZINA CAP SUPPORT ACTION BAR GAS PISTON GAS PISTON GROWN		
TRIGGER SPRING CARRIER PLUNGER CARRIER SPRING CARRIER RETAINING PIN CARRIER CARRIER LATCH CARRIER LATCH CARRIER LATCH PIN HAMMER HAMMER PLUNGER HAMMER SPRING TRIGGER ASSEMBLY PIN SLEEVE TRIGGER ASSEMBLY PIN RETAINER CARRIER LATCH PLUNGER TRIGGER GUARD SWIVEL STUD SWIVEL STUD SWIVEL STUD RETAINER STOCK BOLT RECEIVER HAMMER MAGAZINE PLUG RETAINER MAGAZINA CAP SUPPORT ACTION BAR GAS PISTON GAS PISTON GROWNER GAS PISTON GROWNER CARRIER LATCH SPRING C		
67 CARRIER SPRING 68 CARRIER RETAINING PIN 69 CARRIER 70 CARRIER LATCH 71 CARRIER LATCH PIN 72 HAMMER 73 HAMMER PLUNGER 74 HAMMER SPRING 75 TRIGGER ASSEMBLY PIN SLEEVE 76 TRIGGER ASSEMBLY PIN RETAINER 77 CARRIER LATCH PLUNGER 78 CARRIER LATCH SPRING 79 TRIGGER GUARD 80 SWIVEL STUD 81 SWIVEL STUD 81 SWIVEL STUD RETAINER 82 STOCK BOLT RECEIVER 84 PLATE 85 MAGAZINE PLUG RETAINER 86 MAGAZINA CAP SUPPORT 87 ACTION BAR 88 GAS PISTON SPRING 89 GAS PISTON 90 RUBBER GAS RING		TRIGGER SPRING
68 CARRIER RETAINING PIN 69 CARRIER 70 CARRIER LATCH 71 CARRIER LATCH PIN 72 HAMMER 73 HAMMER PLUNGER 74 HAMMER SPRING 75 TRIGGER ASSEMBLY PIN SLEEVE 76 TRIGGER ASSEMBLY PIN RETAINER 77 CARRIER LATCH PLUNGER 78 CARRIER LATCH SPRING 79 TRIGGER GUARD 80 SWIVEL STUD 81 SWIVEL STUD 81 SWIVEL STUD RETAINER 82 STOCK BOLT RECEIVER 84 PLATE 85 MAGAZINE PLUG RETAINER 86 MAGAZINA CAP SUPPORT 87 ACTION BAR 88 GAS PISTON SPRING 89 GAS PISTON 90 RUBBER GAS RING	66	CARRIER PLUNGER
69 CARRIER 70 CARRIER LATCH 71 CARRIER LATCH PIN 72 HAMMER 73 HAMMER PLUNGER 74 HAMMER SPRING 75 TRIGGER ASSEMBLY PIN SLEEVE 76 TRIGGER ASSEMBLY PIN RETAINER 77 CARRIER LATCH PLUNGER 78 CARRIER LATCH SPRING 79 TRIGGER GUARD 80 SWIVEL STUD 81 SWIVEL STUD 81 SWIVEL STUD RETAINER 82 STOCK BOLT RECEIVER 84 PLATE 85 MAGAZINE PLUG RETAINER 86 MAGAZINA CAP SUPPORT 87 ACTION BAR 88 GAS PISTON SPRING 89 GAS PISTON 90 RUBBER GAS RING	67	CARRIER SPRING
70 CARRIER LATCH 71 CARRIER LATCH PIN 72 HAMMER 73 HAMMER PLUNGER 74 HAMMER SPRING 75 TRIGGER ASSEMBLY PIN SLEEVE 76 TRIGGER ASSEMBLY PIN RETAINER 77 CARRIER LATCH PLUNGER 78 CARRIER LATCH SPRING 79 TRIGGER GUARD 80 SWIVEL STUD 81 SWIVEL STUD 81 SWIVEL STUD RETAINER 82 STOCK BOLT RECEIVER 84 PLATE 85 MAGAZINE PLUG RETAINER 86 MAGAZINA CAP SUPPORT 87 ACTION BAR 88 GAS PISTON SPRING 89 GAS PISTON 90 RUBBER GAS RING		
71 CARRIER LATCH PIN 72 HAMMER 73 HAMMER PLUNGER 74 HAMMER SPRING 75 TRIGGER ASSEMBLY PIN SLEEVE 76 TRIGGER ASSEMBLY PIN RETAINER 77 CARRIER LATCH PLUNGER 78 CARRIER LATCH SPRING 79 TRIGGER GUARD 80 SWIVEL STUD 81 SWIVEL STUD 81 SWIVEL STUD RETAINER 82 STOCK BOLT RECEIVER 84 PLATE 85 MAGAZINE PLUG RETAINER 86 MAGAZINA CAP SUPPORT 87 ACTION BAR 88 GAS PISTON SPRING 89 GAS PISTON 90 RUBBER GAS RING		
72 HAMMER 73 HAMMER PLUNGER 74 HAMMER SPRING 75 TRIGGER ASSEMBLY PIN SLEEVE 76 TRIGGER ASSEMBLY PIN RETAINER 77 CARRIER LATCH PLUNGER 78 CARRIER LATCH SPRING 79 TRIGGER GUARD 80 SWIVEL STUD 81 SWIVEL STUD RETAINER 82 STOCK BOLT RECEIVER 84 PLATE 85 MAGAZINE PLUG RETAINER 86 MAGAZINA CAP SUPPORT 87 ACTION BAR 88 GAS PISTON SPRING 89 GAS PISTON 90 RUBBER GAS RING		
73 HAMMER PLUNGER 74 HAMMER SPRING 75 TRIGGER ASSEMBLY PIN SLEEVE 76 TRIGGER ASSEMBLY PIN RETAINER 77 CARRIER LATCH PLUNGER 78 CARRIER LATCH SPRING 79 TRIGGER GUARD 80 SWIVEL STUD 81 SWIVEL STUD RETAINER 82 STOCK BOLT RECEIVER 84 PLATE 85 MAGAZINE PLUG RETAINER 86 MAGAZINA CAP SUPPORT 87 ACTION BAR 88 GAS PISTON SPRING 89 GAS PISTON 90 RUBBER GAS RING		
74 HAMMER SPRING 75 TRIGGER ASSEMBLY PIN SLEEVE 76 TRIGGER ASSEMBLY PIN RETAINER 77 CARRIER LATCH PLUNGER 78 CARRIER LATCH SPRING 79 TRIGGER GUARD 80 SWIVEL STUD 81 SWIVEL STUD RETAINER 82 STOCK BOLT RECEIVER 84 PLATE 85 MAGAZINE PLUG RETAINER 86 MAGAZINA CAP SUPPORT 87 ACTION BAR 88 GAS PISTON SPRING 89 GAS PISTON 90 RUBBER GAS RING		
75 TRIGGER ASSEMBLY PIN SLEEVE 76 TRIGGER ASSEMBLY PIN RETAINER 77 CARRIER LATCH PLUNGER 78 CARRIER LATCH SPRING 79 TRIGGER GUARD 80 SWIVEL STUD 81 SWIVEL STUD RETAINER 82 STOCK BOLT RECEIVER 84 PLATE 85 MAGAZINE PLUG RETAINER 86 MAGAZINA CAP SUPPORT 87 ACTION BAR 88 GAS PISTON SPRING 89 GAS PISTON 90 RUBBER GAS RING		
76 TRIGGER ASSEMBLY PIN RETAINER 77 CARRIER LATCH PLUNGER 78 CARRIER LATCH SPRING 79 TRIGGER GUARD 80 SWIVEL STUD 81 SWIVEL STUD RETAINER 82 STOCK BOLT RECEIVER 84 PLATE 85 MAGAZINE PLUG RETAINER 86 MAGAZINA CAP SUPPORT 87 ACTION BAR 88 GAS PISTON SPRING 89 GAS PISTON 90 RUBBER GAS RING		
77 CARRIER LATCH PLUNGER 78 CARRIER LATCH SPRING 79 TRIGGER GUARD 80 SWIVEL STUD 81 SWIVEL STUD RETAINER 82 STOCK BOLT RECEIVER 84 PLATE 85 MAGAZINE PLUG RETAINER 86 MAGAZINA CAP SUPPORT 87 ACTION BAR 88 GAS PISTON SPRING 89 GAS PISTON 90 RUBBER GAS RING		
78 CARRIER LATCH SPRING 79 TRIGGER GUARD 80 SWIVEL STUD 81 SWIVEL STUD RETAINER 82 STOCK BOLT RECEIVER 84 PLATE 85 MAGAZINE PLUG RETAINER 86 MAGAZINA CAP SUPPORT 87 ACTION BAR 88 GAS PISTON SPRING 89 GAS PISTON 90 RUBBER GAS RING		
80 SWIVEL STUD 81 SWIVEL STUD RETAINER 82 STOCK BOLT RECEIVER 84 PLATE 85 MAGAZINE PLUG RETAINER 86 MAGAZINA CAP SUPPORT 87 ACTION BAR 88 GAS PISTON SPRING 89 GAS PISTON 90 RUBBER GAS RING		
81 SWIVEL STUD RETAINER 82 STOCK BOLT RECEIVER 84 PLATE 85 MAGAZINE PLUG RETAINER 86 MAGAZINA CAP SUPPORT 87 ACTION BAR 88 GAS PISTON SPRING 89 GAS PISTON 90 RUBBER GAS RING		
82 STOCK BOLT RECEIVER 84 PLATE 85 MAGAZINE PLUG RETAINER 86 MAGAZINA CAP SUPPORT 87 ACTION BAR 88 GAS PISTON SPRING 89 GAS PISTON 90 RUBBER GAS RING	80	
84 PLATE 85 MAGAZINE PLUG RETAINER 86 MAGAZINA CAP SUPPORT 87 ACTION BAR 88 GAS PISTON SPRING 89 GAS PISTON 90 RUBBER GAS RING		
85 MAGAZINE PLUG RETAINER 86 MAGAZINA CAP SUPPORT 87 ACTION BAR 88 GAS PISTON SPRING 89 GAS PISTON 90 RUBBER GAS RING		
86 MAGAZINA CAP SUPPORT 87 ACTION BAR 88 GAS PISTON SPRING 89 GAS PISTON 90 RUBBER GAS RING		
87 ACTION BAR 88 GAS PISTON SPRING 89 GAS PISTON 90 RUBBER GAS RING		
88 GAS PISTON SPRING 89 GAS PISTON 90 RUBBER GAS RING		
89 GAS PISTON 90 RUBBER GAS RING		
90 RUBBER GAS RING		
	91	EXTRACTOR SPRING
93 LOCKING BLOCK		

USAGE OF CHOKE TUBES

The choke is what controls the openness or tightness of the pattern of your shotgun. The chart below lists the choke available (from open to tight), and the corresponding marks that indicate the choke of your specific shotgun.



Never fire or run gun cleaning tools through a barrel that uses choke tubes without having a choke tube installed. The threads of the choke tube and the internal threads of the barrel should be cleaned after each use and before installation of the tube.

To install a tube, insert the tube into the barrel and tighten with your fingers. Once the tube is finger tightened, tighten with the appropriate choke-tube wrench until the tube is snug. **DO NOT over tighten or forcefully tighten with wrench.**

USAGE OF STEEL SHOT

The choke (bore constriction) in all modern shotguns has been established based on the pattern performance of shot shells loaded with lead shot. When using the steel shot shells, you will notice a different performance in pattern density versus the established lead shot pattern, because the steel shot is harder and lighter than lead shot.

You should be aware of the following differences and cautions: Never shoot steel shot loads in a full choked barrel or full choke tubed barrel. To do so may cause the barrel to swell or rupture. In general, steel shot fired with a modified choke will produce the equivalent of a lead full choke pattern. This will be true of all steel shot sizes up to and including no. 2. The established improved cylinder chokes will produce the equivalent of a (lead) modified choke pattern.

All steel shot sized larger than no. 2, and including special sized such as -F-, "T", etc., should be used only with improved cylinder chokes. These steel shot sized, when used in improved cylinder chokes, will produce patterns equivalent to (lead) full choke patterns. The established cylinder choke or bore will produce the equivalent of a modified (lead) pattern.

INSTALLATION OF MAGAZINE PLUG

Some Countries and local hunting regulation may require that a shotgun be limited to a maximum shell capacity of three (3) rounds (1 in chamber and 2 in the magazine).

Your shotgun may be packed with a magazine plug for this purpose OR may come the limiter plug already in the magazine tube. Please follow the instruction below to install or uninstall

Installation:

- 1. Remove the forend screw cap, the forend and the barrel.
- 2. At the threaded end of the magazine tube (where the forend screw cap fits) you will locate a black snap ring.
- 3. A large blade screw driver should be used to remove the snap ring.

 CAUTION: The snap ring will be under pressure from the magazine spring.

 Do not remove the snap ring in a manner where the ring could fly out and strike you or anyone else causing injury, particularly to the eye.
- **4.** Compress the magazine spring into the magazine tube, and insert the magazine plug (small end first). Push the magazine plug and insert the snap ring so the snap ring end is flush with the end of the tube.

MAINTENANCE AND CLEANING

<u>Caution:</u> Make sure the gun is UNLOADED and take help from an experienced person or gunsmith if you do not have self confidence of a true maintenance.

- 1. Make sure the broad, polished finely fitted mating surface of the breech block and receiver is especially clean and lightly oiled with high quality gun oil. Do not use silicone or lanolin.
- 2. Run an oil patch through the bore with a cleaning rod starting from the breech end. To prevent leading, use a cleaning solvent and brass brush to clean the bore periodically. Follow this cleaning with one or two clean oil patches. Important: If your gun is equipped with choke tubes, do not use a brass brush to clean the barrels without having a choke tube installed. Barrels that utilize choke tubes must also have the choke tubes removed to clean and oil the threads inside the barrel and the choke tubes themselves. This will protect the threads and prevent dirt build up that can cause tubes to become difficult to remove.

Do not over tighten choke tubes. Wipe all exposed metal surface with an oiled cloth before storing. Do not squirt or pour oil into the inside mechanism because it may hamper proper functioning. After extended periods of heavy use, your gun should be taken to a qualified gunsmith to have the action disassembled for professional cleaning and lubrication.

3. Care for your wood stock and forearm the same way you would a piece of furniture with the same finish





WARRANTY AND AFTER SALES SERVICE

Pardus agrees to service its products thru your country importer free of charge for defects in materials and workmanship in accordance with the service agreement listed below.

The obligation of **Pardus** under this agreement is limited to the repair or replacement of unserviceable parts and does not cover any incidental or consequential damages. Other than the express warranty contained herein **Pardus** makes no warranties, express or implied.

Pardus will repair or replace any unserviceable part(s) for one (1) year from date of purchase in accordance with the above warranty statement provided your prduct had not been altered, abused, willfully damaged, or damaged by overpressure ammunition. And further guarantees to supply parts with its cost for following additional 5 years.

This agreement is not transferable; its benefits apply only to the original purchaser. To obtain free service during the time this agreement is in effect, make sure your product is unloaded, and send it to your **Country Importer**. If you do not know the importer and would like us to track for you, please provide us your country information and the serial number of your gun. This agreement and the warranties contained herein are void if you are not the licenced owner of the gun.







PARDUS SAVUNMA VE AV SANAYI ITHALAT VE IHRACAT LTD. STI. Mehmet Akif Mah. Gunyamac Cad. Ilkbahar Sk. No: 5/4 34782 Cekmekoy, Istanbul, TURKIYE P: +90 216 642 2353 PBX

F: +90 216 642 2360 www.pardusarms.com pardusarms@pardusarms.com